

Service Manual

MF4300 Series

Canon

Application

This manual has been issued by Canon Inc. for qualified persons to learn technical theory, installation, maintenance, and repair of products. This manual covers all localities where the products are sold. For this reason, there may be information in this manual that does not apply to your locality.

Corrections

This manual may contain technical inaccuracies or typographical errors due to improvements or changes in products. When changes occur in applicable products or in the contents of this manual, Canon will release technical information as the need arises. In the event of major changes in the contents of this manual over a long or short period, Canon will issue a new edition of this manual.

The following paragraph does not apply to any countries where such provisions are inconsistent with local law.

Trademarks

The product names and company names used in this manual are the registered trademarks of the individual companies.

Copyright

This manual is copyrighted with all rights reserved. Under the copyright laws, this manual may not be copied, reproduced or translated into another language, in whole or in part, without the written consent of Canon Inc.

COPYRIGHT © 2001 CANON INC.

Printed in Japan

Caution

Use of this manual should be strictly supervised to avoid disclosure of confidential information.

Symbols Used

This documentation uses the following symbols to indicate special information:

Symbol	Description
	Indicates an item of a non-specific nature, possibly classified as Note, Caution, or Warning.
	Indicates an item requiring care to avoid electric shocks.
	Indicates an item requiring care to avoid combustion (fire).
	Indicates an item prohibiting disassembly to avoid electric shocks or problems.
	Indicates an item requiring disconnection of the power plug from the electric outlet.
 Memo	Indicates an item intended to provide notes assisting the understanding of the topic in question.
 REF.	Indicates an item of reference assisting the understanding of the topic in question.
	Provides a description of a service mode.
	Provides a description of the nature of an error indication.

Introduction

The following rules apply throughout this Service Manual:

1. Each chapter contains sections explaining the purpose of specific functions and the relationship between electrical and mechanical systems with reference to the timing of operation.

In the diagrams,  represents the path of mechanical drive; where a signal name accompanies the symbol, the arrow  indicates the direction of the electric signal.

The expression "turn on the power" means flipping on the power switch, closing the front door, and closing the delivery unit door, which results in supplying the machine with power.

2. In the digital circuits, '1' is used to indicate that the voltage level of a given signal is "High", while '0' is used to indicate "Low". (The voltage value, however, differs from circuit to circuit.) In addition, the asterisk (*) as in "DRMD*" indicates that the DRMD signal goes on when '0'.

In practically all cases, the internal mechanisms of a microprocessor cannot be checked in the field. Therefore, the operations of the microprocessors used in the machines are not discussed: they are explained in terms of from sensors to the input of the DC controller PCB and from the output of the DC controller PCB to the loads.

The descriptions in this Service Manual are subject to change without notice for product improvement or other purposes, and major changes will be communicated in the form of Service Information bulletins.

All service persons are expected to have a good understanding of the contents of this Service Manual and all relevant Service Information bulletins and be able to identify and isolate faults in the machine."

Contents

Chapter 1 Introduction

1.1 Product Specifications	1- 1
1.1.1 Names of Parts	1- 1
1.1.1.1 External View	1- 1
1.1.1.2 Section View (Host Machine)	1- 4
1.1.1.3 Section View (ADF/DADF)	1- 5
1.1.1.4 Control panel	1- 6
1.1.2 Safety	1- 7
1.1.2.1 Safety of the Host Machine's Laser Mechanism	1- 7
1.1.2.2 CDRH Regulations	1- 7
1.1.2.3 Handling of the Laser Assembly	1- 8
1.1.2.4 Safety of the Toner	1- 8
1.1.2.5 Fire Attention	1- 8
1.1.2.6 Points no Note when Replacing / Disposing the Lithium Battery	1- 8
1.1.3 Product Specifications	1- 9
1.1.3.1 Host Machine Specifications	1- 9
1.1.3.2 ADF/DADF Specifications	1- 10
1.1.3.3 FAX Specifications	1- 10
1.1.4 Function List	1- 11
1.1.4.1 Scanning Range (ADF/DADF)	1- 11
1.1.4.2 Scanning Range (copyboard)	1- 11
1.1.4.3 Recording Range (Copy)	1- 12
1.1.4.4 Recording Range (Reception)	1- 13
1.1.4.5 Recording Range (Printer)	1- 13
1.1.4.6 Operation Environment of the Printer Driver	1- 14
1.1.4.7 Network Specifications	1- 14

Chapter 2 Basic Operation

2.1 Construction	2- 1
2.1.1 Function Configuration	2- 1
2.2 Basic Sequence	2- 1
2.2.1 Basic Operation Sequence	2- 1

Chapter 3 Original Exposure System

3.1 Basic Construction	3- 1
3.1.1 Specifications / Control / Function List	3- 1
3.1.2 Major Components	3- 1
3.2 Parts Replacement Procedure	3- 3
3.2.1 Scanner Unit	3- 3
3.2.1.1 Preparation for Removing the Scanner Unit	3- 3
3.2.1.2 Removing the Scanner Unit	3- 3
3.2.2 Reader Motor	3- 3
3.2.2.1 Preparation for Removing the Flat Bed Motor	3- 3
3.2.2.2 Removing the Flat Bed Motor	3- 3
3.2.3 Contact Sensor	3- 5
3.2.3.1 Removing the Contact Sensor	3- 5

Chapter 4 Original Feeding System

4.1 Basic Operation	4- 1
4.1.1 Basic Operation (ADF)	4- 1

Contents

4.1.2 Basic Operation (DADF)	4- 2
4.1.3 Original Detection	4- 4
4.2 Detection Jams.....	4- 5
4.2.1 Jam Detection	4- 5
4.3 ADF/DADF	4- 6
4.3.1 Pick-up Roller.....	4- 6
4.3.1.1 Removing the ADF Pickup Roller	4- 6
4.3.1.2 Removing the DADF Pickup Roller Unit	4- 6
4.3.2 ADF Motor.....	4- 8
4.3.2.1 Preparation for Removing the ADF/DADF Motor.....	4- 8
4.3.2.2 Removing the ADF Motor	4- 8
4.3.2.3 Removing the DADF Motor.....	4- 9
4.3.3 Separation Pad	4- 12
4.3.3.1 Removing the ADF Separation Pad.....	4- 12
4.3.3.2 Removing the DADF Separation Pad	4- 12

Chapter 5 Laser Exposure

5.1 Overview/Configuration	5- 1
5.1.1 Overview	5- 1
5.2 Controlling the Laser Activation Timing	5- 2
5.2.1 Laser ON / OFF Control.....	5- 2
5.3 Controlling the Intensity of Laser Light	5- 2
5.3.1 Auto Photoelectric Current Control (APC)	5- 2
5.4 Controlling the Laser Scanner Motor.....	5- 4
5.4.1 Overview	5- 4
5.4.2 Scanner Motor Speed Control	5- 4
5.4.3 Detection of Fault of the Scanner Motor	5- 4
5.5 Parts Replacement Procedure	5- 5
5.5.1 Laser/Scanner Unit	5- 5
5.5.1.1 Preparation for Removing the Laser Scanner Unit	5- 5
5.5.1.2 Removing the Laser Scanner Unit	5- 5

Chapter 6 Image Formation

6.1 Overview/Configuration	6- 1
6.1.1 Configuration.....	6- 1
6.1.2 Print Process.....	6- 1
6.2 Driving and Controlling the High-Voltage System	6- 2
6.2.1 Generation of Transfer Charging Bias	6- 2
6.3 Toner Cartridge	6- 3
6.3.1 Toner Level Detection	6- 3
6.4 Parts Replacement Procedure	6- 4
6.4.1 Transfer Charging Roller.....	6- 4
6.4.1.1 Removing the Transfer Charging Roller	6- 4

Chapter 7 Pickup and Feed System

7.1 Overview/Configuration	7- 1
7.1.1 Overview	7- 1
7.2 Other Control.....	7- 2
7.2.1 Overview	7- 2
7.3 Detection Jams.....	7- 3
7.3.1 Jam Detection Outline.....	7- 3
7.3.1.1 Overview	7- 3
7.3.2 Delay Jams	7- 3
7.3.2.1 Pickup Delay Jam	7- 3

7.3.2.2 Delivery Delay Jam	7- 3
7.3.3 Stationary Jams	7- 3
7.3.3.1 Pickup Stationary Jam	7- 3
7.3.3.2 Delivery Stationary Jam	7- 3
7.3.4 Other Jams	7- 3
7.3.4.1 Door Open Jam	7- 3
7.3.4.2 Wrapping Jam	7- 4
7.3.4.3 Residual Jam at Startup	7- 5
7.4 Duplex Unit	7- 6
7.4.1 Overview	7- 6
7.5 Parts Replacement Procedure	7- 7
7.5.1 Main Motor	7- 7
7.5.1.1 Preparation for Removing Main Motor	7- 7
7.5.1.2 Removing Main Motor	7- 7
7.5.2 Separation Pad	7- 7
7.5.2.1 Preparation for Removing Separation Pad	7- 7
7.5.2.2 Removing Separation Pad	7- 7
7.5.3 Pickup Roller	7- 7
7.5.3.1 Removing Pickup Roller	7- 7

Chapter 8 Fixing System

8.1 Overview/Configuration	8- 1
8.1.1 Specification/Control/Function List	8- 1
8.1.2 Overview	8- 1
8.2 Various Control Mechanisms	8- 3
8.2.1 Controlling the Temperature of the Fixing Unit	8- 3
8.2.1.1 Fixing Temperature Control	8- 3
8.3 Protection Function	8- 4
8.3.1 Protection Function	8- 4
8.4 Parts Replacement Procedure	8- 6
8.4.1 Fixing Unit	8- 6
8.4.1.1 Preparation for Removing Fixing Assembly	8- 6
8.4.1.2 Removing Fixing Assembly	8- 6
8.4.2 Fixing Film Unit	8- 6
8.4.2.1 Preparation for Removing Fixing Film Unit	8- 6
8.4.2.2 Removing Fixing Film Unit	8- 7

Chapter 9 External and Controls

9.1 Control Panel	9- 1
9.1.1 Outline	9- 1
9.2 Power Supply	9- 1
9.2.1 Power Supply	9- 1
9.2.1.1 Power Supply Route	9- 1
9.2.2 Protection Function	9- 1
9.2.2.1 Protecting Function	9- 1
9.3 Parts Replacement Procedure	9- 2
9.3.1 Front Cover	9- 2
9.3.1.1 Removing the Front Cover	9- 2
9.3.2 Rear Cover	9- 2
9.3.2.1 Preparation for Removing the Rear Cover	9- 2
9.3.2.2 Removing the Rear Cover	9- 2
9.3.3 Right Cover	9- 2
9.3.3.1 Removing the Right Cover	9- 2
9.3.4 Left Cover	9- 3
9.3.4.1 Removing the Left Cover	9- 3
9.3.5 Upper Cover	9- 4

Contents

9.3.5.1 Preparation for Removing the Upper Cover.....	9- 4
9.3.5.2 Removing the Upper Cover	9- 4
9.3.6 Cartridge Cover.....	9- 4
9.3.6.1 Preparation for Removing the Printer Cover.....	9- 4
9.3.6.2 Removing the Printer Cover.....	9- 4
9.3.7 Operation Panel Unit.....	9- 4
9.3.7.1 Removing the Control Panel Unit.....	9- 4
9.3.8 SCNT Board.....	9- 5
9.3.8.1 Preparation for Removing the SCNT PCB.....	9- 5
9.3.8.2 Removing the SCNT PCB.....	9- 5
9.3.8.3 Actions At Replacing the SCNT PCB.....	9- 5
9.3.9 DCNT Board	9- 6
9.3.9.1 Preparation for Removing the DCNT PCB.....	9- 6
9.3.9.2 Removing the DCNT PCB	9- 6
9.3.10 Power Supply PCB.....	9- 7
9.3.10.1 Preparation for Removing the Power Supply PCB.....	9- 7
9.3.10.2 Removing the Power Supply PCB	9- 7
9.3.11 High-voltage Power Supply Board	9- 7
9.3.11.1 Preparation for Removing the High Voltage PCB	9- 7
9.3.11.2 Removing the High Voltage PCB	9- 8

Chapter 10 Maintenance and Inspection

10.1 Periodically Replaced Parts.....	10- 1
10.1.1 Periodically Replaced Parts	10- 1
10.2 Periodical Service	10- 1
10.2.1 Periodically Service Items	10- 1
10.3 Cleaning	10- 1
10.3.1 Cleaning Items	10- 1
10.3.2 Cleaning Method (External Covers)	10- 1
10.3.3 Cleaning Method (Reader Unit)	10- 2
10.3.4 Cleaning Method (Pressure Roller).....	10- 3

Chapter 11 Measurement and Adjustments

11.1 Basic Adjustments	11- 1
11.1.1 Paper Margin Adjustment.....	11- 1
11.1.2 Reading Adjustment.....	11- 1
11.1.3 Print Adjustment.....	11- 2

Chapter 12 Correcting Faulty Images

12.1 Outline of Electrical Components	12- 1
12.1.1 Clutch/Solenoid/Motor/Fan.....	12- 1
12.1.1.1 List of Solenoids/Motors.....	12- 1
12.1.2 Sensor.....	12- 3
12.1.2.1 List of Sensors	12- 3
12.1.3 PCBs	12- 5
12.1.3.1 List of PCBs	12- 5

Chapter 13 Error Code

13.1 Error Code	13- 1
13.1.1 Error Code Outline	13- 1
13.1.2 Error Code	13- 1

Chapter 14 Service Mode

14.1 Outline	14- 1
14.1.1 Setting Service Data	14- 1
14.1.2 How to Activate Service Mode.....	14- 1
14.1.3 Service Data Menu	14- 2
14.2 Service Soft Switch Settings (SSSW)	14- 4
14.2.1 Outline	14- 4
14.2.1.1 SOFT SWITCH Explained.....	14- 4
14.2.2 SSSW-SW02:	14- 6
14.2.2.1 Function List.....	14- 6
14.2.2.2 Bit 2 and 3 Elaborated.....	14- 6
14.2.2.3 Bit 5 Elaborated.....	14- 6
14.2.3 SSSW-SW04	14- 6
14.2.3.1 Function List.....	14- 6
14.2.3.2 Bit 8 Elaborated.....	14- 7
14.2.4 SSSW-SW10	14- 7
14.2.4.1 Function List.....	14- 7
14.2.4.2 Bit 1 Elaborated.....	14- 8
14.2.4.3 Bit 2 Elaborated.....	14- 8
14.2.5 SSSW-SW16	14- 8
14.2.5.1 Function List.....	14- 8
14.2.6 SSSW-SW20	14- 8
14.2.6.1 ã@ñalóo.....	14- 8
14.2.6.2 Bit6ÅA7ÅA8ÇÃèçP.....	14- 8
14.2.7 SSSW-SW21	14- 9
14.2.7.1 Function List.....	14- 9
14.2.7.2 Bit 4 Elaborated.....	14- 9
14.2.8 SSSW-SW23	14- 9
14.2.8.1 ã@ñalóo.....	14- 9
14.2.8.2 Bit5ÅA6ÇÃèçP	14- 10
14.2.8.3 Bit7ÅA8ÇÃèçP	14- 10
14.2.9 SSSW-SW30	14- 10
14.2.9.1 Function List.....	14- 10
14.2.9.2 Bit 7 and 8 Elaborated.....	14- 11
14.2.10 SSSW-SW37	14- 11
14.2.10.1 Function List	14- 11
14.2.10.2 Bit 1 to Bit 6 Elaborated.....	14- 11
14.2.11 SSSW-SW39	14- 12
14.2.11.1 Function List	14- 12
14.2.11.2 Bit 7 Elaborated.....	14- 12
14.2.11.3 Bit 8 Elaborated.....	14- 13
14.2.12 SSSW-SW51	14- 13
14.2.12.1 Function List	14- 13
14.2.12.2 Bit 3 and 4 Elaborated.....	14- 13
14.2.13 SSSW-SW54	14- 13
14.2.13.1 Function List	14- 13
14.2.13.2 Bit 6 and 7 Elaborated.....	14- 14
14.3 Test Mode (TEST)	14- 15
14.3.1 Overview.....	14- 15
14.3.1.1 Outline of test mode	14- 15
14.3.1.2 Test mode menu	14- 15
14.3.2 Faculty Test	14- 16
14.3.2.1 Print test pattern	14- 16
14.3.2.2 êMçÜEeÉXÉg	14- 16
14.3.2.3 Sensor test	14- 16
14.3.2.4 Key test	14- 16

Chapter 15 Service Tools

15.1 Service Tools	15- 1
--------------------------	-------

Contents

15.1.1 Solvents / Lubricants Table.....	15- 1
---	-------

Chapter 1 Introduction

Contents

1.1 Product Specifications.....	1-1
1.1.1 Names of Parts	1-1
1.1.1.1 External View.....	1-1
1.1.1.2 Section View (Host Machine).....	1-4
1.1.1.3 Section View (ADF/DADF)	1-5
1.1.1.4 Control panel.....	1-6
1.1.2 Safety	1-7
1.1.2.1 Safety of the Host Machine's Laser Mechanism.....	1-7
1.1.2.2 CDRH Regulations.....	1-7
1.1.2.3 Handling of the Laser Assembly.....	1-8
1.1.2.4 Safety of the Toner.....	1-8
1.1.2.5 Fire Attention	1-8
1.1.2.6 Points no Note when Replacing / Disposing the Lithium Battery	1-8
1.1.3 Product Specifications	1-9
1.1.3.1 Host Machine Specifications.....	1-9
1.1.3.2 ADF/DADF Specifications	1-10
1.1.3.3 FAX Specifications	1-10
1.1.4 Function List	1-11
1.1.4.1 Scanning Range (ADF/DADF)	1-11
1.1.4.2 Scanning Range (copyboard)	1-11
1.1.4.3 Recording Range (Copy).....	1-12
1.1.4.4 Recording Range (Reception)	1-13
1.1.4.5 Recording Range (Printer)	1-13
1.1.4.6 Operation Environment of the Printer Driver	1-14
1.1.4.7 Network Specifications	1-14


1.1 Product Specifications

1.1.1 Names of Parts

1.1.1.1 External View

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

Front View (Body)(In the case of ADF)

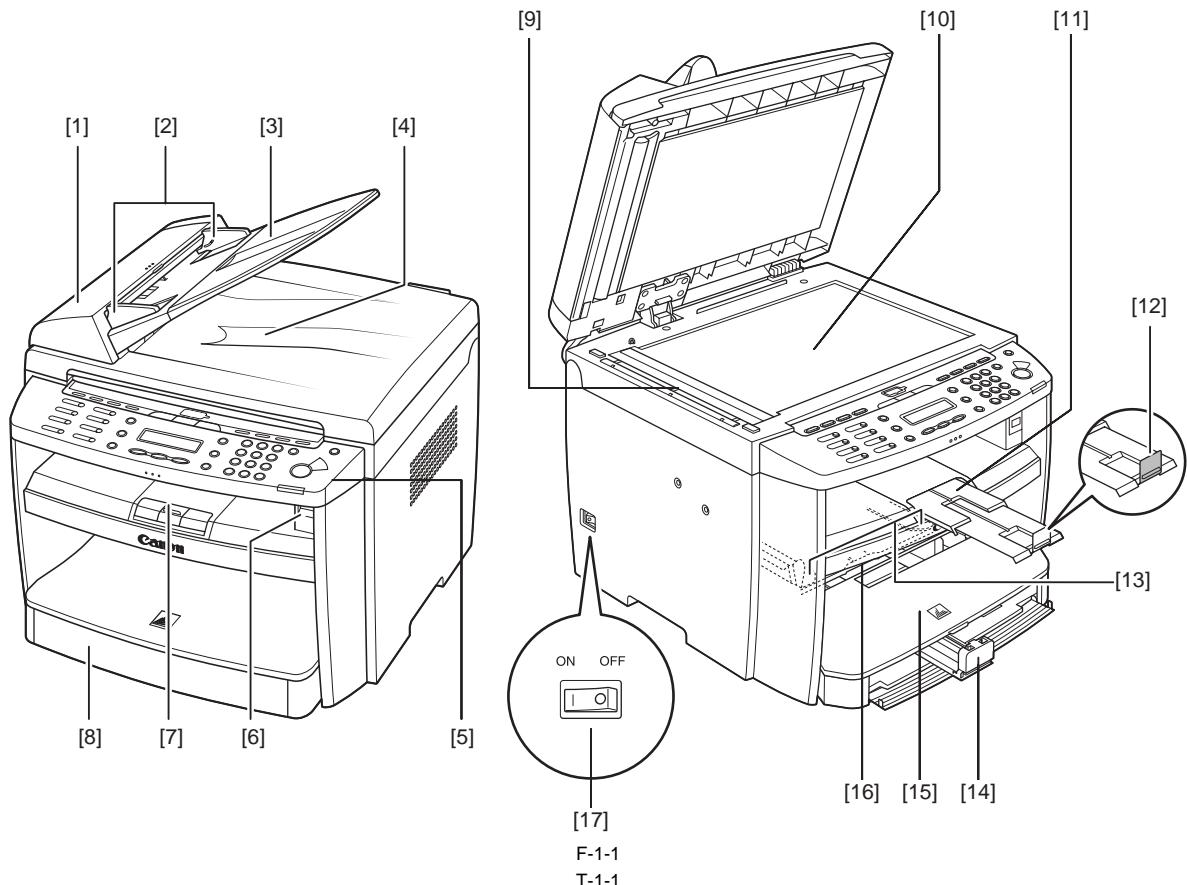

[1] ADF (Automatic Document Feeder)

[2] Slide Guides

[3] Document feeder tray

[4] Document delivery tray

[5] Operation panel

[6] USB memory port

[7] Output tray

[8] Paper cassette

[9] Scanning area

[10] Platen glass

[11] Output tray extension

[12] Paper stopper

[13] Slide guides for multi-purpose tray

[14] Paper guide rail


[15] Dust cover

[16] Multi-purpose tray

[17] Main power switch

F-1-1
T-1-1


Rear View (Body)(In the case of ADF)

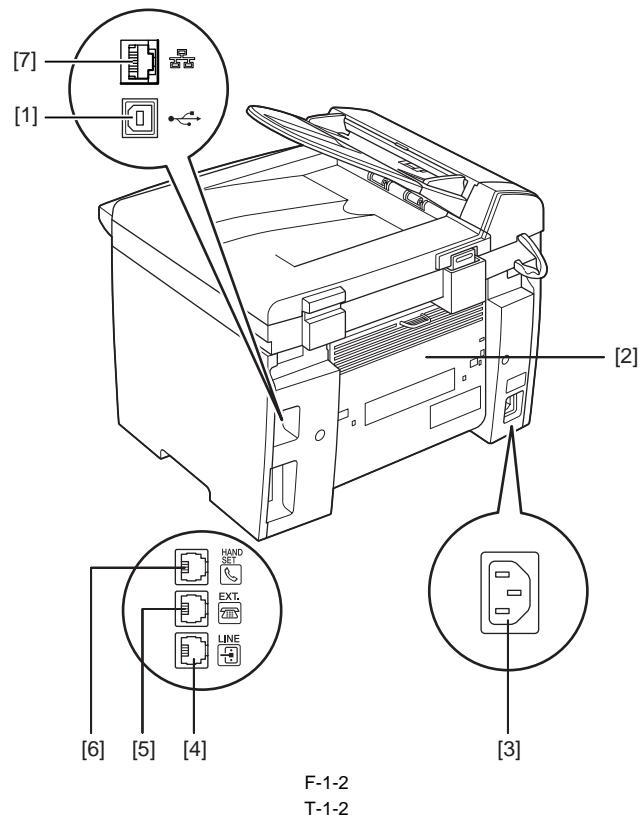

- [1] USB port
- [2] Rear cover
- [3] Power socket
- [4] Telephone line jack

- [5] External device jack
- [6] Handset jack
- [7] Ethernet port

Front View (Body)(In the case of DADF)

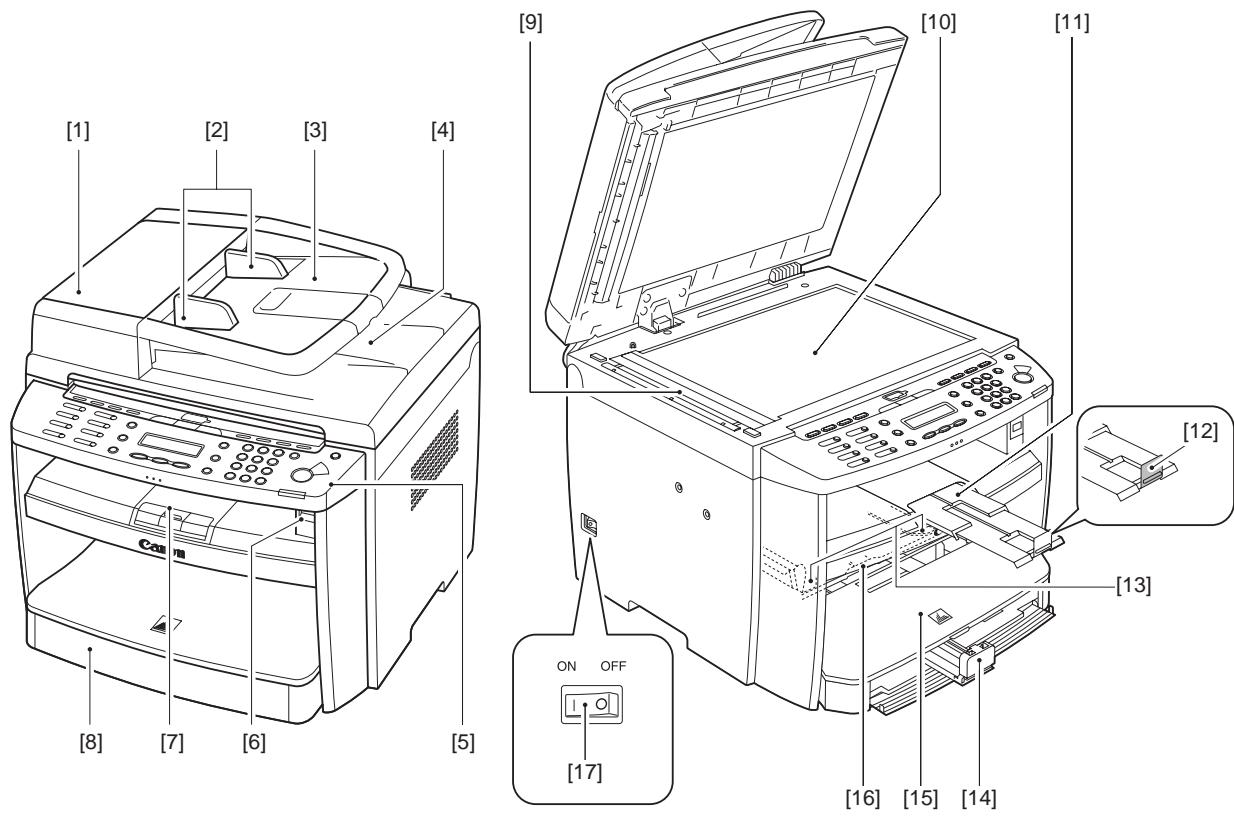

[1] DADF (Duplex Automatic Document Feeder)

[2] Slide Guides

[3] Document feeder tray

[4] Document delivery tray

[5] Operation panel

[6] USB memory port

[7] Output tray

[8] Paper cassette

[9] DADF Scanning area

[10] Platen glass

[11] Output tray extension

[12] Paper stopper

[13] Slide guides for multi-purpose tray

[14] Paper guide rail

[15] Dust cover


[16] Multi-purpose tray

[17] Main power switch

F-1-3

T-1-3

Rear View (Body)(In the case of DADF)

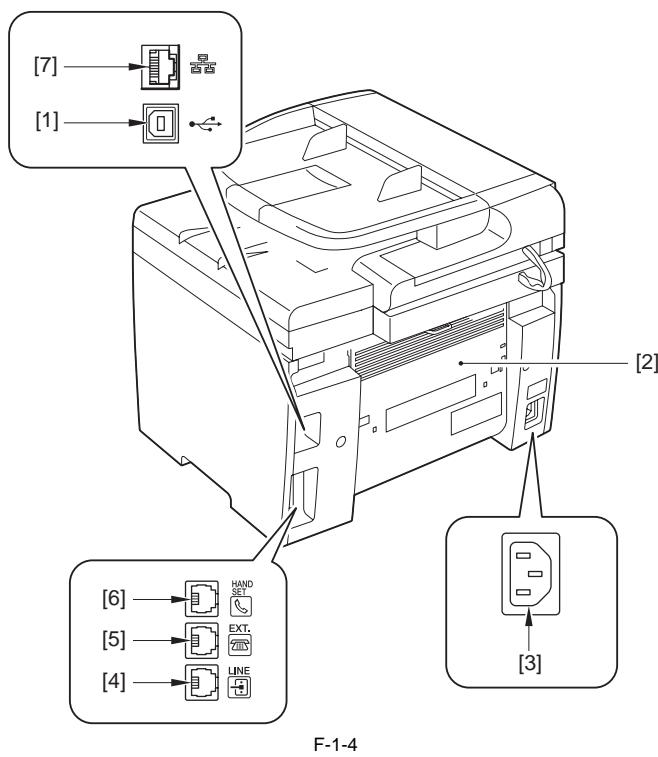

[1] USB port

[2] Rear cover

[3] Power socket

[4] Telephone line jack


[5] External device jack

[6] Handset jack

[7] Ethernet port

1.1.1.2 Section View (Host Machine)

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

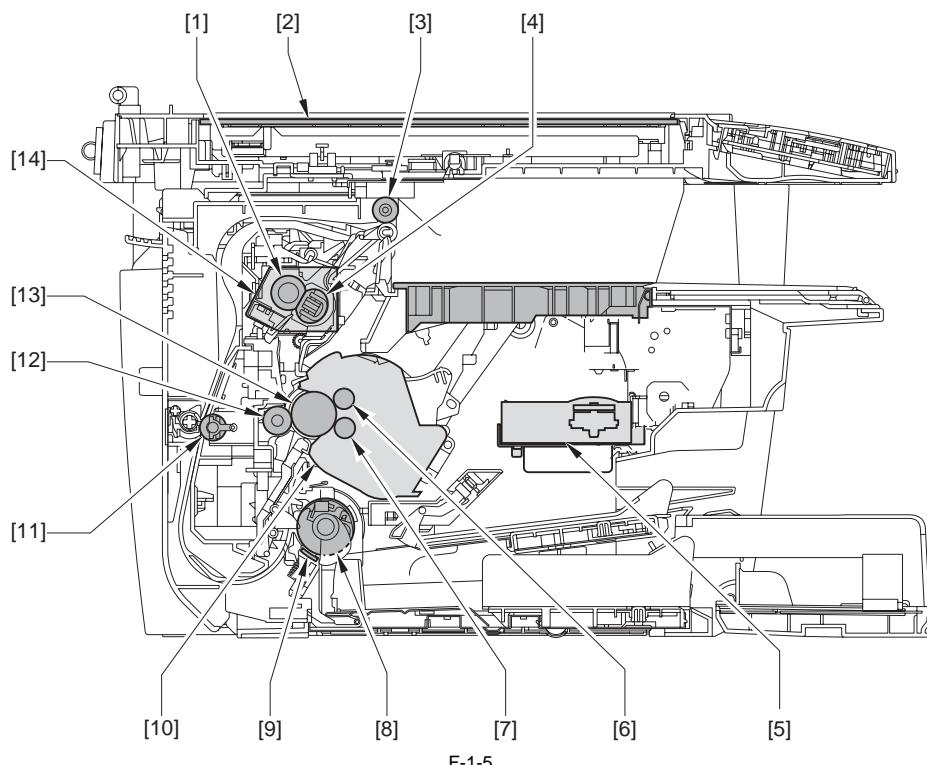


[1]	pressure roller	[8]	pick-up roller
[2]	copyboard glass (scanning glass)	[9]	separation pad

[3]	delivery roller	[10]	cartridge
[4]	fixing film unit	[11]	duplexing feeding roller
[5]	laser scanner unit	[12]	transfer charging roller
[6]	primary charging roller	[13]	photosensitive drum
[7]	developing cylinder	[14]	fixing unit

1.1.1.3 Section View (ADF/DADF)


i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

ADF Section view

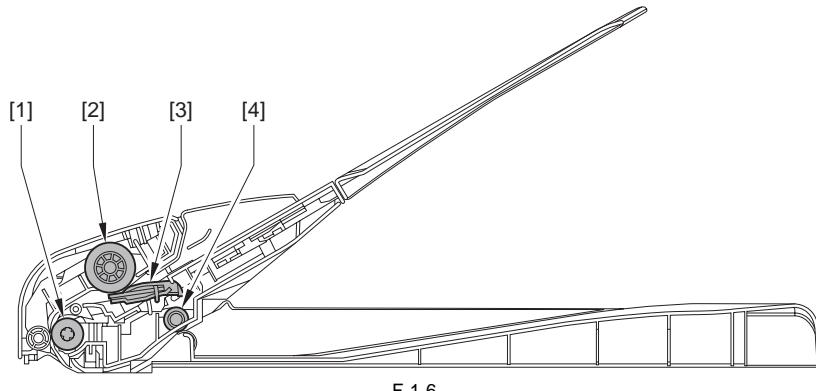

- [1] registration roller
- [2] pickup roller
- [3] separation pad
- [4] delivery roller


DADF Section View

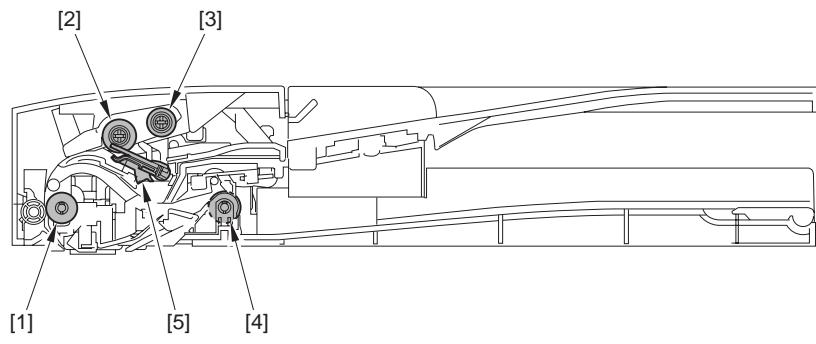


- [1] registration roller
- [2] separation roller
- [3] pickup roller
- [4] separation pad
- [5] delivery roller

1.1.1.4 Control panel

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

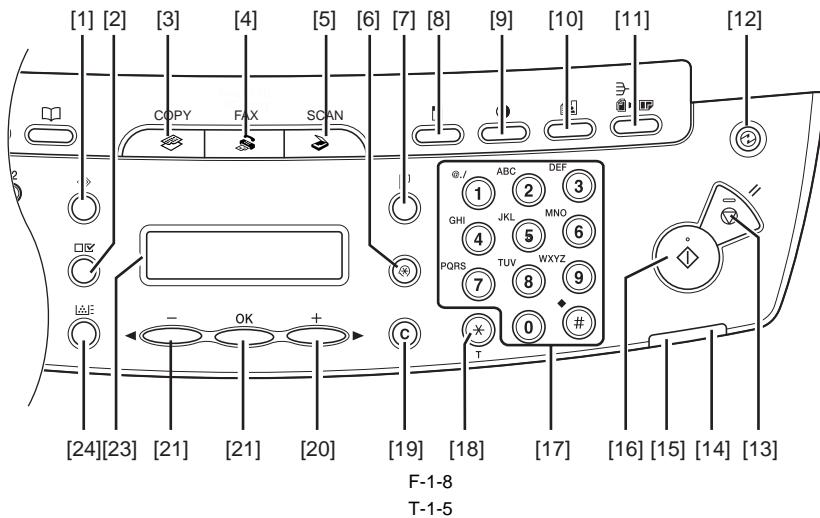

- | | |
|--------------------------------|--------------------------------|
| [1] [System Monitor] key | [13] [Stop/Reset] key |
| [2] [View Settings] key | [14] Error indicator |
| [3] [COPY] key | [15] Processing/Data indicator |
| [4] [SEND/FAX] key | [16] [Start] key |
| [5] [SCAN] key | [17] Numeric key |
| [6] [Additional Functions] key | [18] [Tone] key |
| [7] [2-Sided] key | [19] [Clear] key |
| [8] [Enlarge/Reduce] key | [20] [+] key |
| [9] [Density] key | [21] [OK] key |
| [10] [Image Quality] key | [22] [-] key |
| [11] [Collate/2 on 1] key | [23] LCD display |
| [12] [Energy Saver] key | [24] [Toner Gauge] key |

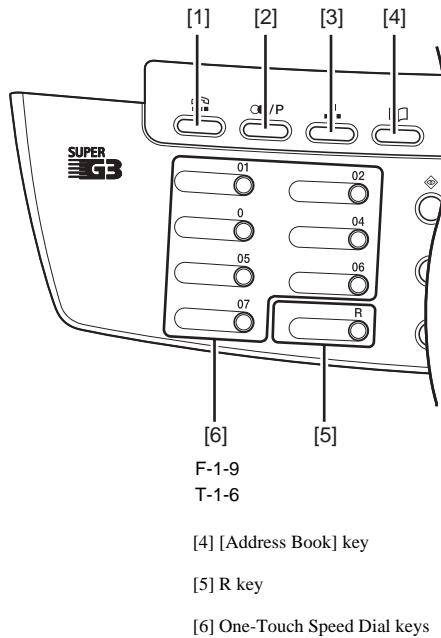

1.1.2 Safety

1.1.2.1 Safety of the Host Machine's Laser Mechanism

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn


Laser radiation can prove to be harmful to the human body. The host machine's laser scanning system is completely sealed by means of a protective housing and external covers so that its light will not leak outside the host machine as long as the host machine is used normally.

1.1.2.2 CDRH Regulations

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

The Center for Devices and Radiological Health (CDRH) of the US Food and Drug Administrator put into forth regulations that relate to laser products on August 2nd, 1976.

These regulations apply to laser products produced on and after August 1st, 1976, and prohibit the sale of laser products without certification. The following labels certify compliance with the CDRH regulations, and must be attached to all laser products that are sold in the US.

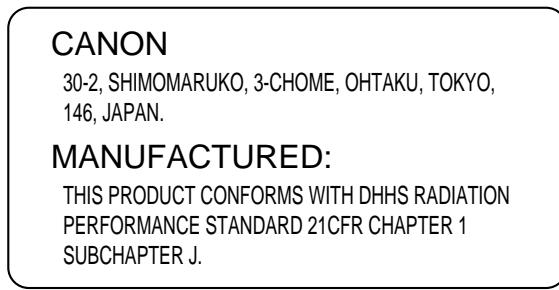


F-1-10

1.1.2.3 Handling of the Laser Assembly

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

When performing servicing work around the laser scanner unit of this machine, be sure not to insert a highly reflective tool such as a driver directly into the laser light path. Also be sure to take off a watch or ring, etc. during servicing work. (Otherwise, the reflected laser beam may enter the eye.) The color of the laser light for this machine is red. The labels [1] and [2] shown in the figure below are attached on the covers where the laser light may be reflected. Further, no adjustment can be made to the laser scanner unit of this machine in the field.

The label [1] shown in the figure below is attached on the cover of the laser scanner assembly.

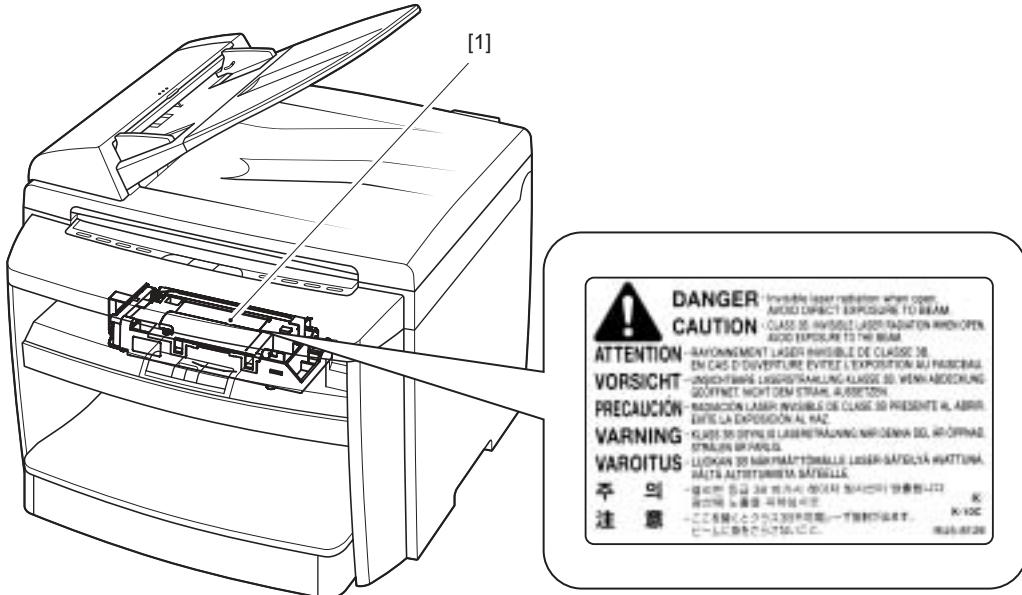

F-1-11

1.1.2.4 Safety of the Toner

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

Toner in General

Toner is a non-toxic material made up of plastic, iron, and small amounts of dye.



Be sure not to throw toner into the fire. Doing so may cause an explosion.

How to handle the toner adhered

1. When toner is adhered to the skin or clothing, wipe it off the skin or clothing by a dry tissue and wash the skin or clothing with water.
2. If you use hot water, toner is turned into gel and soaks into clothing. Under such a condition, toner cannot be removed.
3. Do not make toner come into contact with a vinyl material because they tend to react with each other.

1.1.2.5 Fire Attention

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

It is dangerous to throw the parts that include combustible materials such as lithium battery and toner cartridge etc., into fire. Any used battery must always be disposed according to the appropriate local regulations.

1.1.2.6 Points no Note when Replacing / Disposing the Lithium Battery

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn



There is a risk of explosion if the battery is replaced with an incorrect type.
 Be sure to discard the used battery following the instruction in the manual.

1.1.3 Product Specifications

1.1.3.1 Host Machine Specifications

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

Copyboard	Fixed
Body	Desktop (ADF standard type:MF4130/MF4150 only)
Light source type	LED
Image reading method	Contact Sensor Reading Method
Photosensitive medium	OPD drum
Reproduction method	Indirect electrostatic copying method
Exposure method	Semiconductor laser
Charging method	Roller contact charging method
Development method	Dry system - element jumping development method
Transfer method	Roller transfer method
Separation method	Electrostatic separation (neutralizing needle) and curvature separation
Pickup method	Cassette pick-up: 1 cassette Manual feeding pick-up
Cassette pickup method	Pad separation method
Multifeeder pickup method	Pad separation method
Drum cleaning method	Rubber blade
Fixing method	On-demand fixing
Toner supply type	By drum style toner cartridge
Toner type	Magnetic negative toner
Toner save mode	Yes
Original type	Sheets, books, solids (up to 2 kg)
Maximum original size	Fixed: 216mm x 297mm ADF: 216mm x 356mm
Reproduction ratio	1 to 1 + / - 1.0 %, 1 to 2.00, 1 to 1.29, 1 to 0.78, 1 to 0.64, 1 to 0.50 Zoom: 0.50 to 2.00 (specified by the percent)
Reading resolution	600 x 600 dpi
Printing resolution	600 x 600 dpi
Warm-up time	10.0 seconds or less
First print time	9.0 seconds or less (A4/LTR)
Print speed	One-sided: Approximately 22 sheets / minute (A4) Approximately 23 sheets / minute (LTR) Double-sided: Approximately 11 sheets / minutes
Cassette paper size	LTR, LGL, A4, B5, A5, Executive, Envelope (COM10, Monarch, DL,ISO-C5), Oficio, Brazil-Oficio, Mexico-Oficio, Folio, Government-LTR, Government-LGL, Foolscap (76 x 127 to 216 x 356 mm)
Multifeeder paper size	LTR, LGL, A4, B5, A5, Executive, Envelope (COM10, Monarch, DL,ISO-C5), Oficio, Brazil-Oficio, Mexico-Oficio, Folio, Government-LTR, Government-LGL, Foolscap (76 x 127 to 216 x 356 mm)
Cassette paper type	Plain paper (64 to 90g / m2), thick paper (105 to 128g / m2), recycled paper (64 to 80g / m2), transparency, label, envelop, and postcard
Multifeeder tray paper type	Plain paper (64 to 90g / m2), thick paper (105 to 128g / m2), recycled paper (64 to 80g / m2), transparency, label, envelop, and postcard
Cassette capacity	250 sheets (80g / m2 paper)
Multifeeder tray capacity	10 sheets (plain paper: 80g / m2 paper) 1 sheet (transparency, envelop)
Delivery tray stack	100 sheets (plain paper: 80g / m2 paper) 50 sheets (thick paper: 91 to 105g / m2 paper) 30 sheets (thick paper: 106 to 128g / m2 paper) 10 sheets (label, transparency, envelop, postcard)
Continuous reproduction	1 to 99 sheets
Energy save mode	Yes. (Manual ON / OFF, automatically OFF after a set period of time, automatically ON when receiving facsimile / print data, automatically ON when placing paper on ADF, automatically ON when sending facsimile from PC, automatically ON when NW PULL SCAN, automatically ON when USB SCAN)
Network	Yes
Operating environment (temperature range)	15 to 30 degrees C
Operating environment (humidity range)	5 to 90 %

Operating environment (atmospheric pressure)	0.16 to 1.01 hPa (0.6 to 1 bar)
Power supply rating	120V, or 230V
Power consumption (maximum)	Maximum consumption: less than 630W
Power consumption	During operation: approximately 440W or less (reference value)At standby: approximately 9.0W (referenve value) In sleep mode: approximately 3W (reference value)
Ozone	Maximum: less than 0.05 ppm, average: less than 0.02 ppm
Dimensions	390 (W) x 432 (D) x 370 (H) mm (with original pick-up tray)
Weight	Approximately 13.4kg (including toner cartridges)

1.1.3.2 ADF/DADF Specifications

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

Original orientation	Face-up method
Original position	center reference
Original processing mode	ADF:1-sided to 1-sided copy, 1-sided to 2-sided copy DADF:1-sided to 1-sided copy, 1-sided to 2-sided copy,2-sided to 1-sided copy, 2-sided to 2-sided copy
Original reading	stream reading method
Stack	ADF: 35 sheets (80 g/m ² or less) 25 sheets (LGL size) DADF: 50 sheets (80 g/m ² or less) 50 sheets (LGL size)
Mixed original sizes	No
Original AE detection	No
Original size recognition	No
Stamp	No
Operating environment	pursuant to the host machine

1.1.3.3 FAX Specifications

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn


Applicable lines	Analog line (single line) - Telephone subscriber line (PSTN)
Transmission method	Half-duplex communication
Modulation method	<G3 image signal> ITU-T V.27 ter (2.4Kbps, 4.8Kbps) ITU-T V.29 (7.2Kbps, 9.6Kbps) ITU-T V.17 (TC7.2Kbps, TC9.6Kbps, 12Kbps, 14.4Kbps) ITU-T V.34 (2.4Kbps, 4.8Kbps, 7.2Kbps, 9.6Kbps, 12Kbps, 14.4Kbps, 16.8Kbps, 19.2Kbps, 21.6Kbps, 24Kbps, 26.4Kbps, 28.8Kbps, 31.2Kbps, 33.6Kbps) <G3 procedure signal> ITU-T V.21 No.2 (300bps) ITU-T V.8, V.34 (1200bps)
Transmission speed	33.6Kbps, 31.2Kbps, 28.8Kbps, 26.4Kbps, 24Kbps, 21.6Kbps, 19.2Kbps, 16.8Kbps, 14.4Kbps, 12Kbps, TC9.6Kbps, TC7.2Kbps, 9.6Kbps, 7.2Kbps, 4.8Kbps, 2.4Kbps With automatic fallback function
Coding	MMR, MR, MH
Error correction	ITU-T ECM
Minimum receive input level	V.17, V.27ter, V.29: -6 to -43 dBm V.34: -10 to -43 dBm
Modem IC	CONEXANT SFX336
Scanning line density	Standard: 8 dots / mm x 3.85 lines / mm Fine: 8 dots / mm x 7.7 lines / mm Super fine/ 8 dots / mm X 15.4 lines / mm
Half tone	256 gradation sequence
Printing resolution	600 dpi x 600 dpi
Reduction for reception	Fixed reduction: No Automatic reduction: 75 to 100%
FAX/TEL switching	Yes.

Answering machine connection	Yes.
Remote reception	ID entry method ID: 2 digits (default is 25)
Memory reception	Approximately 256 sheets
Auto dialing	One-touch dial: 8 (EC; 7) Speed dial: 100 Group dial: Maximum 108 (EC; 107)
Delayed transmission	No.
Broadcast transmission	Number of Destination: Maximum 124 (one-touch / speed dial: 108, ten key: 16)
Dual access	Reservation Capacity: Maximum 256 jobs
Image data backup	No.

1.1.4 Function List

1.1.4.1 Scanning Range (ADF/DADF)

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

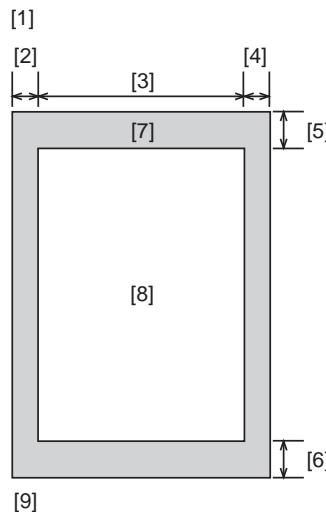

F-1-12


- | | |
|------------------------------|-------------------------------|
| [1] leading edge of original | [6] trailing edge margin |
| [2] left margin | [7] non-scanning area |
| [3] effective scanning width | [8] scanning range |
| [4] right margin | [9] trailing edge of original |
| [5] leading edge margin | |

T-1-7

item	A4	Letter	Legal
effective scanning width	206 +2.0/-2.0 mm	212 +2.0/-2.0 mm	212 +2.0/-2.0 mm
left margin	2.0 +2.0/-2.0 mm	2.0 +2.0/-2.0 mm	2.0 +2.0/-2.0 mm
right margin	2.0 +2.0/-2.0 mm	2.0 +2.0/-2.0 mm	2.0 +2.0/-2.0 mm
leading edge margin	2.0 +2.0/-2.0 mm	2.0 +2.0/-2.0 mm	2.0 +2.0/-2.0 mm
trailing edge margin	2.0 +2.0/-2.0 mm	2.0 +2.0/-2.0 mm	2.0 +2.0/-2.0 mm

1.1.4.2 Scanning Range (copyboard)

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

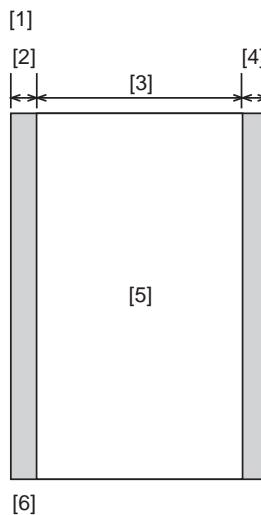

F-1-13


- | | |
|------------------------------|-------------------------------|
| [1] leading edge of document | [4] right margin |
| [2] left margin | [5] scanning range |
| [3] effective scanning width | [6] trailing edge of document |

T-1-8

item	A4	Letter
effective scanning width	206 mm	212 mm
left margin	2.0 +2.0/-2.0 mm	2.0 +2.0/-2.0 mm
right margin	2.0 +2.0/-2.0 mm	2.0 +2.0/-2.0 mm

1.1.4.3 Recording Range (Copy)

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

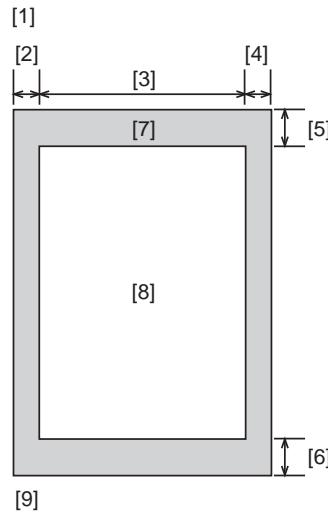

F-1-14


- | | |
|------------------------------|-------------------------------|
| [1] leading edge of document | [6] trailing edge margin |
| [2] left margin | [7] non-scanning area |
| [3] effective scanning width | [8] scanning range |
| [4] right margin | [9] trailing edge of document |
| [5] trailing edge margin | |

T-1-9

item	A4	Letter	Legal
effective recording width	204 +1.0/-2.0 mm	210 +2.0/-2.0 mm	210 +2.0/-2.0 mm
effective recording left margin	3.0 +2.0/-2.0 mm	3.0 +2.0/-2.0 mm	3.0 +2.0/-2.0 mm
right margin	3.0 +2.0/-2.0 mm	3.0 +2.0/-2.0 mm	3.0 +2.0/-2.0 mm
leading edge margin	4.0 +2.0/-2.0 mm	4.0 +2.0/-2.0 mm	4.0 +2.0/-2.0 mm
trailing edge margin	5.0 +2.0/-2.0 mm	5.0 +2.0/-2.0 mm	5.0 +2.0/-2.0 mm

1.1.4.4 Recording Range (Reception)

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

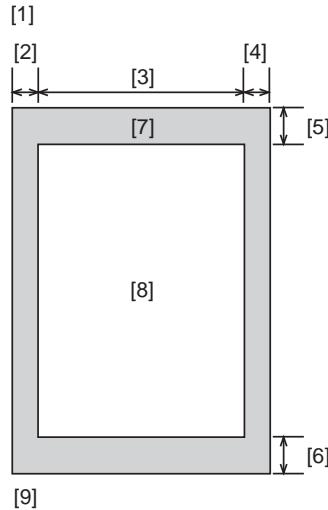

F-1-15


- | | |
|------------------------------|-------------------------------|
| [1] leading edge of document | [6] trailing edge margin |
| [2] left margin | [7] non-scanning area |
| [3] effective scanning width | [8] scanning range |
| [4] right margin | [9] trailing edge of document |
| [5] leading edge margin | |

T-1-10

item	A4	Letter	Legal
effective recording width	206 +1.0/-2.0 mm	212 +2.0/-2.0 mm	212 +2.0/-2.0 mm
left margin	2.0 +2.0/-2.0 mm	2.0 +2.0/-2.0 mm	2.0 +2.0/-2.0 mm
right margin	2.0 +2.0/-2.0 mm	2.0 +2.0/-2.0 mm	2.0 +2.0/-2.0 mm
leading edge margin	2.0 +2.0/-2.0 mm	2.0 +2.0/-2.0 mm	2.0 +2.0/-2.0 mm
trailing edge margin	6.0 +2.0/-2.0 mm	6.0 +2.0/-2.0 mm	6.0 +2.0/-2.0 mm

1.1.4.5 Recording Range (Printer)

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

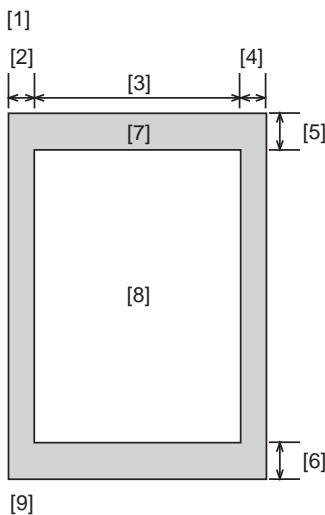

F-1-16

- | | |
|------------------------------|-------------------------------|
| [1] leading edge of document | [6] trailing edge margin |
| [2] left margin | [7] non-scanning area |
| [3] effective scanning width | [8] scanning range |
| [4] right margin | [9] trailing edge of document |
| [5] leading edge margin | |

T-1-11

item	A4	Letter	Legal
left margin	5.0 +2.0/-2.0 mm	5.0 +2.0/-2.0 mm	5.0 +2.0/-2.0 mm
right margin	5.0 +2.0/-2.0 mm	5.0 +2.0/-2.0 mm	5.0 +2.0/-2.0 mm
leading edge margin	6.0 +2.0/-2.0 mm	6.0 +2.0/-2.0 mm	6.0 +2.0/-2.0 mm
trailing edge margin	6.0 +2.0/-2.0 mm	6.0 +2.0/-2.0 mm	6.0 +2.0/-2.0 mm

1.1.4.6 Operation Environment of the Printer Driver

i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

Operation environment

Windows 2000, Windows XP, Windows Vista

Computer

Computer in which Windows 2000, Windows XP, or Windows Vista runs properly.

Hardware environment

- IBM PC or IBM compatible PC
- CD-ROM drive or network environment accessible to CD-ROM
- PC equipped with USB port

T-1-12

OS	CPU	RAM
Windows 2000	Intel Pentium 133 MHz or more	128 MB or more
Windows XP	Intel Pentium ii/Celeron 300 MHz or more	128 MB or more
Windows Vista	Intel Pentium 800MHz or faster	512MB or more

* Log in as a user account to which the administrator's right is authorized.

1.1.4.7 Network Specifications

i-SENSYS MF4380dn / i-SENSYS MF4370dn

Connector	RJ45
Communication speed	10Base-T/100Base-TX
Communication mode	FULL DUPLEX/half DUPLEX

Supported protocol	TCP/IP
	Interface; Ethernet II
Supported OS (Print application)	Windows2000, XP, Vista

Chapter 2 Basic Operation

Contents


2.1 Construction	2-1
2.1.1 Function Configuration	2-1
2.2 Basic Sequence	2-1
2.2.1 Basic Operation Sequence	2-1

2.1 Construction

2.1.1 Function Configuration

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

The functions of this host machine are mainly composed of the 7 blocks: System Control System, Scanning Control System, Printer Control System, Laser Scanner System, Image Formation System, Fixing System, Pickup/Feeding System. Below is the block diagram.

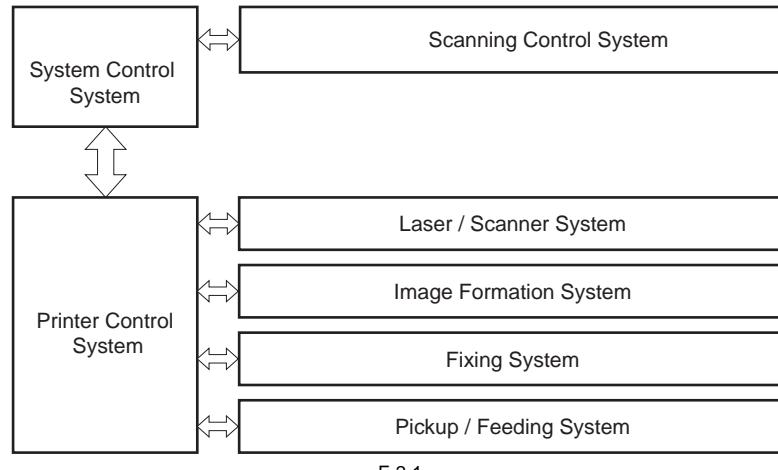

F-2-1

2.2 Basic Sequence

2.2.1 Basic Operation Sequence

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

The operations of this host machine are controlled by CPUs of the SCNT PCB within the Reader Controller System and the DCNT PCB within the Engine Control System. The table below shows the purpose of each interval and the outline of the operations of reader unit and the engine from turnon of the power supply to stop of each motor after printing.

T-2-1

interval name	definition of interval	purpose	remarks
WAIT (wait)	Interval between turnon of the power supply and the end of the initial drive	To clear the drum surface potential and to execute the cleaning of transfer charging roller	Presence/absence of cartridge is detected during this interval.
STBY (standby)	Interval between the end of WAIT or LSTR and input of print command from SCNT PCB, or interval between the end of LSTR and turnoff of power supply	To make the host machine ready for printing	
INTR (initial rotation)	Interval between the input of print command from SCNT PCB and turnon of the Cassette pickup solenoid	To stabilize the photosensitive drum as a preparation for printing Also to clean the transfer charging roller	
PRINT (print)	Interval between the end of initial rotation and turnoff of the primary high-voltage output	To form an image onto the photosensitive drum based on the video signal input from the SCNT PCB and to transfer the toner image onto media	
LSTR (last rotation)	Interval between turnoff of the primary high-voltage output and stop of the main motor	To fully deliver the final sheet printed Also to clean the transfer charging roller	On input of print command from the SCNT PCB, host machine enters INTR immediately after LSTR. However, depending on the conditions shown below, the host machine may not start INTR immediately. -media size -temperature of the fixing assembly

Chapter 3 Original Exposure System

Contents

3.1 Basic Construction	3-1
3.1.1 Specifications / Control / Function List	3-1
3.1.2 Major Components.....	3-1
3.2 Parts Replacement Procedure.....	3-3
3.2.1 Scanner Unit.....	3-3
3.2.1.1 Preparation for Removing the Scanner Unit	3-3
3.2.1.2 Removing the Scanner Unit	3-3
3.2.2 Reader Motor	3-3
3.2.2.1 Preparation for Removing the Flat Bed Motor	3-3
3.2.2.2 Removing the Flat Bed Motor.....	3-3
3.2.3 Contact Sensor	3-5
3.2.3.1 Removing the Contact Sensor.....	3-5

3.1 Basic Construction

3.1.1 Specifications / Control / Function List

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

T-3-1

item	function / method
document exposure	LED
document scan	Book mode: scan by the shift of the contact Book mode: scan by the shift of the contact sensor (CS) ADF: document stream reading by fixed contact sensor (CS)
scanning resolution	600 dpi (horizontal scanner) X 600 dpi (vertical scanner)
number of gradations	256 gradations
magnification	50% to 200% horizontal: image processing by SCNT PCB vertical: change of carriage shift speed, image processing by SCNT PCB
lens	rod lens array
CMOS sensor	number of lines: 1 line number of pixels: 5184 pixels as total pixels (5107 pixels as effective pixels) maximum document scanning width: 216 mm
CS drive control	drive control by Reader motor (M2)
document size detection	none


3.1.2 Major Components

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

Followings are the major components for Document Exposure System.

- The contact sensor to scan document
- The Reader motor (M2), the drive pulley, the drive belt, to shift the contact sensor

In image scanning control, the contact sensor is shifted by rotating the Reader motor based on the drive signal from the DCNT PCB and scan the original on the copyboard glass. When ADF is in use, image is scanned by feeding the originals by ADF instead of shifting the contact sensor.

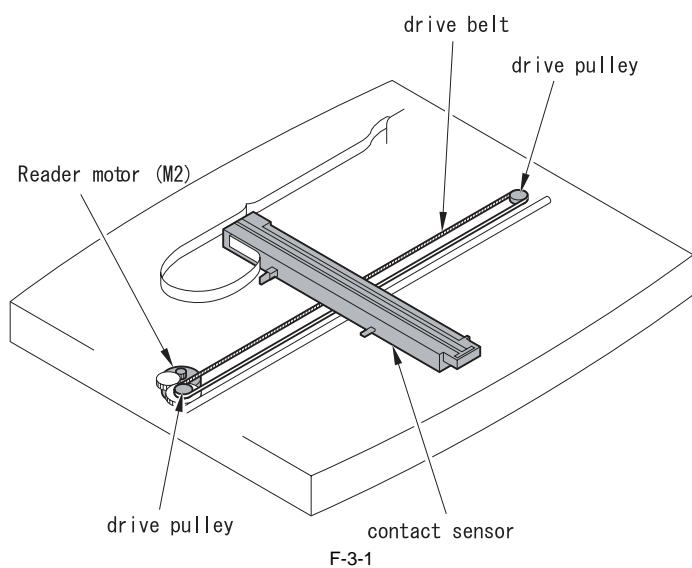

3.2 Parts Replacement Procedure

3.2.1 Scanner Unit

3.2.1.1 Preparation for Removing the Scanner Unit


i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Remove the front cover. [\(page 9-2\)](#) Reference[Removing the Front Cover]
- 2) Remove the right cover. [\(page 9-2\)](#) Reference[Removing the Right Cover]
- 3) Remove the left cover. [\(page 9-3\)](#) Reference[Removing the Left Cover]
- 4) Remove the rear cover. [\(page 9-2\)](#) Reference[Removing the Rear Cover]

3.2.1.2 Removing the Scanner Unit


i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Disconnect the 6 connectors [1], and remove the 1 screw [2] of the grounding wire.

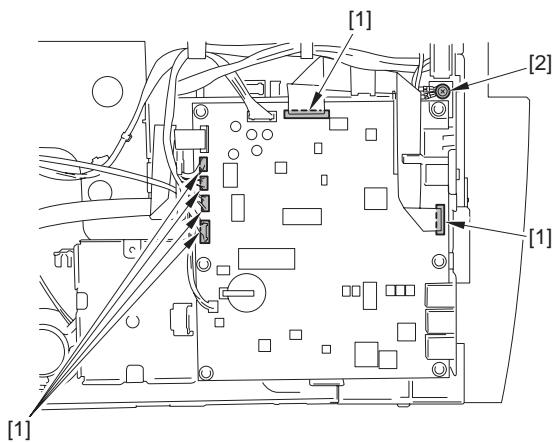


F-3-2

- 2) Remove the ferrite core [1] and the 2 flat cables [2] from the cable guide [3].

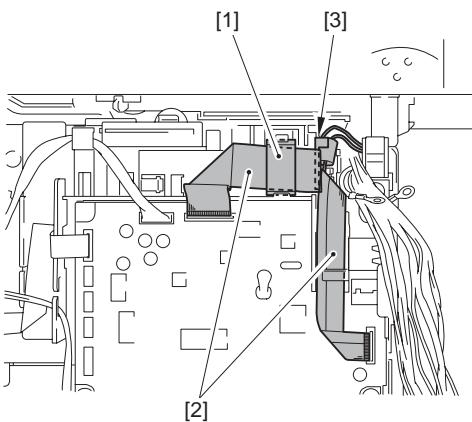

F-3-3

- 3) Open the scanner unit [1] to remove in the direction of the arrow.

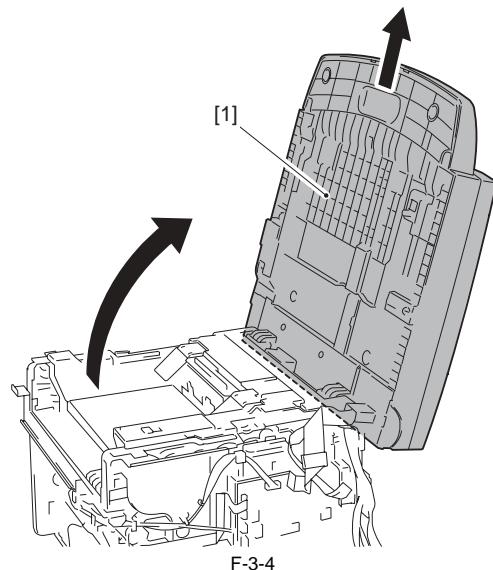

F-3-4

3.2.2 Reader Motor

3.2.2.1 Preparation for Removing the Flat Bed Motor

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Remove the front cover. [\(page 9-2\)](#) Reference[Removing the Front Cover]
- 2) Remove the right cover. [\(page 9-2\)](#) Reference[Removing the Right Cover]
- 3) Remove the left cover. [\(page 9-3\)](#) Reference[Removing the Left Cover]
- 4) Remove the rear cover. [\(page 9-2\)](#) Reference[Removing the Rear Cover]
- 5) Remove the scanner unit. [\(page 3-3\)](#) Reference[Removing the Scanner Unit]

3.2.2.2 Removing the Flat Bed Motor


i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Open the copyboard cover unit [1] to remove upward. Pull out the hinge [2] on the left side while keeping it tilted toward the back.




Place the detached copyboard glass cover on cloth etc. not to damage the bottom sheet.

In the case of ADF

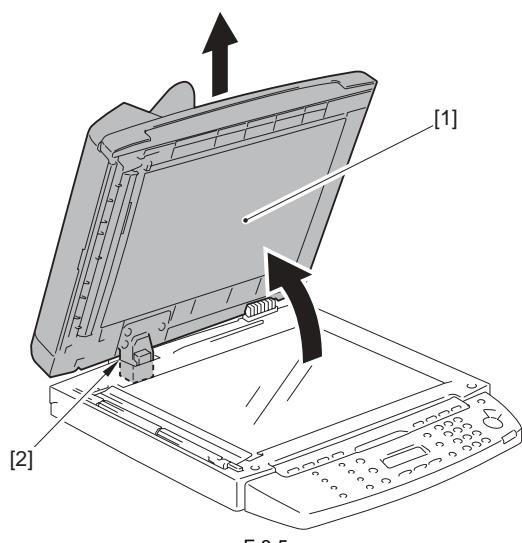

F-3-5

In the case of DADF

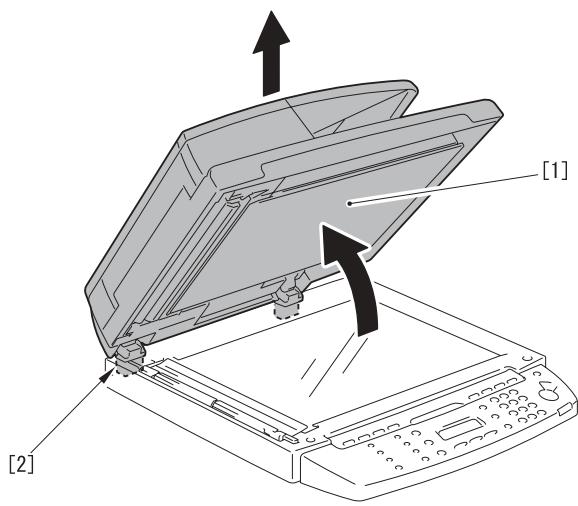


F-3-6

2) Reverse the copyboard [1] and detach the bottom cover [4].

In the case of ADF


- 2 screws [2]
- 5 claws [3]

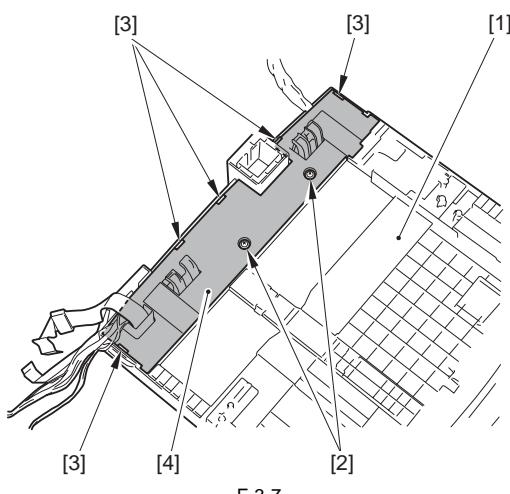

F-3-7

In the case of DADF


- 1 screws [2]
- 5 claws [3]

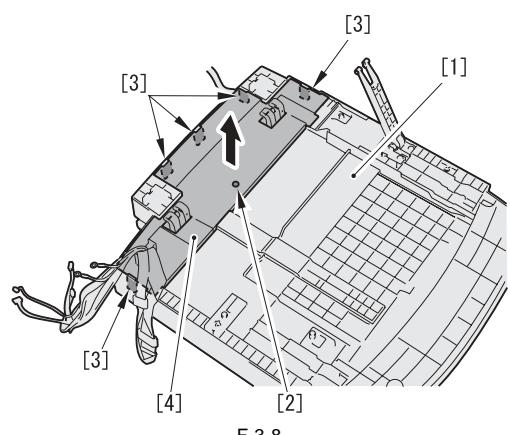

F-3-8


3) Free the cable [1] from the cable guide [2].

In the case of ADF

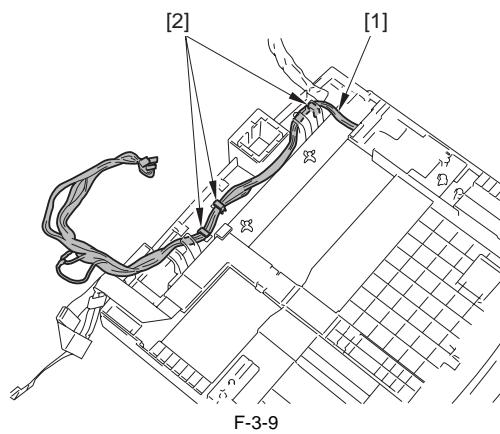


F-3-9

In the case of DADF

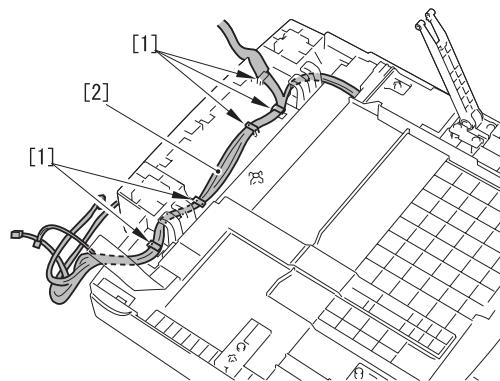

F-3-10


4) Remove the 4 screws and the 2 claws at the back of the control panel unit.

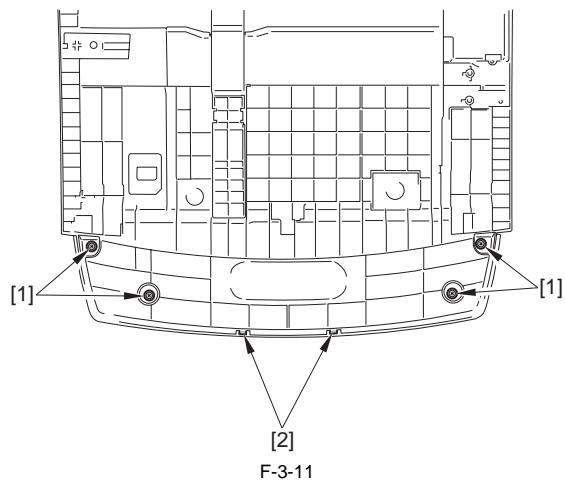

F-3-11

5) Reverse the copyboard [1] again.



6) Remove the flat cable [2] to remove the control panel unit [3].

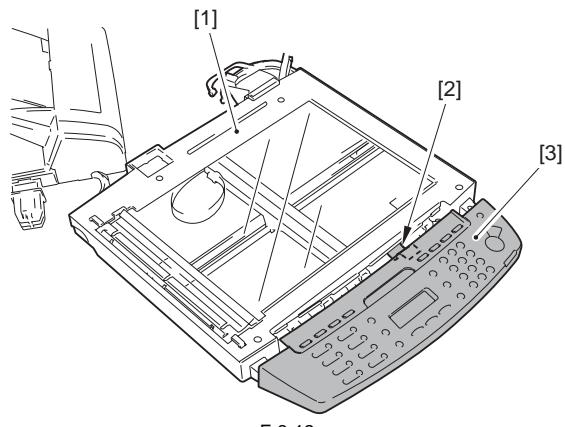


F-3-12

5) Reverse the copyboard [1] again.

 
- 6) Remove the flat cable [2] to remove the control panel unit [3].
- 7) Remove the 4 screws [1], and detach the copyboard cover [2].
- 8) Remove the copyboard glass [3].

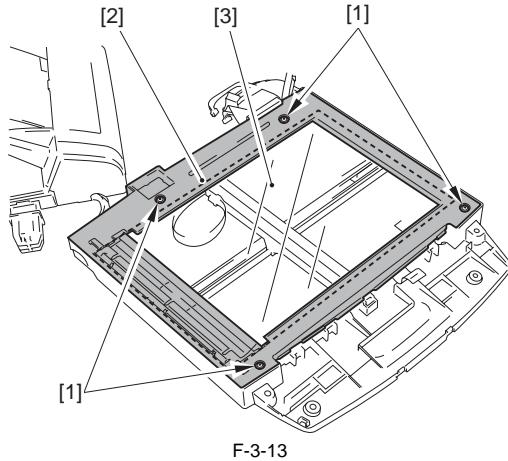


- 9) Remove the claw [1] to remove the gear [3] together with the belt [2].

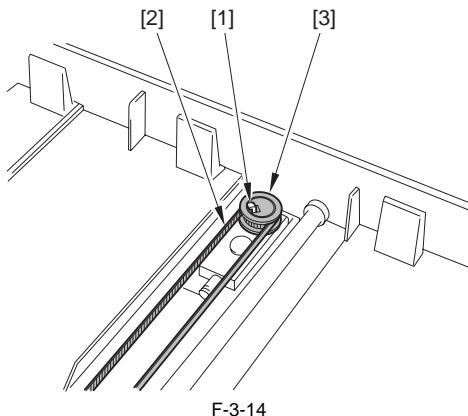

- 10) Remove the 3 screws [1] to remove the shaft retainer [2], the grounding plate [3] and the motor unit [4].

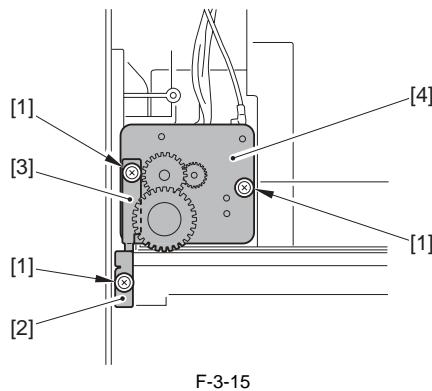

- 11) Remove the 2 screws [1] to remove the flat bed motor [2].

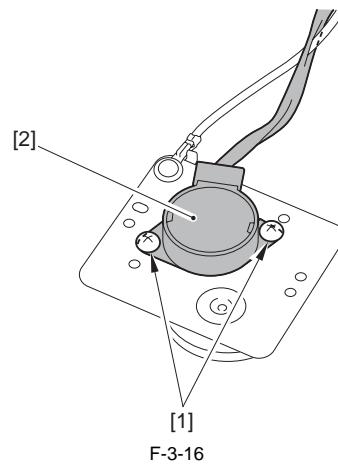


3.2.3 Contact Sensor



3.2.3.1 Removing the Contact Sensor

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

 
- 1) Open the copyboard cover unit [1] to remove in the direction of the arrow. Pull out the hinge [2] on the left side while tilting it toward the rear side.



 - 2) Remove the 4 screws [3], and detach the copyboard glass cover [4].
- 3) Remove the copyboard glass cover [5].

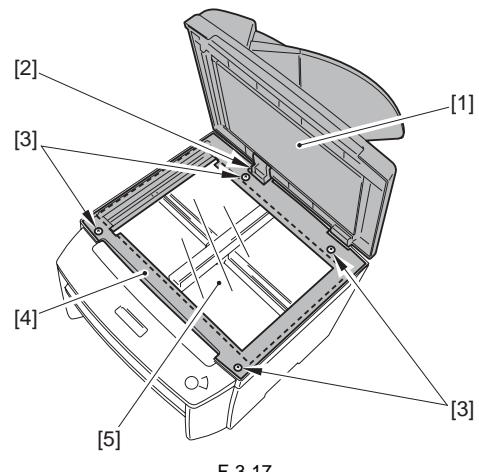


- 4) Remove the 2 spacers [1].
- 5) Remove the contact sensor unit [2] upward.

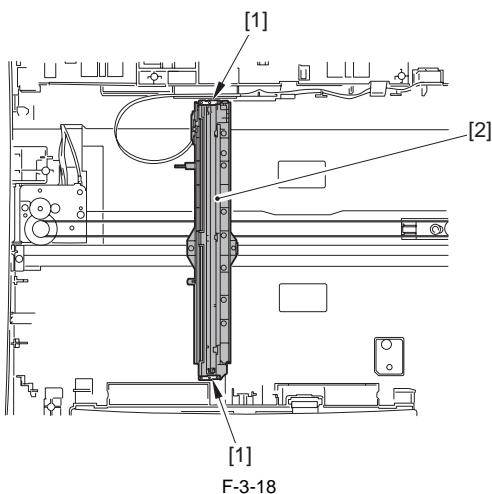


⚠ Points to Note at Attaching


Be sure to fit the gear [1] of the belt with the gear [2] on the bottom surface of the contact sensor unit.

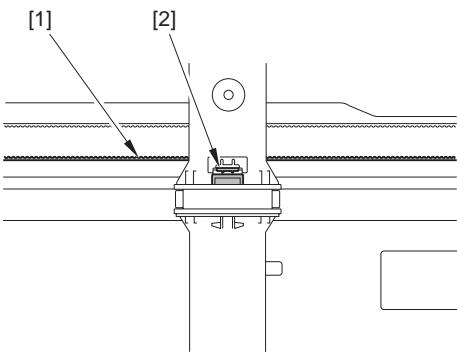

6) Disconnect the connector [1].

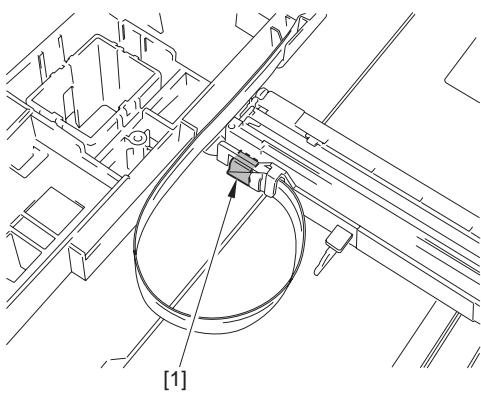

7) Turn the contact sensor [1] in the direction shown by the arrow, remove the 2 shafts [2], and then remove the contact sensor [1].

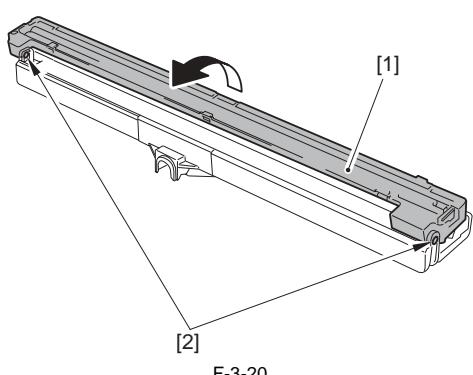

Chapter 4 Original Feeding System

Contents

4.1 Basic Operation	4-1
4.1.1 Basic Operation (ADF)	4-1
4.1.2 Basic Operation (DADF)	4-2
4.1.3 Original Detection.....	4-4
4.2 Detection Jams	4-5
4.2.1 Jam Detection.....	4-5
4.3 ADF/DADF.....	4-6
4.3.1 Pick-up Roller	4-6
4.3.1.1 Removing the ADF Pickup Roller	4-6
4.3.1.2 Removing the DADF Pickup Roller Unit	4-6
4.3.2 ADF Motor.....	4-8
4.3.2.1 Preparation for Removing the ADF/DADF Motor	4-8
4.3.2.2 Removing the ADF Motor	4-8
4.3.2.3 Removing the DADF Motor	4-9
4.3.3 Separation Pad	4-12
4.3.3.1 Removing the ADF Separation Pad	4-12
4.3.3.2 Removing the DADF Separation Pad	4-12

4.1 Basic Operation


4.1.1 Basic Operation (ADF)

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

The Auto Document Feeder (ADF) mounted onto this host machine is dedicated to stream-reading.


1 motor (ADF motor: M3) is engaged in pickup/feeding/delivery.

At the start of copy/fax/scan, the ADF motor (M3) is driven by the drive command from the SCNT to pickup/feed the originals set face up on the original tray one by one in order from the top. The original is scanned by the contact sensor when moving through the copyboard glass, and then delivered face down to the original delivery assembly.

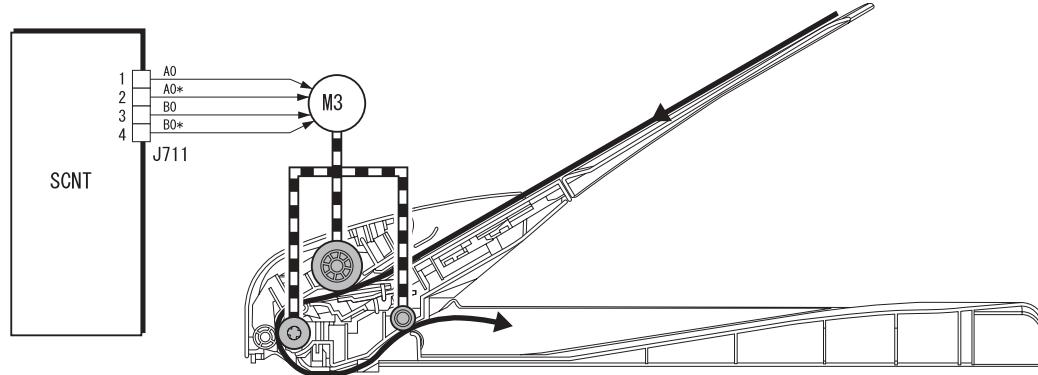

F-4-1

Within the ADF pickup assembly is the stop [1] for the purpose of preventing the push-in of original, which descends/ascends in conjunction with the gear [2] on the end of the pickup roller shaft.

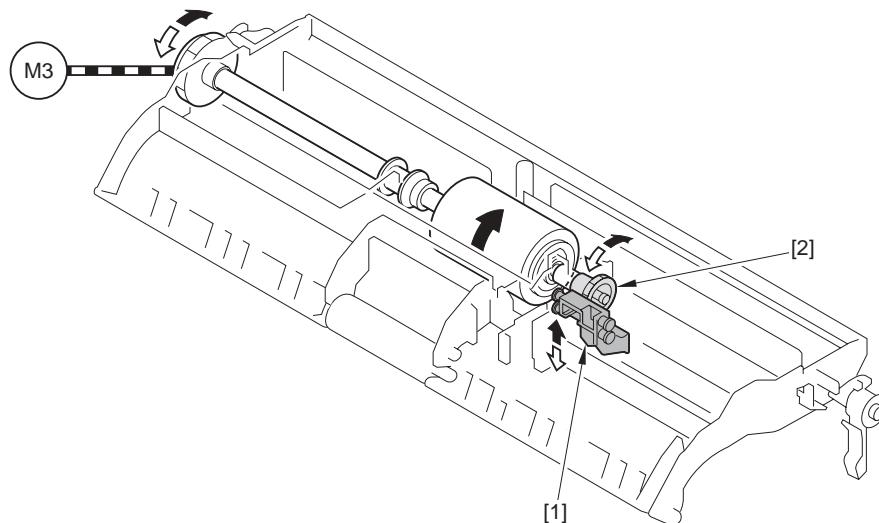

F-4-2

- When the originals are moving through the machine



By the CW drive of the ADF motor (M3), which is transmitted to the pickup roller via the gear/spring clutch and results in positive rotation of the pickup roller, original pickup is performed. At this point, the gear on the pickup roller shaft rotates positively as well, ascending the stop. When the originals are moving through the equipment, the stop is kept ascended.

- At detection of original being set and after delivery of the last sheet of the original



The gear on the pickup roller shaft rotates negatively by the CCW drive of the ADF motor (M3), descending the stop. At the CCW drive, the drive is not transmitted to the pickup roller via the spring clutch, leaving the pickup roller stopped.

4.1.2 Basic Operation (DADF)


i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

Pickup/Feed/Delivery Operation

The Auto Document Feeder (ADF) mounted onto this host machine is dedicated to stream-reading.

1 motor (DADF motor: M3) is engaged in pickup/feeding/delivery.


At the start of copy/fax/scan, the DADF motor (M3) is driven by the drive command from the SCNT to pickup/feed the originals set face up on the original tray one by one in order from the top. The original is scanned by the contact sensor when moving through the copyboard glass, and then delivered face down to the original delivery assembly.

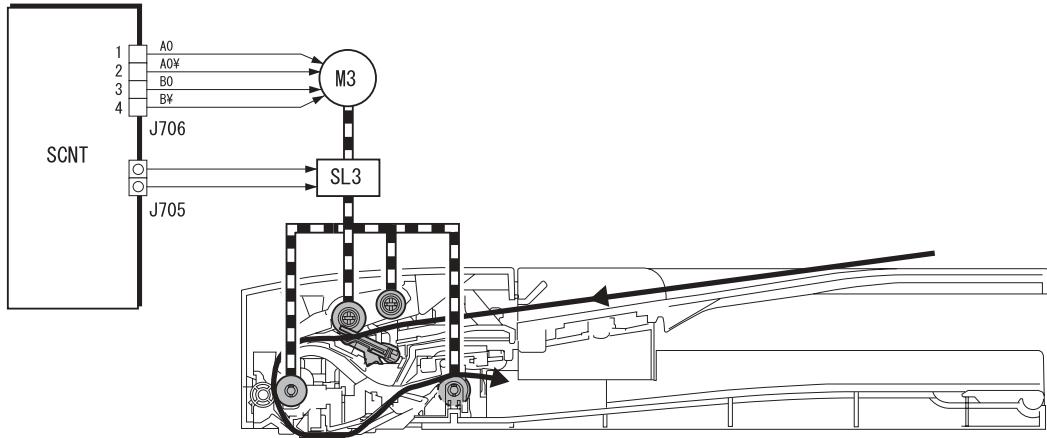

F-4-3


Operation at duplex reading

- Pickup to Reading of the 1st side

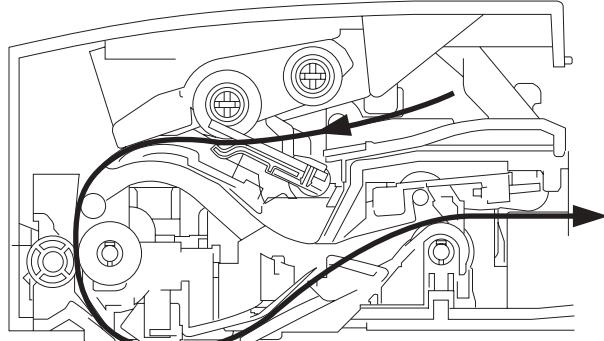


F-4-4

- Reverse to Reading of the 2nd side

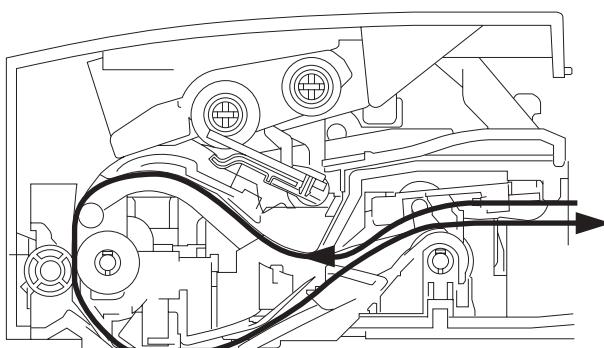

F-4-5

- Delivery

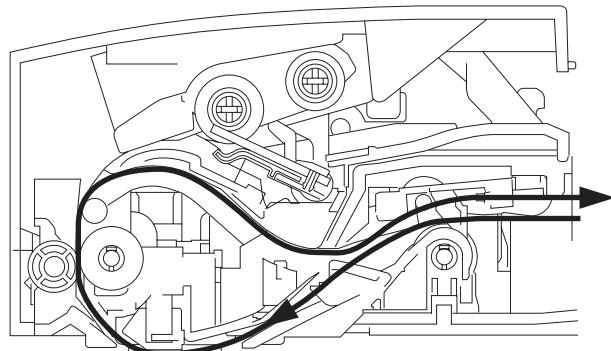

F-4-6

4.1.3 Original Detection

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

There are two types of original detection in this equipment.

1. Original Presence / Absence Detection

Detected by DS (Document Sensor: PS106)

Setting the original onto the original tray pushes up the actuator, activating (light shielded => light transmitted) the DS (PS106), and resulting in detection of the presence of original.

2. Detection of the End of the Original


Detected by the DES (Document End Sensor: PS105)

The leading edge of the original that is fed pushes up the actuator, activating the DES (PS105) (light shielded => light transmitted) and resulting in detection of the reach of the leading edge of original. Furthermore, when the trailing edge of the original passes the actuator position, the actuator returns to the original position, inactivating the DES (PS105) (light transmitted => light shielded). The trailing edge of the original is detected by this mechanism. The original length that can be scanned with this equipment is less than 400 mm. Passing of the original longer than this results in jam stop. The original length is calculated by the time it takes from detection of the leading edge of the original to detection of the trailing edge of the original.

MEMO:


There is no function to detect the original size (original width, length) in this equipment.

In the case of ADF

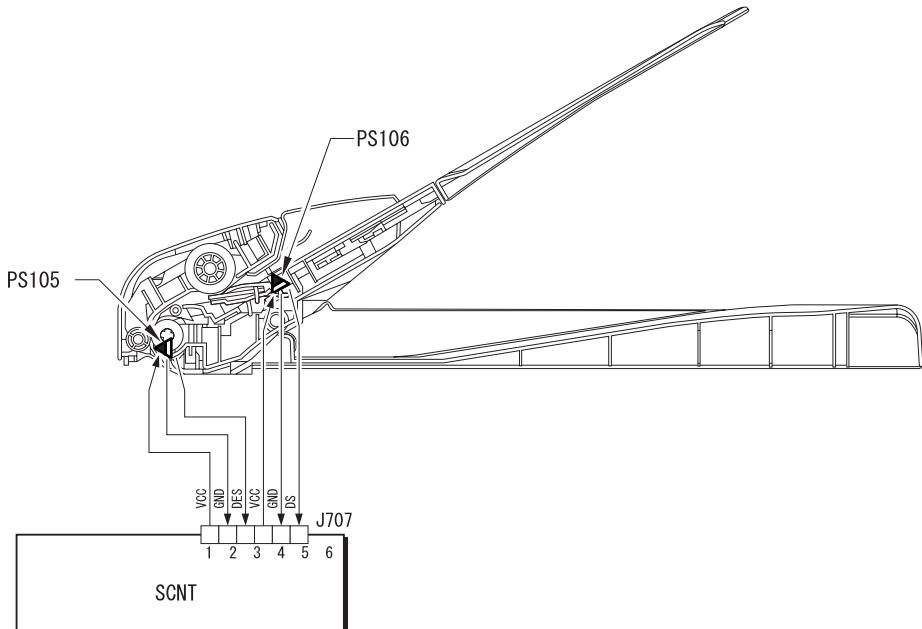

F-4-7

In the case of DADF

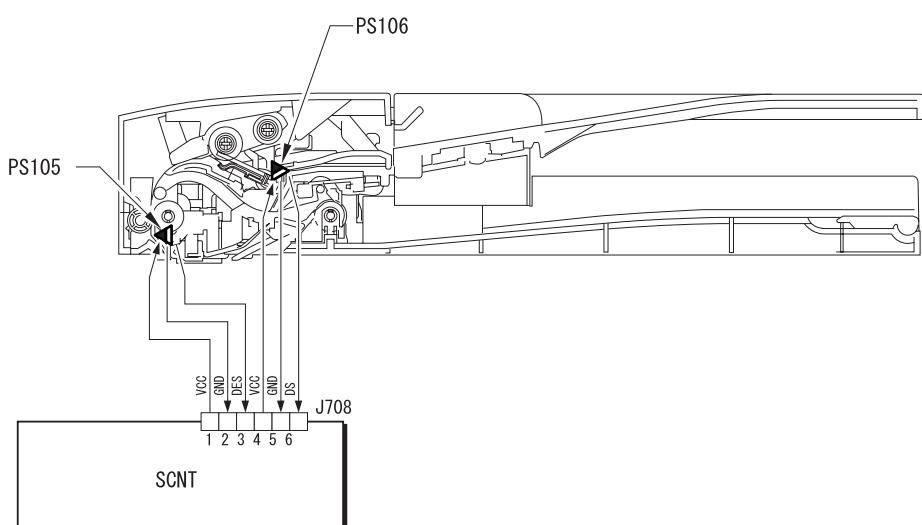

F-4-8

4.2 Detection Jams

4.2.1 Jam Detection

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

The following cases are judged as jam.

1. In case of delay in reaching DS/DES or stationary during scanning of original
2. In case DS/DES is detected as ON at power-on (residual paper jam)
3. In case of detecting original of which length is 400 mm or longer

- Operation after Detection of Jam

The host machine stops scanning operation and displays "CHECK DOCUMENT" on the control panel. No jam code is displayed. In case of the model equipped with fax function (with built-in speaker), the warning beep occurs at the detection of jam.

- How to release Jam

Remove the jammed paper and open / close the ADF upper cover


4.3 ADF/DADF

4.3.1 Pick-up Roller


4.3.1.1 Removing the ADF Pickup Roller

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Remove the shaft [1] with a screwdriver to remove the ADF pickup unit [2].

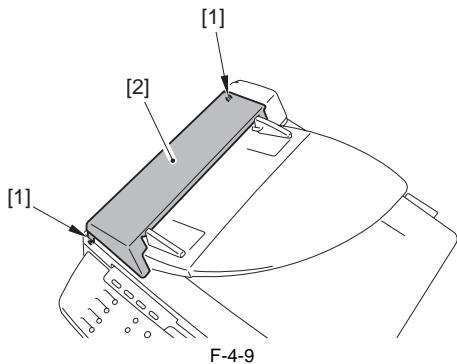


- 2) Remove the 2 shafts [1] with a screwdriver to remove the upper pickup unit [2].

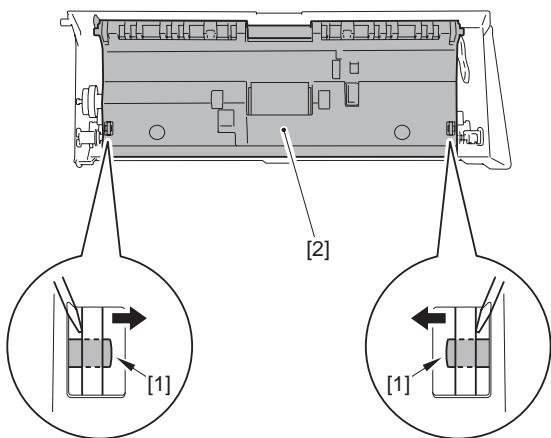

F-4-10


- 3) Remove the 2 claws [1] to remove the 2 gears [2].

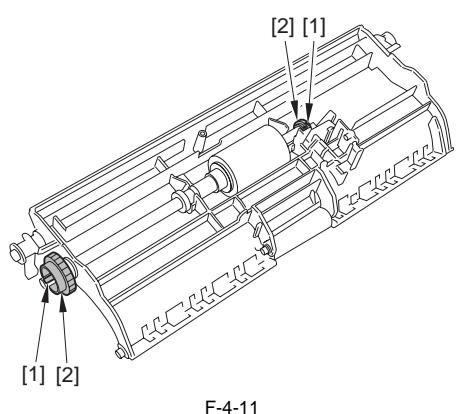


F-4-11

⚠ Points to Note when Attaching

Match the gear [1] with the D cut surface of the ADF pickup roller shaft [2].

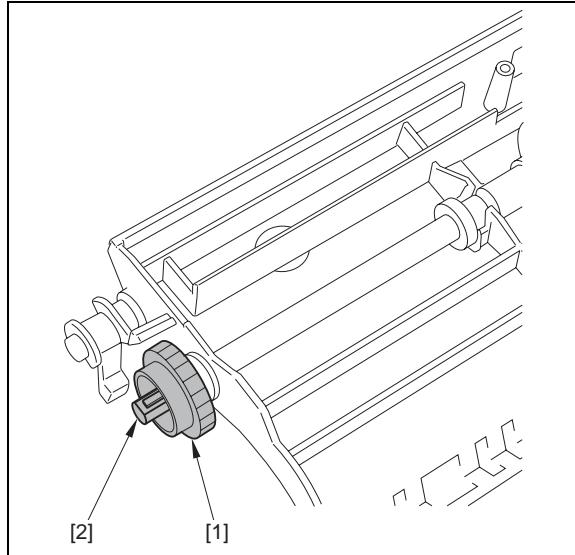


- 4) Remove the 2 bushings [1].
- 5) Remove the 1 E ring [2] to remove the ADF pick-up roller shaft [3].

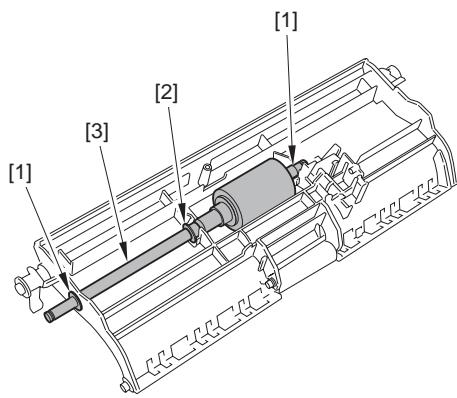

- 6) Remove the 1 E ring [1] to remove the ADF pickup roller [2].




Do not touch the roller with bare hands.

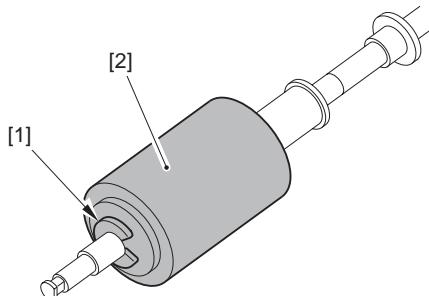

4.3.1.2 Removing the DADF Pickup Roller Unit


i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Open the DADF upper cover [1].

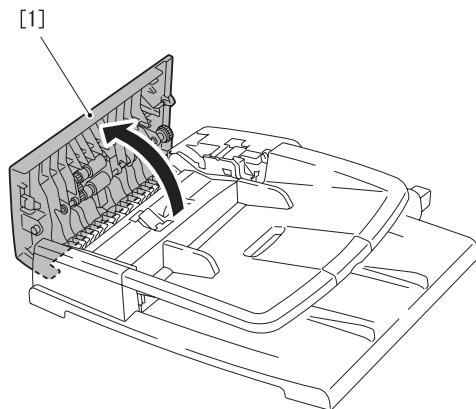



F-4-14

- 2) Remove the DADF upper cover [1].
- 2 bosses [1]

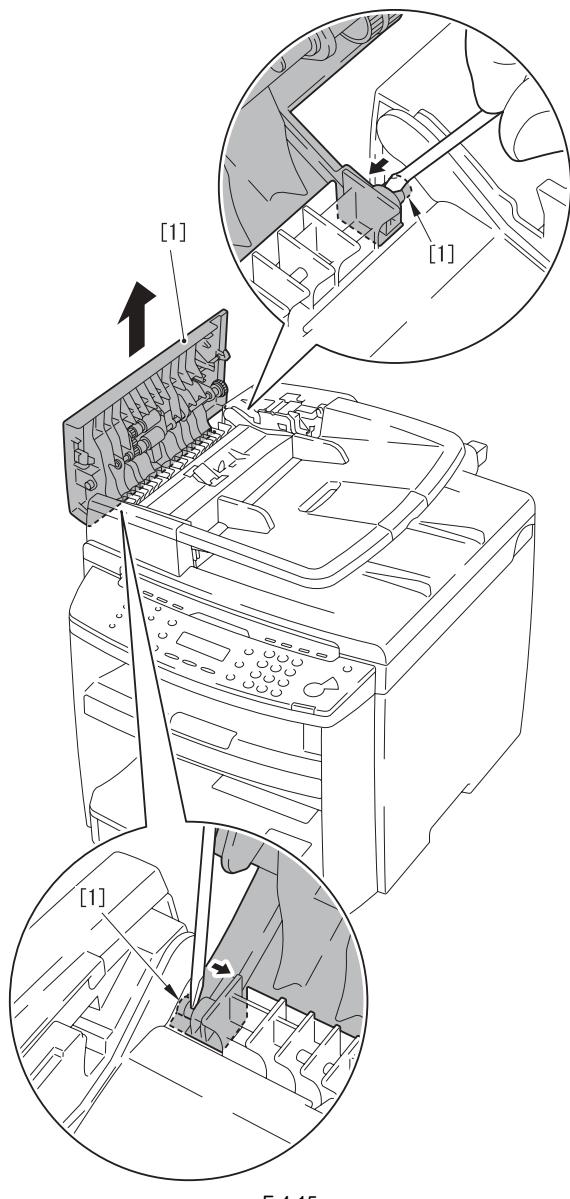

F-4-15


- 3) Unlock one claw [1] and remove one gear [2].

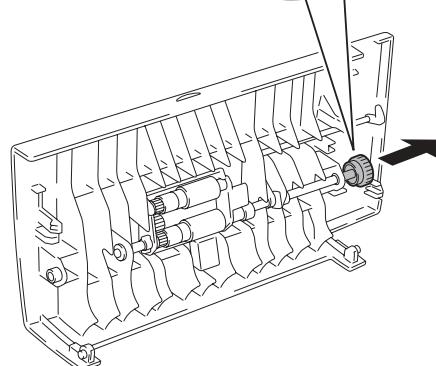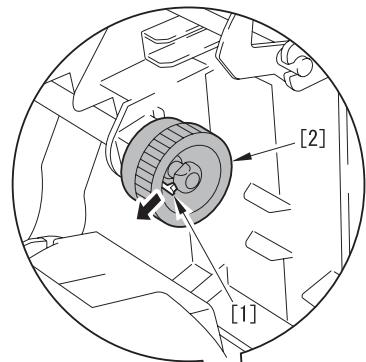

F-4-16

⚠ Points to Note when Attaching
Match the gear [1] with the D cut surface of the DADF pickup roller shaft [2].


- 4) Remove two E-rings [1], one shaft support [2], and one shaft support [3].

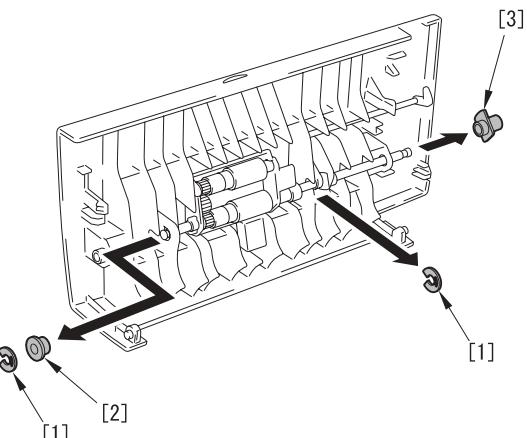

F-4-17


- 5) Move the DADF separation roller unit [1] to the direction shown by an arrow, and remove it from the DADF upper cover.

⚠
Do Not lose the spring [2] when removing DADF pickup roller unit.

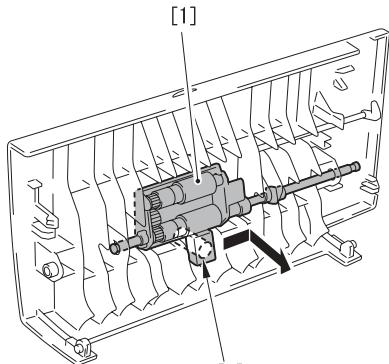


F-4-18

6) Remove the shaft support [1].

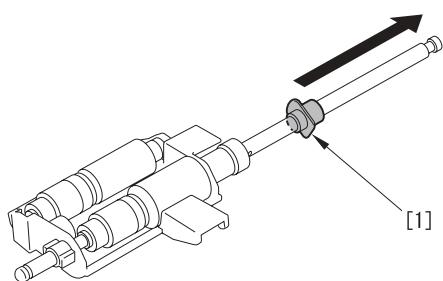


F-4-19

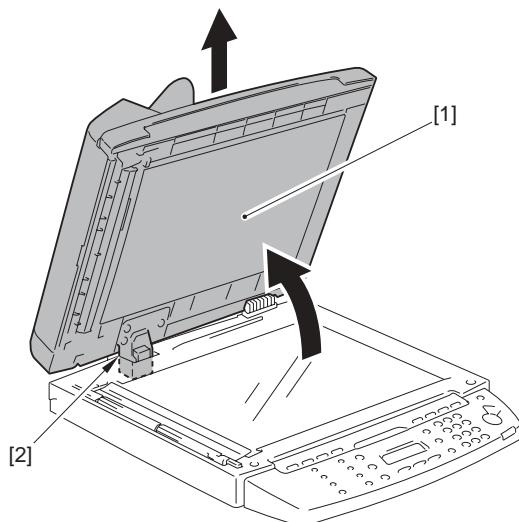


F-4-20

- 2) Turn the copyboard [1] back to detach the bottom cover [4].
 - 2 screws [2]
 - 5 claws [3]

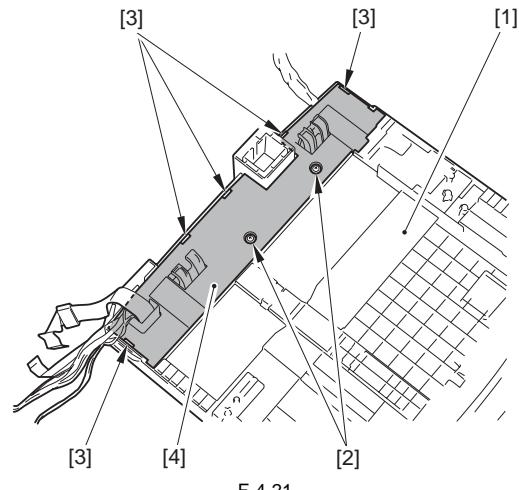

F-4-21

- 3) Free the cable [1] form the cable guide [2].

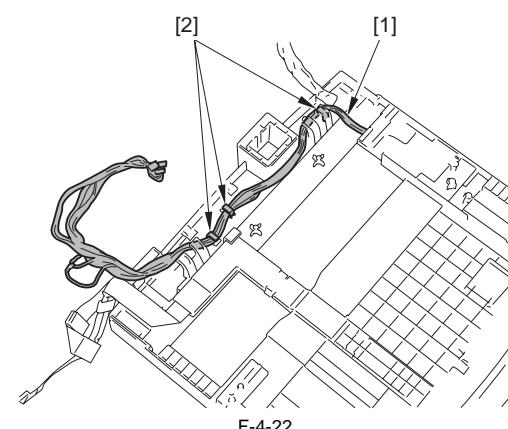


F-4-22


- 4) Open the ADF cover [1] to remove the 2 claws [2].



For the removed copyboard cover unit, be sure to place it on a piece of cloth to avoid damage to the sheet at the bottom.

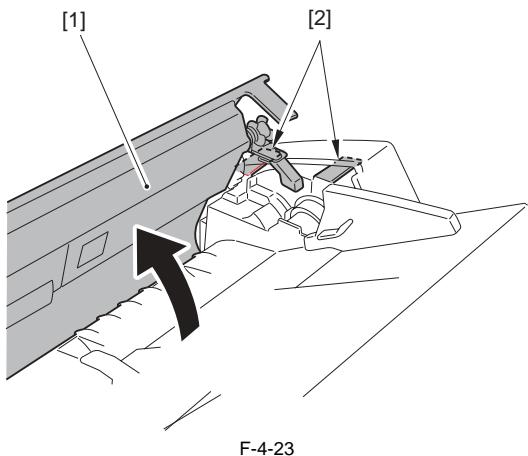


5) Remove the 2 claws [1] to detach the ADF motor cover [2].

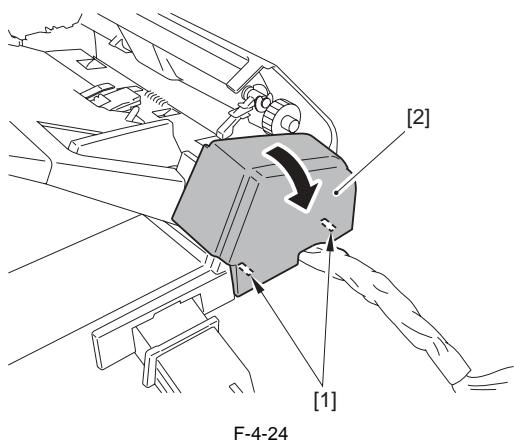

6) Remove the ADF motor [3].

- 2 screws [1]
- 1 cable tube [2]

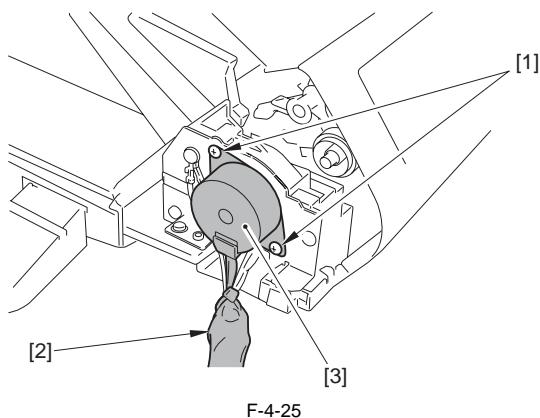


4.3.2.3 Removing the DADF Motor

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

1) Open the copyboard cover unit [1] and remove it in an upward direction. Remove the left-side hinge [2] while lifting it down to the backside.




Place the removed copyboard cover unit on a cloth, etc. so that the bottom sheet is not damaged.

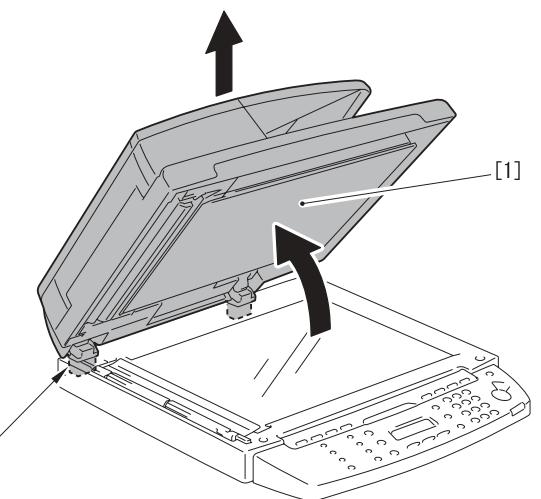


2) Reverse the copyboard [1] and remove the bottom cover [4].

- 1 screw [2]
- 5 claws [3]


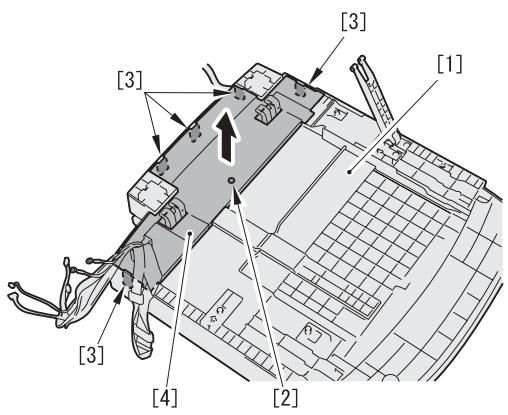


3) Remove the cable [2] from the cable guide [1].


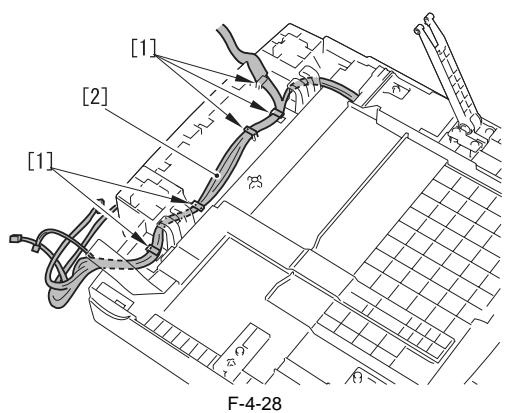


4) Remove the cover [1] in the direction shown by an arrow.

- 1 hook [2]

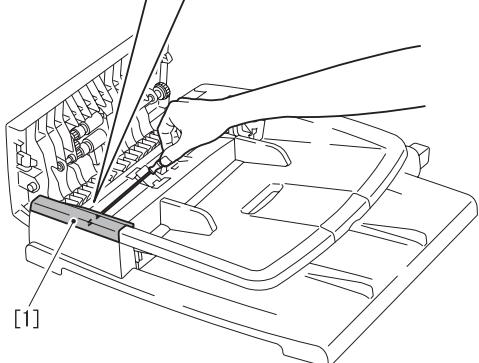
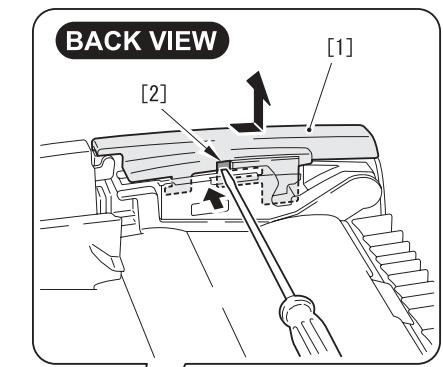



5) Remove the hook [2] from the copyboard pickup tray [1].
- 1 claw [3]

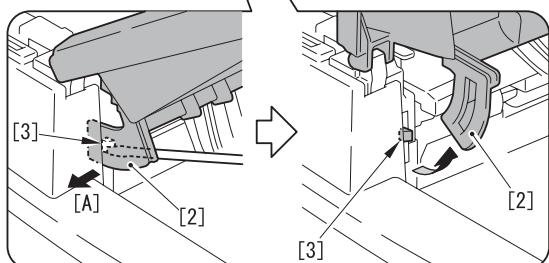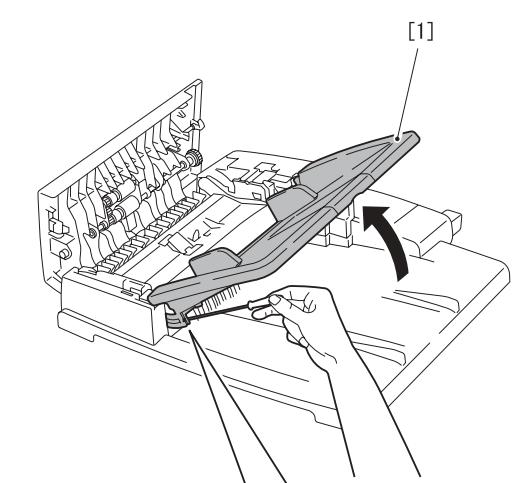


F-4-30

6) Remove the document pickup tray [1] in the direction shown by an arrow.

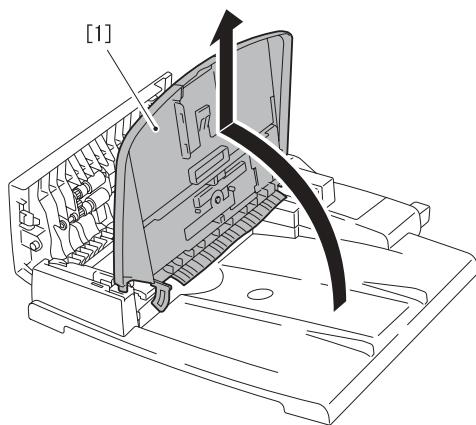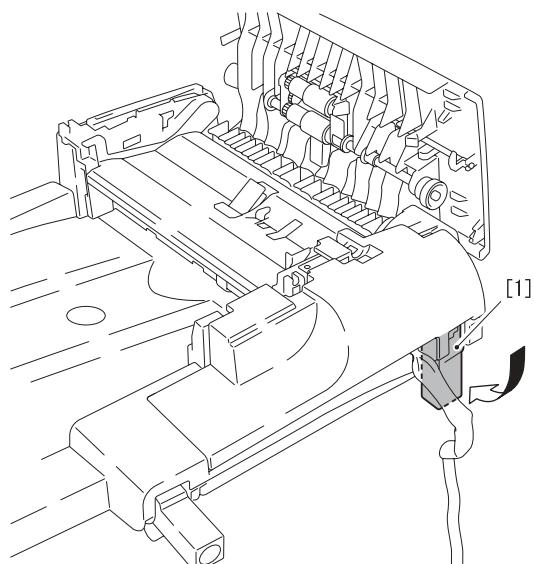
F-4-31
7) Turn down the hinge [1].F-4-32
8) Remove the cover [2] in the direction shown by an arrow.
- 1 boss [1]

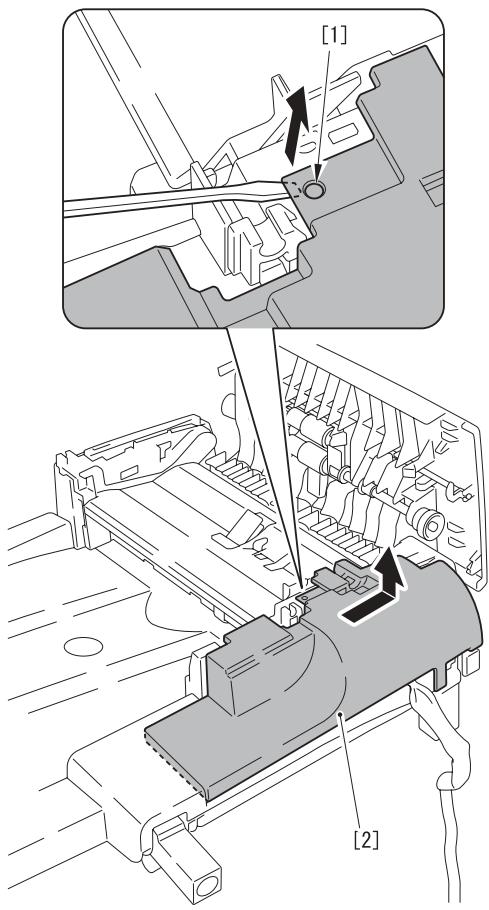


9) Remove the cable [2].
- 2 clamps [1]

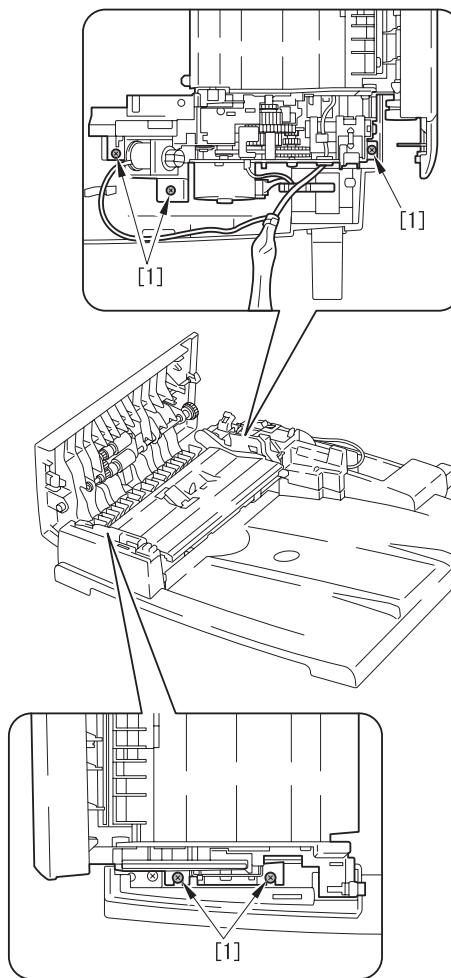


F-4-35
11) Close the ADF cover [1].

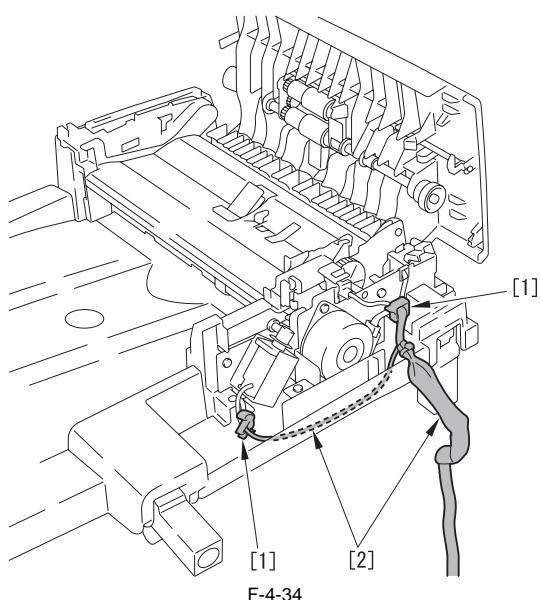


10) Remove five screws [1].

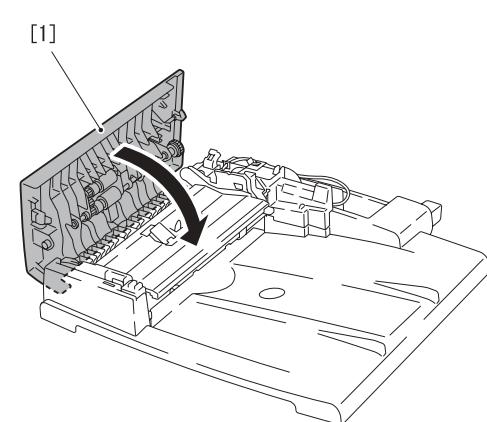

F-4-36
12) Remove the ADF unit [1] in the direction shown by an arrow.

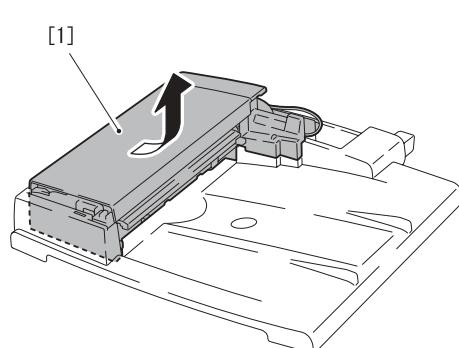


F-4-37
13) Remove the connector [1].

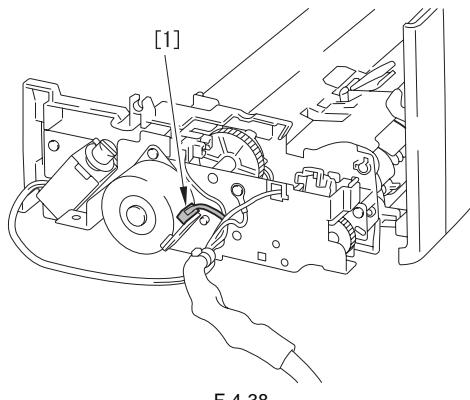


F-4-38

- 14) Remove the DADF motor [2] in the direction shown by an arrow.
- 2 screws [1]

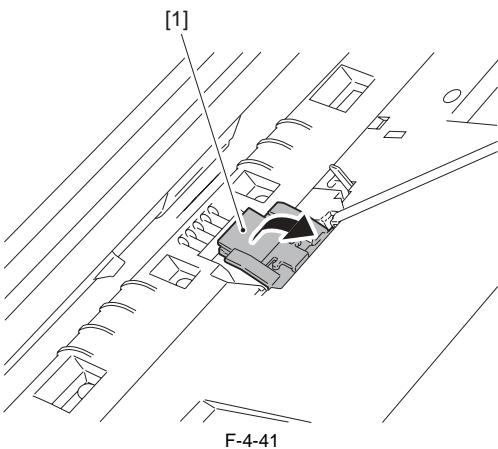

F-4-41

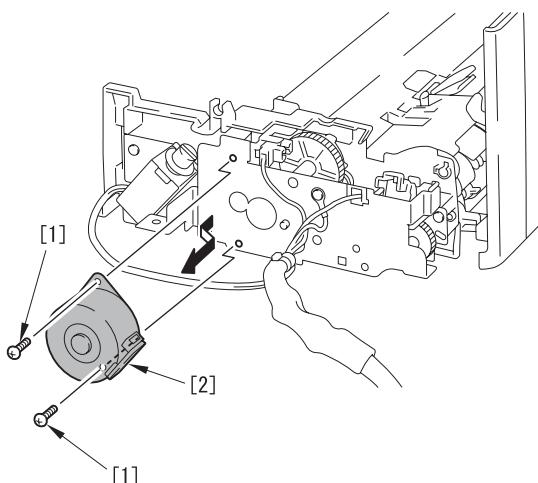


F-4-39

4.3.3 Separation Pad

4.3.3.1 Removing the ADF Separation Pad

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Open the ADF cover [1] in the direction of the arrow.

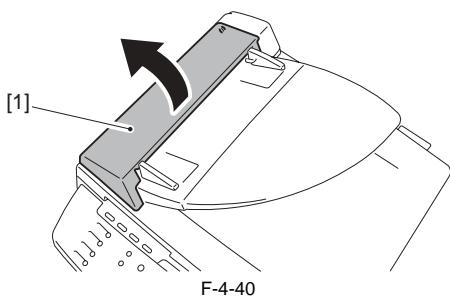


F-4-40

- 2) Remove the separation pad [1] in the direction of the arrow.

⚠ Points to Note when Attaching


Insert the spring [1] of the separation pad into the boss [2].

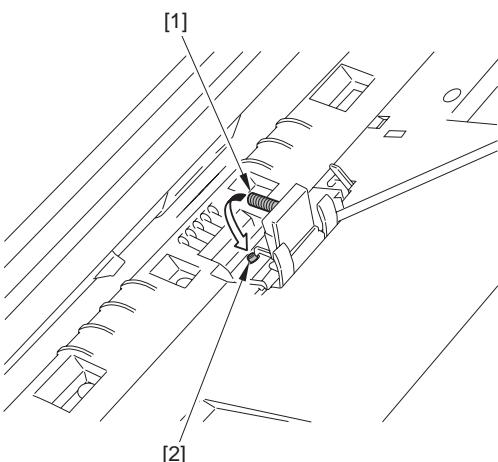

4.3.3.2 Removing the DADF Separation Pad


i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Open the DADF cover [1] in the direction shown by an arrow.

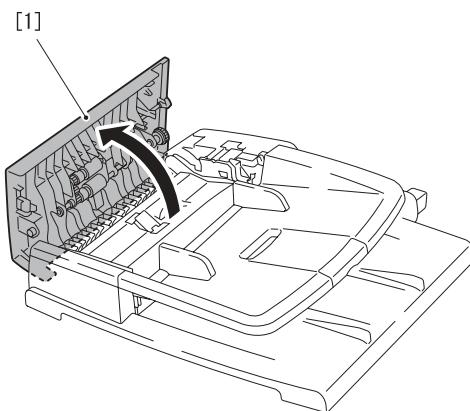



F-4-42

- 2) Open the inner guide [1] in the direction shown by an arrow.

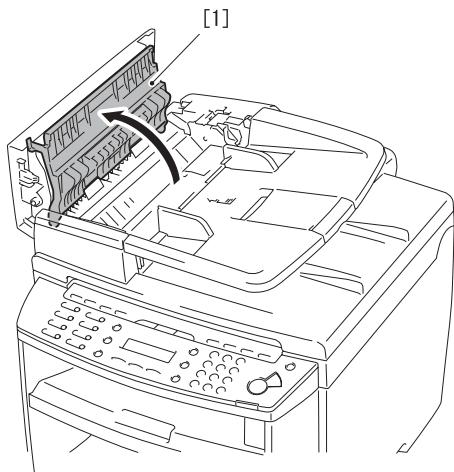


F-4-43

- 3) Remove two screws [1]. Hold the protrusion [2] and remove the separation pad cover [3].

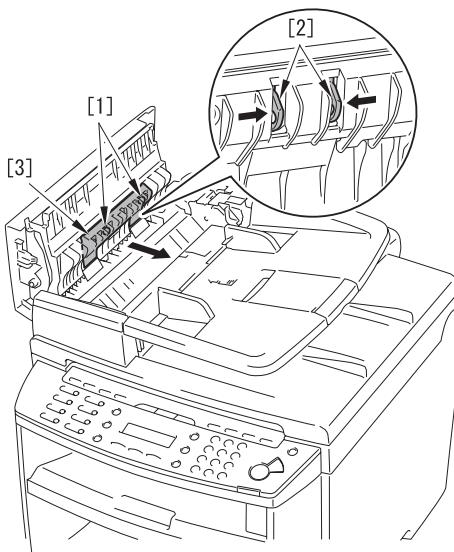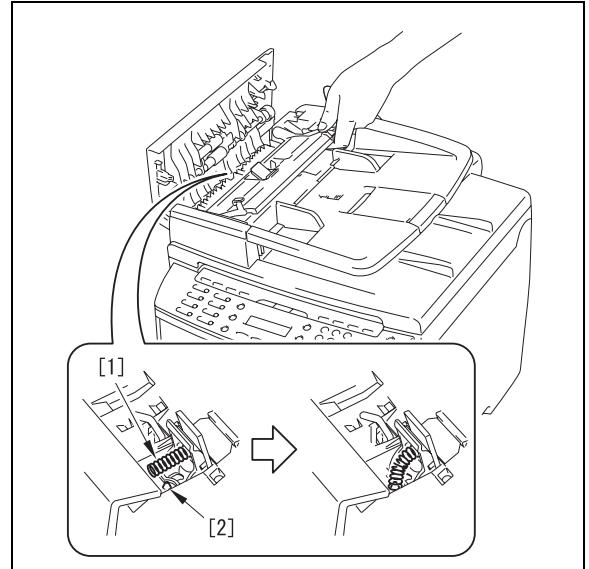

F-4-44

- 4) Move the separation pad [1] in the direction shown by an arrow [A] and then move it in the direction shown by an arrow [B].

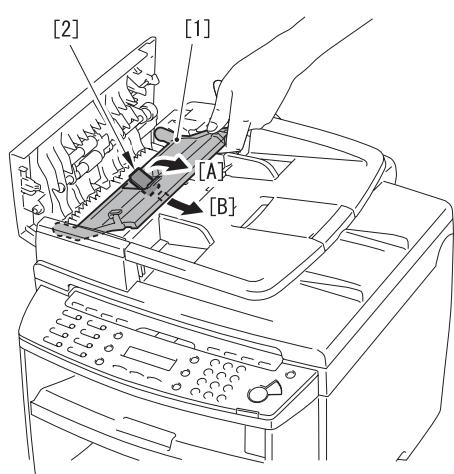

F-4-45



Points to Note when Attaching

Insert the spring [1] of the separation pad into the boss [2].

Chapter 5 Laser Exposure


Contents

5.1 Overview/Configuration	5-1
5.1.1 Overview	5-1
5.2 Controlling the Laser Activation Timing.....	5-2
5.2.1 Laser ON / OFF Control	5-2
5.3 Controlling the Intensity of Laser Light	5-2
5.3.1 Auto Photoelectric Current Control (APC).....	5-2
5.4 Controlling the Laser Scanner Motor.....	5-4
5.4.1 Overview	5-4
5.4.2 Scanner Motor Speed Control.....	5-4
5.4.3 Detection of Fault of the Scanner Motor	5-4
5.5 Parts Replacement Procedure.....	5-5
5.5.1 Laser/Scanner Unit.....	5-5
5.5.1.1 Preparation for Removing the Laser Scanner Unit	5-5
5.5.1.2 Removing the Laser Scanner Unit	5-5

5.1 Overview/Configuration

5.1.1 Overview

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

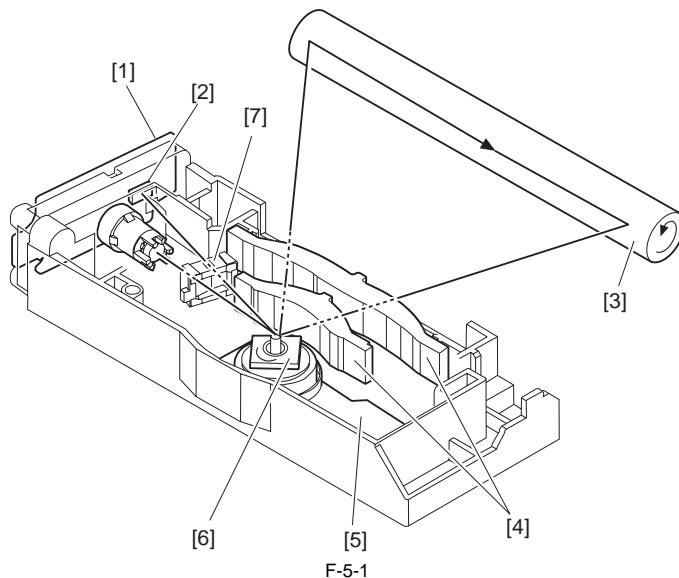

[1] Laser driver PCB

[5] Scanner motor

[2] BD sensor

[6] Four-surface mirror

[3] Photosensitive drum

[7] Cylindrical lens

[4] Condensing lens

F-5-1

The laser scanner assembly is composed of the laser driver and the scanner motor etc., and controlled by the signal input from the DCNT PCB. The laser driver emits laser diode according to the laser control signal and the video signal from the DCNT PCB.

The laser beam passes the cylindrical lens, and reaches the four-surface mirror rotating at constant speed.

The laser beam reflected by the four-surface mirror passes through the condensing lens placed in front of the four-surface mirror and focuses on the photosensitive drum.

When the four-surface mirror rotates at constant speed, the laser beam on the photosensitive drum scans the photosensitive drum at constant speed.

When the photosensitive drum rotates at constant speed and the laser beam scans the photosensitive drum at constant speed, the latent image is formed on the photosensitive drum.

MEMO:

E100: When the error related to the following laser exposure occurs, error code (E100) is lit.

BD fault

If /BDI signal cannot be detected in 0.1 sec after forced acceleration of the scanner motor or the specified value of /BDI signal cycle cannot be detected for 2 sec or more after the scanner motor reached the specified rotation, it should be judged as BD fault.

Scanner fault

If /BDI signal cannot be detected 1.5 sec after completing forced acceleration of the scanner motor, extend the detection time by 120 sec. If the specified value of /BDI signal cycle cannot be detected during that time, it should be judged as scanner fault.

BD error

If /BDI signal cannot be detected at the specified cycle during /BDI signal output, it should be judged as BD error.
If the case of the following conditions, it should not be judged as BD error.

In the case that door open is detected in 0.2 sec after BD error was detected.




The laser scanner has the components unadjustable in the field. Never disassemble the laser scanner unit.

5.2 Controlling the Laser Activation Timing

5.2.1 Laser ON / OFF Control

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

This is the control where the laser driver turns on / off the laser diode (LD) based on the laser control signal sent from the DCNT PCB. The following is the circuit diagram for laser control.

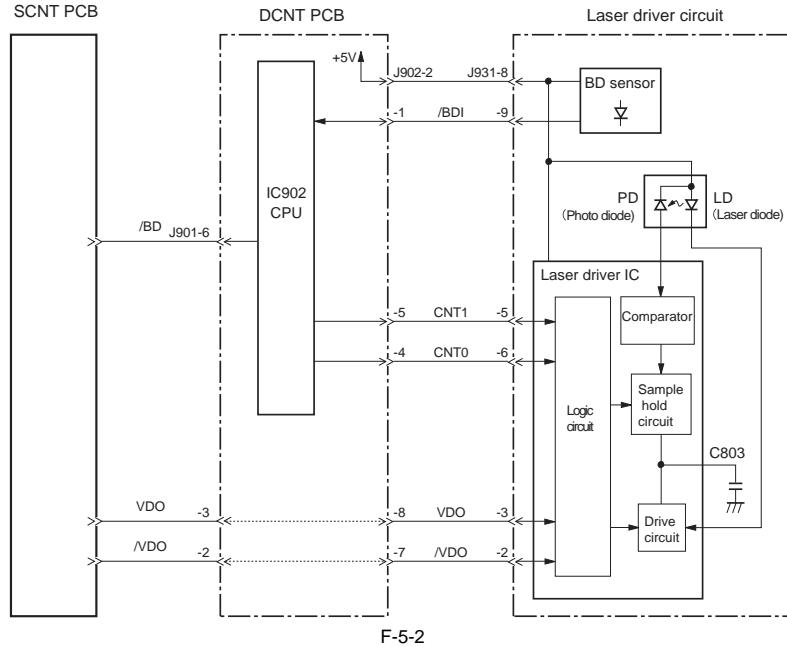

F-5-2

The DCNT PCB sends the video signal (VDO, /VDO) for image formation and the laser control signal (CNT0, CNT1) for switching the laser operation mode to the logic circuit in the laser driver IC.

The laser driver IC performs laser control based on the combination of CNT0 and CNT1 signals.

The following chart shows the combination of the laser control signals (CNT0, CNT1).

T-5-1

Operation mode	CNT0	CNT1	Remarks
Discharge mode	L	L	Discharge of C803
Print mode	H	L	Use at normal printing
LD APC mode	L	H	Use at LD APC
LD forced OFF mode	H	H	Use at masking image

5.3 Controlling the Intensity of Laser Light

5.3.1 Auto Photoelectric Current Control (APC)

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

This is the control to emit the definite level of laser diode.

There are initial APC during initial rotation (note 1) and line space APC during printing (note 2), which are performed in the same procedure. The following is its procedure.

- 1) When the laser control signal (CNT0, CNT1) turned into LD APC mode, the laser driver emits LD forcedly.
- 2) After being detected with the photodiode (PD), the LD emission level as current is converted to the one as voltage and compared with the reference voltage (the voltage equivalent to the target laser level).
- 3) The laser driver controls the laser current until it reaches the voltage of LD target level.
- 4) When the laser control signal turns into LD forced OFF mode, LD is forcedly off and the laser driver converts the adjusted laser level to the voltage of the condenser and keeps it.



Note 1. Initial APC

APC during initial rotation. Laser level is adjusted by APC.

Note 2. Line space APC

APC during printing. Adjustment of laser level for one line is performed before writing one line.


5.4 Controlling the Laser Scanner Motor

5.4.1 Overview

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

This is the control to rotate the scanner motor at constant speed.

The scanner motor is the 3-phase DC brush-less motor with hall element included, and is combined with the drive circuit. The following chart shows the control circuit for the scanner motor.

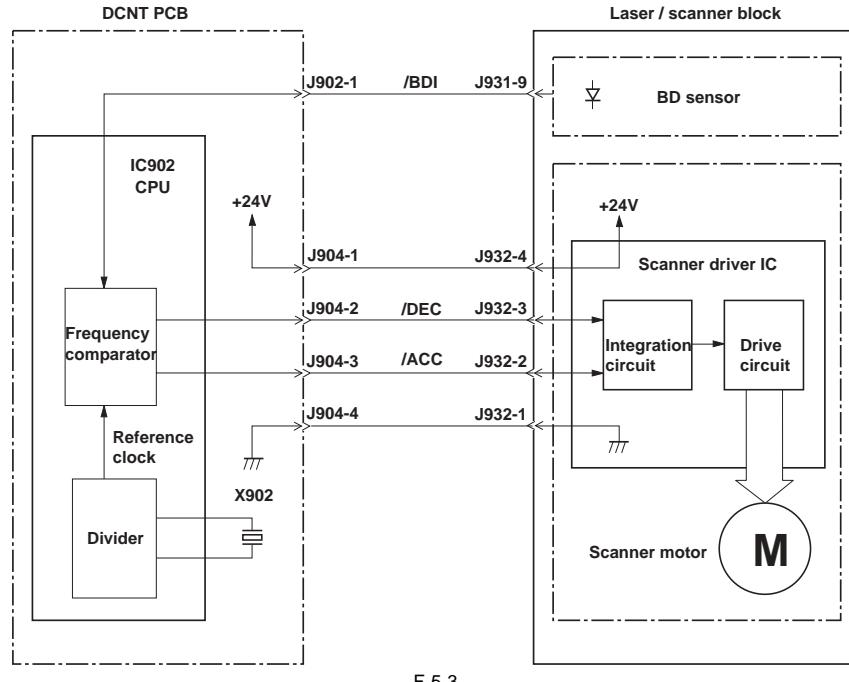

F-5-3

5.4.2 Scanner Motor Speed Control

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

This is the control to rotate the scanner motor at constant speed.

The following is the procedure of this control.

- 1) At activating the scanner motor, CPU outputs /ACC signal to the scanner driver IC to accelerate the scanner motor forcedly. The scanner motor will start rotating.
- 2) CPU periodically turns on the laser, and compares /BDI signal and the cycle of the reference clock to detect the rotation of the scanner motor.
- 3) When the rotation of the scanner motor exceeds the specified value, CPU outputs /DEC signal to decelerate the scanner motor. CPU controls /ACC or /DEC signal to control the rotation of the scanner motor until it becomes its specified value.

5.4.3 Detection of Fault of the Scanner Motor

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

CPU of the DCNT PCB monitors the frequency comparator to judge if the scanner motor rotates at the specified rotation frequency. When the following statuses occur, CPU judges that there is a fault or error and stops the engine. At the same time, it notices the details of the error to the SCNT PCB.

1) Scanner fault

If /BDI signal cannot be detected 1.5 sec after completing forced acceleration of the scanner motor, extend the detection time by 120sec. If the specified cycle of /BDI signal cannot be detected, it should be judged as scanner fault.

2) BD fault

If /BDI signal cannot be detected in 100msec after forced acceleration of the scanner motor or the specified cycle of /BDI signal cannot be detected for 2 sec or more after the scanner motor reached its specified rotation, it should be judged as BD fault.

3) BD error

If /BDI signal cannot be detected at the specified cycle while CPU outputs /BD signal to the SCNT PCB, it should be judged as BD error. If door open is detected in 200msec after BD error was detected, CPU does not transmit BD error to the SCNT PCB.

5.5 Parts Replacement Procedure

5.5.1 Laser/Scanner Unit

5.5.1.1 Preparation for Removing the Laser Scanner Unit


i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Remove the front cover.[\(page 9-2\)](#) Reference[Removing the Front Cover]
- 2) Remove the right cover.[\(page 9-2\)](#) Reference[Removing the Right Cover]
- 3) Remove the left cover.[\(page 9-3\)](#) Reference[Removing the Left Cover]
- 4) Remove the DCNT PCB.[\(page 9-6\)](#) Reference[Removing the DCNT PCB]

5.5.1.2 Removing the Laser Scanner Unit

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Remove the shutter arm [1].
- 2) Remove the 4 screws [2] to remove the laser scanner unit [3].

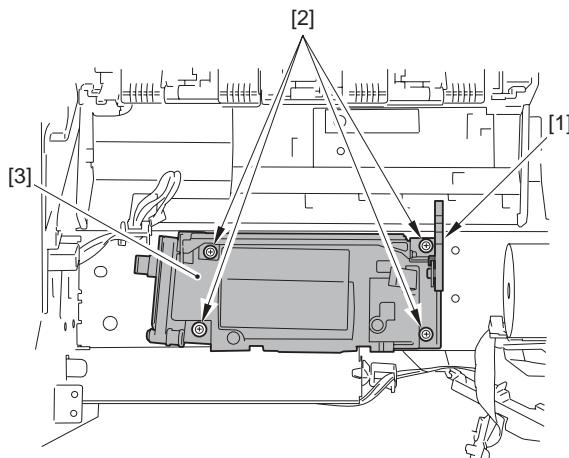

F-5-4

Chapter 6 Image Formation

Contents

6.1 Overview/Configuration	6-1
6.1.1 Configuration	6-1
6.1.2 Print Process.....	6-1
6.2 Driving and Controlling the High-Voltage System	6-2
6.2.1 Generation of Transfer Charging Bias	6-2
6.3 Toner Cartridge	6-3
6.3.1 Toner Level Detection	6-3
6.4 Parts Replacement Procedure.....	6-4
6.4.1 Transfer Charging Roller	6-4
6.4.1.1 Removing the Transfer Charging Roller.....	6-4

6.1 Overview/Configuration


6.1.1 Configuration

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

The image forming system is the core part of this machine, and is composed of the cartridge, the transfer charging roller, the fixing assembly, etc. When receiving the print command from the SCNT PCB, the DCNT PCB activates the main motor to rotate the photosensitive drum, the developing cylinder, the primary charging roller, the transfer charging roller and the pressure roller.

The surface of the photosensitive drum is evenly charged negative by the primary charging roller, and the laser beam converted with the video signal (VDO, /VDO) is reflected to the surface of the photosensitive drum to form the latent image by the laser diode.

The latent image formed on the photosensitive drum is turned visible with the toner on the developing cylinder and is transferred on the paper by the transfer charging roller. The transferred toner turns into the permanent image on the paper when the heat and pressure are applied there at the fixing assembly. The cleaner blade removes the residual toner on the surface of the photosensitive drum, whose potential is made even by the primary charging roller to be ready for the formation of the next latent image.

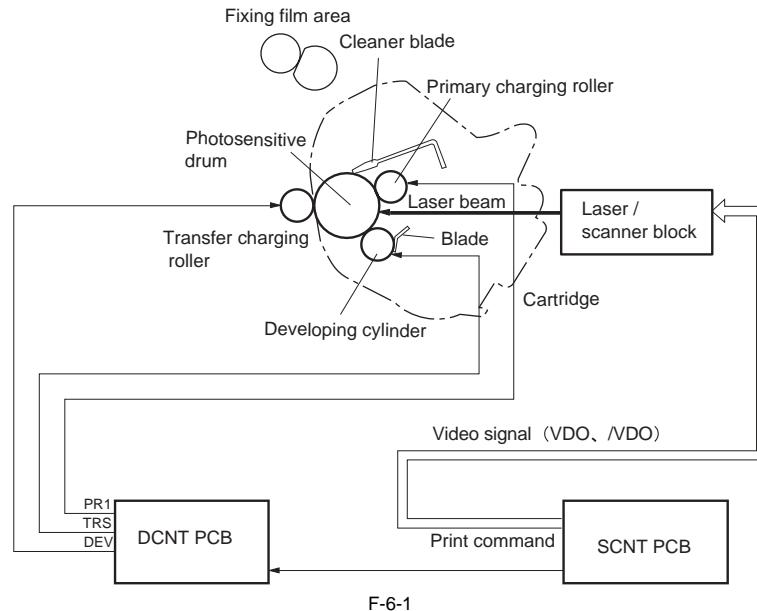


6.1.2 Print Process

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

The print process shows the basic operation process for image formation by the printer.

The print process of this machine has the main 5 blocks and 7 steps. The toner image is formed on papers by following the steps of each block. The following is the outline of the blocks and steps of the print process.

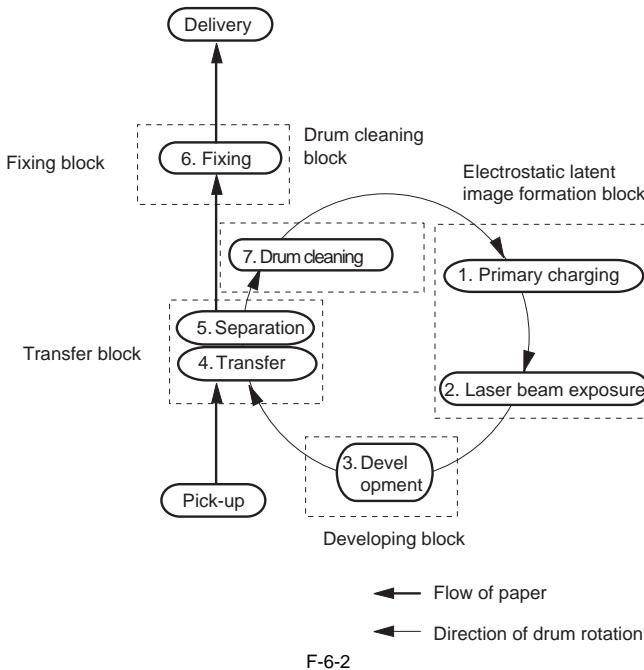

1) Electrostatic latent image formation block

Electrostatic images are formed on the photosensitive drum.

Step1: Primary charging (Charges negative potential evenly on the surface of the photosensitive drum)

Step 2: Laser beam exposure (Forms electrostatic images on the photosensitive drum)

2) Developing block

Put the toner on the electrostatic latent image on the surface of the photosensitive drum to visualize

Step 3: Development

3) Transfer block

The toner image on the surface of the photosensitive drum is transferred to papers.

Step 4: Transfer (Transfers the toner on the photosensitive drum to a paper)

Step 5: Separation (Separates the paper from the photosensitive drum)

4) Fixing block

The toner image is fixed on the paper.

Step 6: Fixing

5) Drum cleaning block

The residual toner on the photosensitive drum is removed.

Step 7: Drum cleaning (Removes the residual toner on the photosensitive drum)

6.2 Driving and Controlling the High-Voltage System

6.2.1 Generation of Transfer Charging Bias

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

The transfer charging bias (TRS) is output to transfer the toner on the photosensitive drum to papers.

There are transfer charging DC positive bias and transfer charging DC negative bias generated at the transfer charging bias generation circuit in the high-voltage power supply circuit. The transfer charging DC positive bias is output to the transfer charging roller at transferring the toner. The transfer charging DC negative bias is applied to the transfer charging roller at cleaning the transfer charging roller.

The transfer charging bias generation circuit applies these transfer charging biases to the transfer charging roller according to each print sequence.

The following are the biases for print sequences.

- Cleaning bias:

This is the bias for transferring the toner on the photosensitive drum to the paper at the time of print sequence. The transfer charging DC positive bias is applied to the transfer charging roller.

- Sheet-to-sheet bias:

This is the bias to prevent the residual toner on the photosensitive drum from being attracted to the transfer charging roller, at between sheets during continuous printing. Faint transfer charging DC positive bias is applied to the transfer charging roller.

- Cleaning bias:

This is the bias to return the residual toner on the transfer charging roller to the photosensitive drum at the time of warm-up or last rotation sequence. The transfer charging DC negative bias is applied to the transfer charging roller.

The transfer charging DC positive bias is changed due to the instruction of the DCNT PCB. To realize appropriate transfer density, the DCNT PCB changes the voltage of the transfer charging DC positive bias for constant current control according to the transfer current feedback signal (TRCRNT) sent from the transfer charging bias generation circuit.

6.3 Toner Cartridge

6.3.1 Toner Level Detection

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

Overview

The toner sensor (magnetic sensor) detects the remaining toner level.

When a toner cartridge is inserted, the toner sensor becomes in contact with the lower part of the cartridge and converts the magnetic force change in the cartridge filled with the toner into voltage.

The MPU of the DCNT PCB compares this output voltage of the toner sensor with the reference value, and detects the toner level.

If the toner level comes near approx.100 sheets (standard original), the following message is shown on the display.

When the toner cover is open, the message will disappear.

[TONER LOW

PREPARE NEW TONER]

 If the toner cartridge is not exchanged, the message is shown again when the toner cover is closed.

Toner detection sequence

Detection is performed per 2.16 sec after 550 ms passing since the main motor was activated. The CPU of the DCNT PCB compares the output voltage of the toner sensor with the reference value.


At initialize rotation after power-on and opening/closing the toner cover, it is detected once at 4.32 sec.

6.4 Parts Replacement Procedure

6.4.1 Transfer Charging Roller


i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Open the control panel assembly [1].
- 2) Open the printer cover [2].

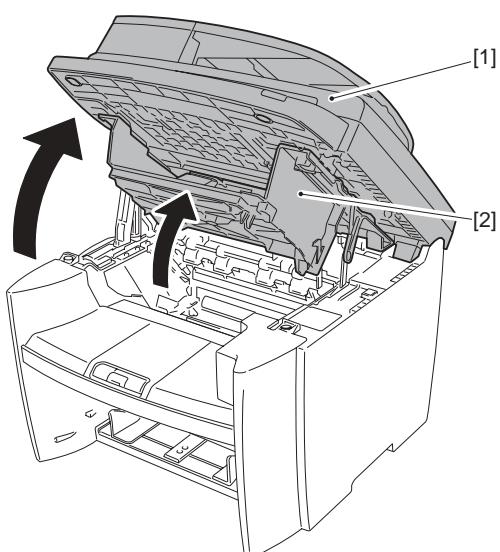


F-6-3


- 3) Unhook the 2 claws [1] and the claw [2] to remove the transfer charging roller [3] with the transfer guide [4] in the direction of the arrow.

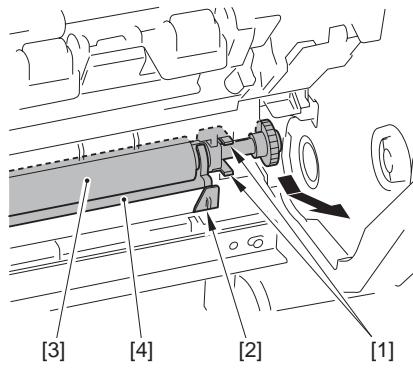

F-6-4

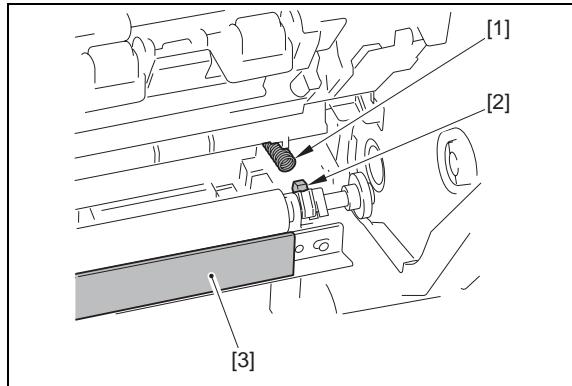

- 4) Remove the transfer charging roller [2] from the transfer guide [1].

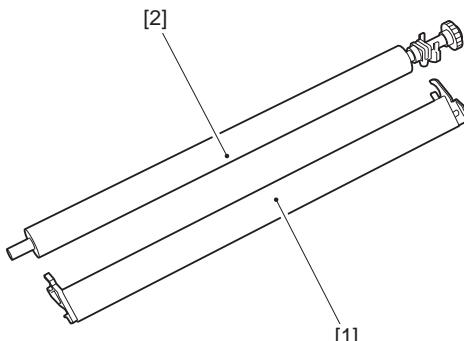

F-6-5



Do not touch the roller with bare hands.



Points to Note when Attaching

- Insert the spring [1] into the boss [2] of the bushing.
- Push in the transfer guide [3] until it stops.

Chapter 7 Pickup and Feed System

Contents

7.1 Overview/Configuration	7-1
7.1.1 Overview	7-1
7.2 Other Control	7-2
7.2.1 Overview	7-2
7.3 Detection Jams	7-3
7.3.1 Jam Detection Outline.....	7-3
7.3.1.1 Overview	7-3
7.3.2 Delay Jams	7-3
7.3.2.1 Pickup Delay Jam.....	7-3
7.3.2.2 Delivery Delay Jam.....	7-3
7.3.3 Stationary Jams	7-3
7.3.3.1 Pickup Stationary Jam.....	7-3
7.3.3.2 Delivery Stationary Jam.....	7-3
7.3.4 Other Jams	7-3
7.3.4.1 Door Open Jam	7-3
7.3.4.2 Wrapping Jam	7-4
7.3.4.3 Residual Jam at Startup.....	7-5
7.4 Duplex Unit.....	7-6
7.4.1 Overview	7-6
7.5 Parts Replacement Procedure.....	7-7
7.5.1 Main Motor	7-7
7.5.1.1 Preparation for Removing Main Motor.....	7-7
7.5.1.2 Removing Main Motor.....	7-7
7.5.2 Separation Pad	7-7
7.5.2.1 Preparation for Removing Separation Pad.....	7-7
7.5.2.2 Removing Separation Pad	7-7
7.5.3 Pickup Roller	7-7
7.5.3.1 Removing Pickup Roller	7-7

7.1 Overview/Configuration

7.1.1 Overview

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn


The pickup/feeding system is the part to pickup and feed a paper, and it is composed of the main motor, solenoid, and various motors. In this machine, a paper is picked up from either the pickup tray or the manual feed tray, and it is delivered from the delivery tray.

A paper set in either the pickup tray or the manual feed tray is picked up with the same pickup roller. Then, it is fed to the photosensitive drum, transfer charging roller, fixing film, pressure roller, and face-down delivery roller, in that order, and is delivered to the delivery tray.

On the feed path of a paper, the following 4 photointerrupters are allocated: the leading edge sensor (PS801), paper width/cartridge detect sensor (PS802), delivery sensor (PS803), and delivery paper width sensor (PS804), and they detect either the arrival or passage of paper.

If a paper does not arrive or pass each sensor, except the fixing paper width sensor, within the predetermined time, CPU on the DCNT PCB judges as a jam and notify the occurrence of jam to the SCNT PCB.

The diagrammatic illustration for each motor, solenoid, and sensor is shown below.

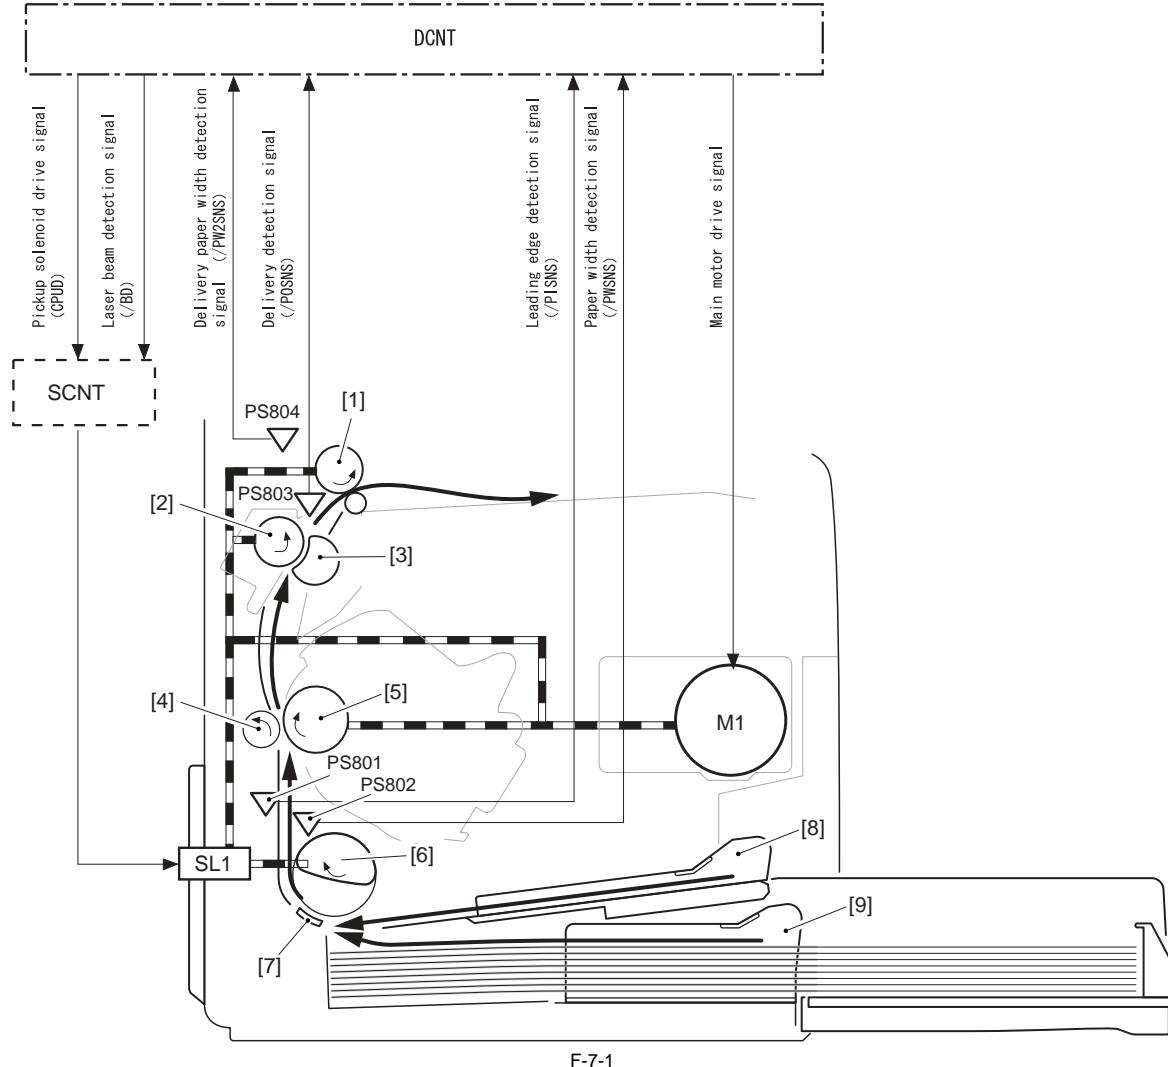

[1] Face-down delivery roller

[2] Pressure roller

[3] Fixing film unit

[4] Transfer charging roller

[5] Photosensitive drum

[6] Pickup roller

[7] Separation pad

[8] Manual feed tray

[9] Pickup tray

M1: Main motor

SL1: Cassette pickup solenoid

PS801: Leading edge sensor

PS802: Paper width/cartridge detect sensor

PS803: Delivery sensor

PS804: Delivery paper width sensor

7.2 Other Control

7.2.1 Overview

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

Pickup/Feed Operation


The pickup/feed assembly is the mechanism to pickup and feed paper one at a time from the pickup tray or the manual feed tray. The pickup/feed operation of the machine is explained below.

- 1) Right after the DCNT PCB receives a print command from the SCNT PCB, it rotates the main motor (M1). By doing so, other rollers, except the Cassette pickup solenoid, start to rotate.
- 2) When it becomes initial rotation ready state, the pickup solenoid (SL1) turns ON for about 0.2 sec. As a result of that, the rotation of the main motor is transferred and the pickup roller starts to rotate.

Initial Rotation Ready

It indicates the following state: the main motor drives, and after a certain period of time, the temperature of the fixing assembly reaches to the specified value and the scanner motor reaches to the specified number of rotation.

- 3) The pickup cam rotates along with the rotation of the pickup roller, and by following the shape of the pickup cam, the lifting plate is pushed up with the force of the spring. A paper pushed up with the lifting plate is picked up by the rotation of the pickup roller and fed to inside of the machine.
- 4) After a certain period of time that the leading edge sensor (PS801) detects the leading edge of picked up paper, the DCNT PCB transmits the laser beam detection signal (/BD) to the SCNT PCB.
- 5) Based on the /BD signal, the SCNT PCB transmits the video signal to the laser/scanner assembly and an image is formed on the photosensitive drum. Because of that, it is controlled to match the leading edges of an image and a paper.
- 6) A paper is delivered to the delivery tray with the rotation of the photosensitive drum, pressure roller, and face-down delivery roller.

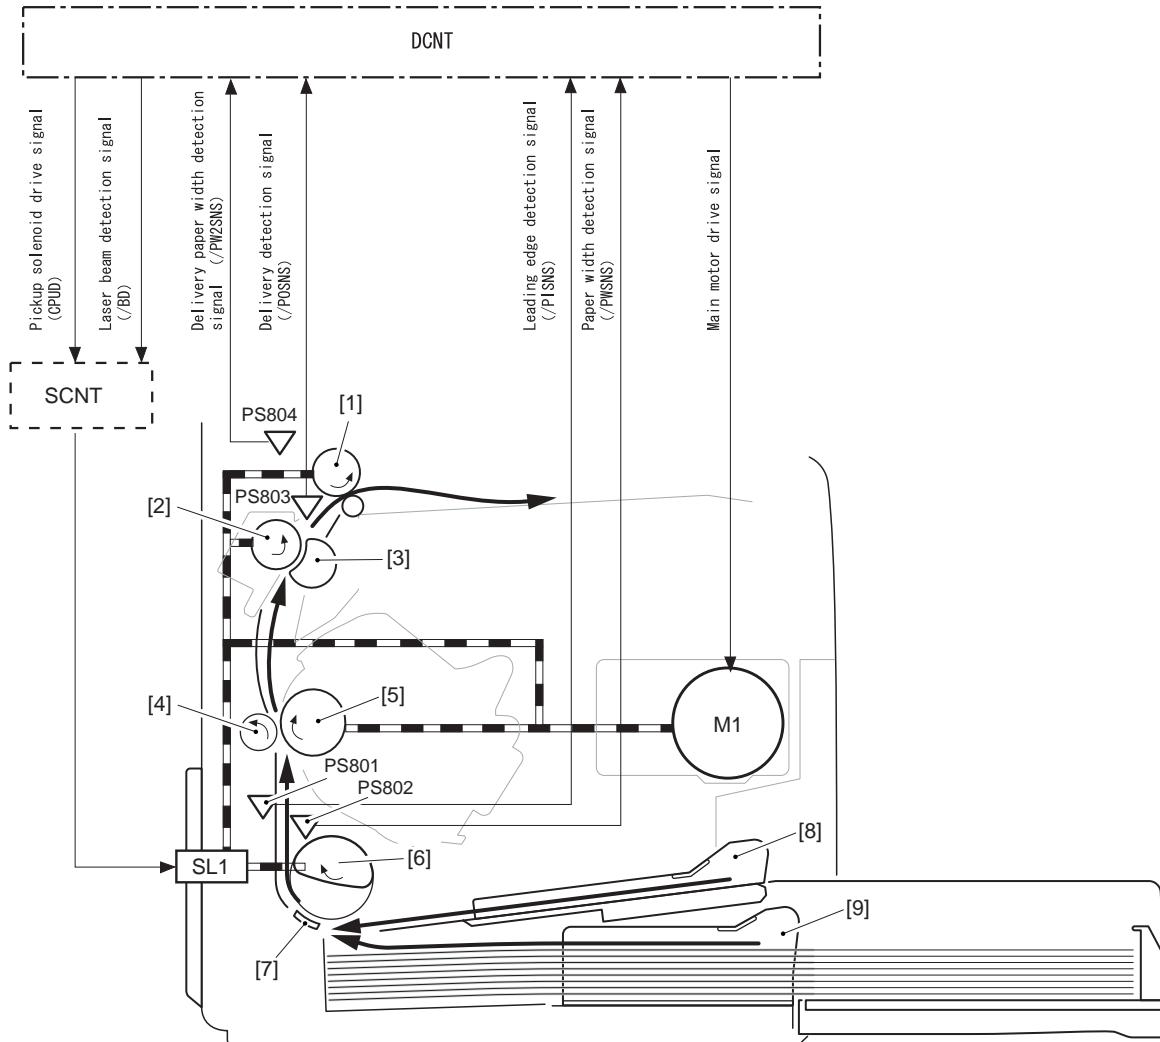

F-7-2

- [1] Face-down delivery roller
- [2] Pressure roller
- [3] Fixing film unit
- [4] Transfer charging roller
- [5] Photosensitive drum
- [6] Pickup roller

[7] Separation pad
 [8] Manual feed tray
 [9] Pickup tray
 M1: Main motor
 SL1: Cassette pickup solenoid
 PS801: Leading edge sensor
 PS802: Paper width/cartridge detect sensor
 PS803: Delivery sensor
 PS804: Delivery paper width sensor

7.3 Detection Jams

7.3.1 Jam Detection Outline

7.3.1.1 Overview

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

The machine has the following paper sensors to detect the presence/absence of paper at the time of startup, opening the door, or feeding a paper, as well as to detect whether a paper is fed normally.

1. Leading edge sensor (PS801)
2. Paper width/cartridge detect sensor (PS802)
3. Delivery sensor (PS803)
4. Delivery paper width sensor (PS804)

In terms of jam, it is judged by whether a paper is at the sensor assembly at the time of the check time memorized in the CPU beforehand. If the CPU judges as the occurrence of jam, the printing operation is aborted and at the same time, it notifies it to the SCNT PCB.

7.3.2 Delay Jams

7.3.2.1 Pickup Delay Jam

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

In order to prevent the pickup delay jam due to the pickup failure, the machine executes the retry control that performs the pickup operation up to twice. In the second pickup operation, if the leading edge sensor (PS801) cannot detect the leading edge of paper within about 1.45 sec since the Cassette pickup solenoid (SL1) turns ON, the DCNT PCB judges as the pickup delay jam.

7.3.2.2 Delivery Delay Jam

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

If the delivery sensor (PS803) cannot detect the leading edge of paper after passing about 1.65 sec from the detection of the leading edge of paper with the leading edge sensor (PS801), the DCNT PCB judges as the delivery delay jam.

7.3.3 Stationary Jams

7.3.3.1 Pickup Stationary Jam

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

If the trailing edge of paper cannot be detected after passing about 5.4 sec since the leading edge sensor (PS801) detects the leading edge of paper, the DCNT PCB judges as the pickup stationary jam.

7.3.3.2 Delivery Stationary Jam

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

If the delivery sensor (PS803) cannot detect the leading edge of paper within about 1.48 sec after the leading edge sensor (PS801) detects the trailing edge of paper, the DCNT PCB judges as the delivery stationary jam.

7.3.4 Other Jams

7.3.4.1 Door Open Jam

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

If the leading edge sensor (PS801) or the delivery sensor (PS803) detects a paper when door open is detected, the DCNT PCB judges as the door open jam.

7.3.4.2 Wrapping Jam

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn


CPU executes the wrapping jam detection after it judges there is no delivery delay jam present.
If the delivery sensor (PS803) detects the trailing edge of paper within the predetermined time (from after about 0.08 sec since the detection of the paper leading edge by the delivery sensor (PS803) until about 1.09 sec after the detection of the paper trailing edge by the leading edge sensor (PS801)), CPU judges as the wrapping jam.

If it judges as the wrapping jam, it notifies the occurrence of the delivery stationary jam to the SCNT PCB.

7.3.4.3 Residual Jam at Startup

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

If the sensor (leading edge sensor (PS801) or delivery sensor (PS803), or delivery paper width sensor (PS804)) detects a paper at the start of initial rotation, CPU judges as the residual jam at startup.
When there is paper in inside the machine, the leading edge sensor flag is pushed up with paper, and paper having is judged.

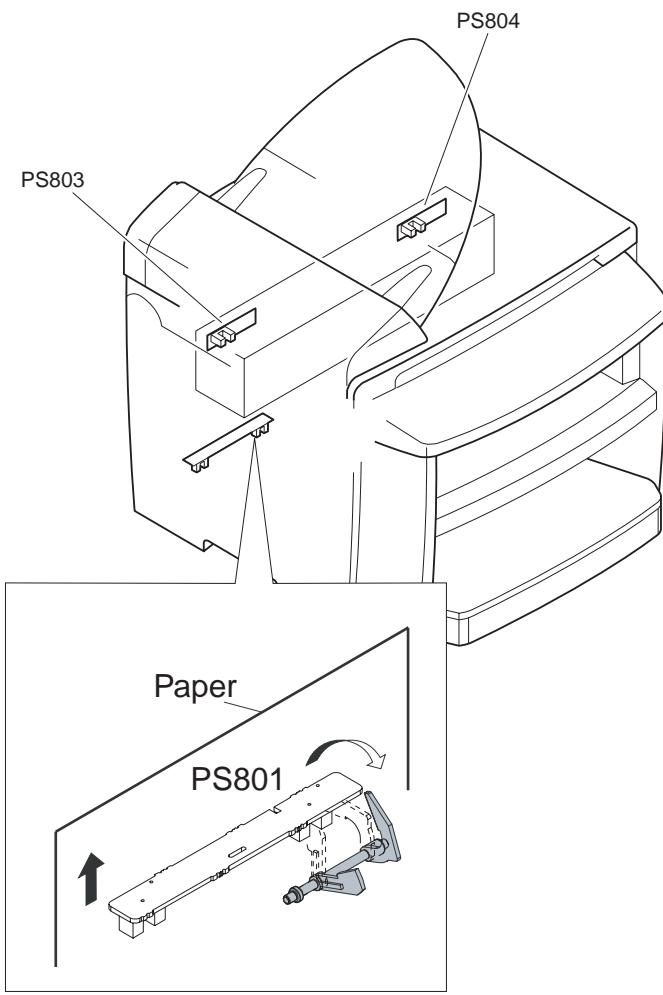


F-7-3

7.4 Duplex Unit

7.4.1 Overview

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

The duplexing pick up operation of this machine is performed by the drive of the main motor (M1) under CPU control of the DCNT PCB. After the machine completes the 1st print and the paper's trailing edge passes over the delivery sensor (PS803), the duplexing drive solenoid (SL2) is turned on and the drive of the main motor (M1) is transmitted to the delivery roller and the duplexing feed roller. By turning the delivery roller in reverse direction, the paper is lead to the duplexing feed unit, and sent to the feed roller via duplexing feed roller. There is no sensor on the duplexing paper's feeding path to detect the arrival/passage of paper. There is no stationary function to stop and retain paper in duplexing unit.

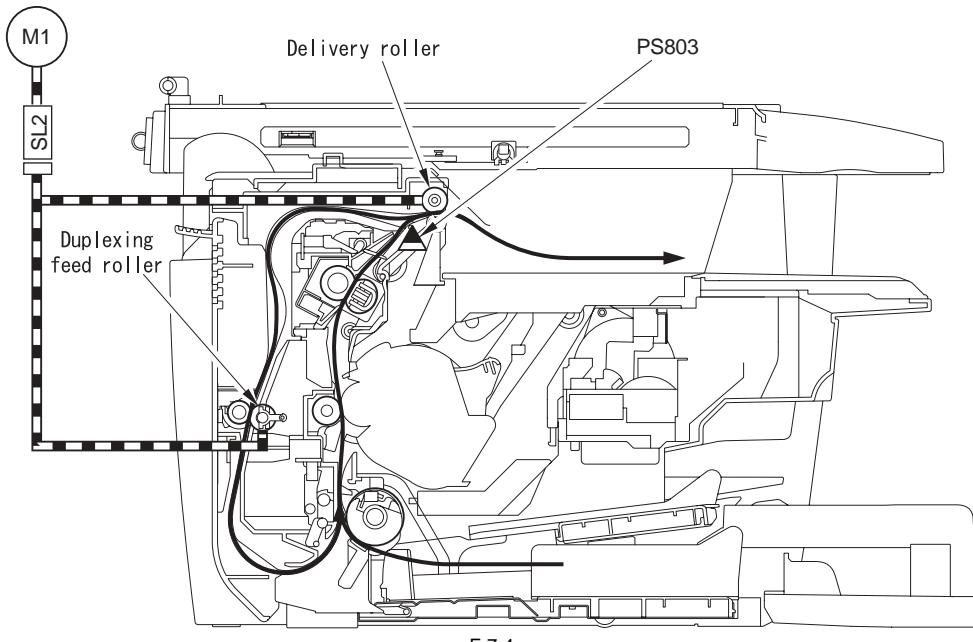

F-7-4

7.5 Parts Replacement Procedure

7.5.1 Main Motor

7.5.1.1 Preparation for Removing Main Motor


i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Remove the front cover. [\(page 9-2\)](#) Reference[Removing the Front Cover]
- 2) Remove the right cover. [\(page 9-2\)](#) Reference[Removing the Right Cover]
- 3) Remove the left cover. [\(page 9-3\)](#) Reference[Removing the Left Cover]
- 4) Remove the DCNT PCB. [\(page 9-6\)](#) Reference[Removing the DCNT PCB]
- 5) Remove the laser scanner unit. [\(page 5-5\)](#) Reference[Removing the Laser Scanner Unit]

7.5.1.2 Removing Main Motor

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Remove the 2 screws [1], and remove the main motor [2].

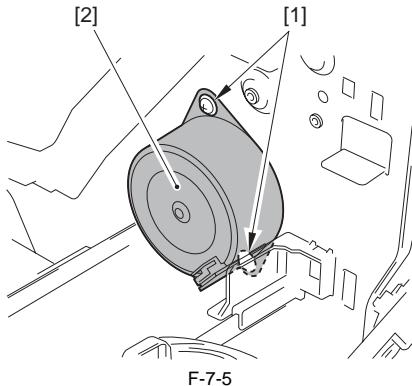

F-7-5

7.5.2 Separation Pad

7.5.2.1 Preparation for Removing Separation Pad


i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Remove the front cover. [\(page 9-2\)](#) Reference[Removing the Front Cover]
- 2) Remove the right cover. [\(page 9-2\)](#) Reference[Removing the Right Cover]
- 3) Remove the left cover. [\(page 9-3\)](#) Reference[Removing the Left Cover]
- 4) Remove the rear cover. [\(page 9-2\)](#) Reference[Removing the Rear Cover]

7.5.2.2 Removing Separation Pad

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Remove the 2 screws [1], and remove the separation pad [2].

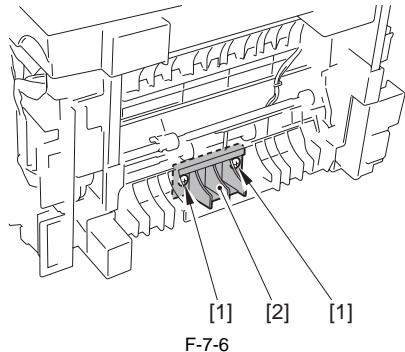


F-7-6

7.5.3 Pickup Roller

7.5.3.1 Removing Pickup Roller




i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Open the scanner unit [1].
- 2) Open the printer cover [2].

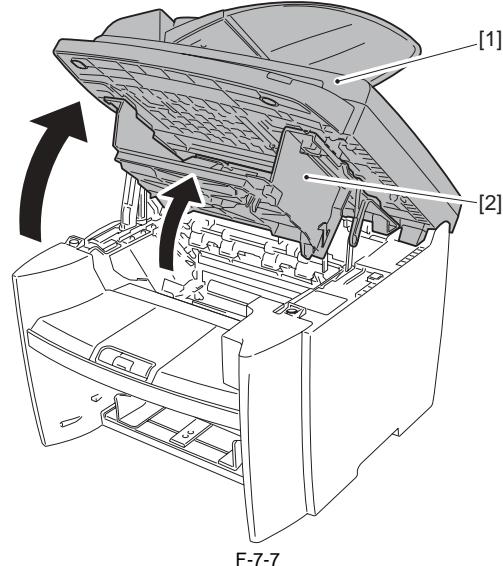

F-7-7

 - 3) Remove the pickup roller [2] by moving the 2 claws [1] to each end.

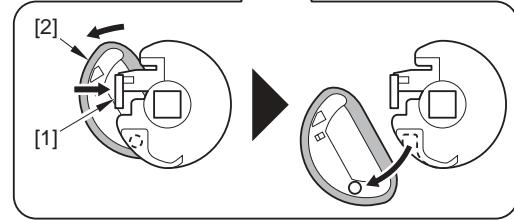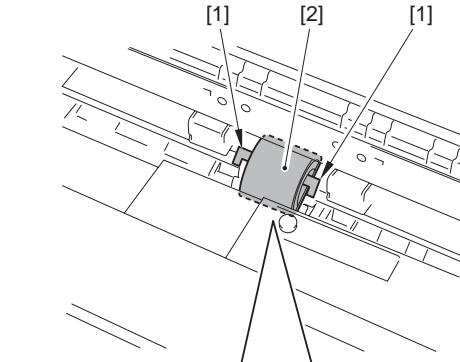

F-7-8

Chapter 8 Fixing System

Contents

8.1 Overview/Configuration	8-1
8.1.1 Specification/Control/Function List.....	8-1
8.1.2 Overview.....	8-1
8.2 Various Control Mechanisms.....	8-3
8.2.1 Controlling the Temperature of the Fixing Unit.....	8-3
8.2.1.1 Fixing Temperature Control.....	8-3
8.3 Protection Function	8-4
8.3.1 Protection Function	8-4
8.4 Parts Replacement Procedure.....	8-6
8.4.1 Fixing Unit	8-6
8.4.1.1 Preparation for Removing Fixing Assembly.....	8-6
8.4.1.2 Removing Fixing Assembly.....	8-6
8.4.2 Fixing Film Unit	8-6
8.4.2.1 Preparation for Removing Fixing Film Unit.....	8-6
8.4.2.2 Removing Fixing Film Unit.....	8-7

8.1 Overview/Configuration

8.1.1 Specification/Control/Function List

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

T-8-1

Item	Function/Method
Fixing method	On-demand fixing
Fixing heater	Flat heater
Fixing temperature detection	Thermistor (TH1): temperature control, detection of abnormality Temperature fuse (TP1): detection of abnormality
Fixing temperature control	Temperature control at startup Temperature control at normal times Temperature control at sheet-to-sheet interval
Protection function	Temperature error detection with the thermistor Temperature rise detection with the temperature fuse


8.1.2 Overview

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

The fixing unit employs the on-demand fixing method, and it is composed of fixing film unit, in which the fixing heater, thermistor, and temperature fuse are incorporated, and the pressure roller.

The pressure roller and the delivery roller are driven with the main motor (M1).

A paper separated from the photosensitive drum is fed to inside of the fixing assembly, and the toner is fixed on a paper with the fixing film and the pressure roller. A paper being fixed is detected with the delivery sensor (PS803); then, delivered to outside of the machine via the delivery roller.

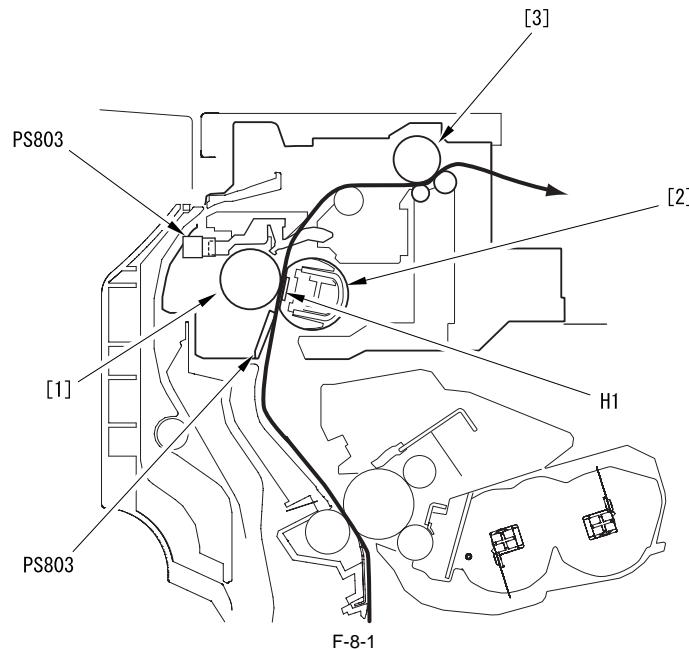

[1] Pressure roller

[2] Fixing film

[3] Delivery roller

H1: Fixing heater

PS803: Delivery sensor


The fixing heater is the heater (ceramic heater) that the heating pattern is deposited on the ceramic plate.

By heating the fixing film with the fixing heater, it gives heat to passing papers.

The thermistor (TH1) locates at the center of the fixing heater (H1), and detects the temperature of the heater.

The temperature fuse (TP1) locates at the top center of the fixing heater. If the temperature of the fixing heater increases abnormally, it blocks power supply to the heater by meltdown.

The temperature control of the fixing assembly composed of the foregoing components is executed at the fixing control circuit on the DCNT PCB with the instruction of the CPU (IC902). There are the fixing heater drive circuit and the fixing heater safety circuit in the fixing control circuit.

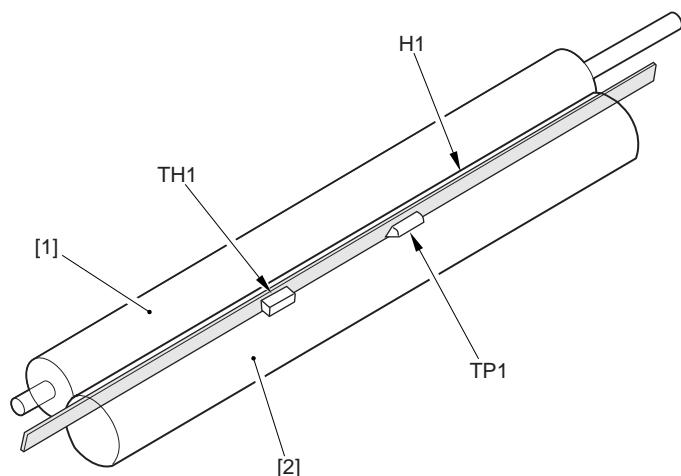

F-8-2

- [1] Pressure roller
- [2] Fixing film
- H1: Fixing heater
- TH1: Thermistor
- TP1: Temperature fuse

8.2 Various Control Mechanisms

8.2.1 Controlling the Temperature of the Fixing Unit

8.2.1.1 Fixing Temperature Control

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

With this control, the surface temperature of the fixing heater is detected, and also the drive signal of the fixing heater is controlled to maintain the target temperature of the fixing heater.

The temperature control of the fixing heater is executed with the following 3 modes:

Temperature Control at Startup:

The temperature control at startup is executed from the entry of print command to the DCNT PCB until the temperature of the fixing heater reaches the fixing target temperature.

The fixing target temperature is set to execute fixing with appropriate fixing temperature in accordance with paper type, size, thickness, and shape.

Temperature Control at Normal Times:

The temperature control at normal times is executed during printing to maintain the temperature of the fixing heater as its target temperature.

Temperature Control at Sheet-to-sheet Interval:

The temperature control at sheet-to-sheet interval is executed to keep the temperature lower than the target temperature in order to prevent the temperature raise at the area between a preceding sheet and a succeeding sheet in case of the envelop mode and the small size mode.

The temperature of the fixing heater is detected with the thermistor located on the fixing heater. When the surface temperature of the fixing heater increases, the resistance value of the thermistor is decreased, and the voltage of the fixing heater temperature detection signal of the thermistor is decreased.

The CPU (IC902) on the DCNT PCB monitors the voltage of the FSRTH signal. By outputting the fixing heater drive signal (FSRD) in accordance with the voltage, the CPU makes the phototriac coupler to turn ON/OFF, and it controls the temperature of the fixing heater to be the specified value.


The CPU starts the fixing heater temperature control to be 100 deg C when the power is ON.

Because the viscosity of grease inside of the fixing film unit is high, melting the grease fully prevents feed fault inside of the fixing assembly or faulty image.

Fixing Mode:

In this machine, the fixing mode is determined by detecting paper size based on the time that a paper needs to go through the paper leading edge sensor, the paper width sensor, and the delivery paper width sensor.

The relationship between paper size being detected and the fixing mode is shown below. (From A to D indicate paper size.)

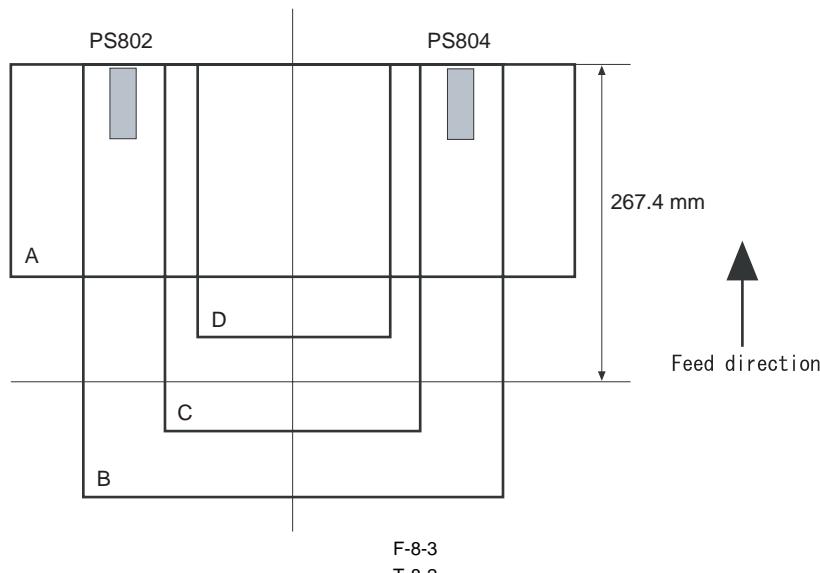

F-8-3


T-8-2

	Paper length	Paper width/cartridge detect sensor PS802	Delivery paper width sensor PS804	Fixing mode
A	Less than 267.4 mm	Detect	Detect	Envelop
B	267.4 mm or above	Detect	Detect	Normal*1
C	267.4 mm or above	Not detect	Not detect	Small size paper

D	Less than 267.4 mm	Not detect	Not detect	Envelop
---	--------------------	------------	------------	---------

In order to prevent temperature increase at the end of the fixing film that occurs when putting papers on one side and passing them through the machine while the paper width guide is fully opened, the machine has the delivery paper width sensor.

The relationship between paper size when putting papers on one side and passing them through the machine and the fixing mode is shown below. (E and F indicate paper size.)

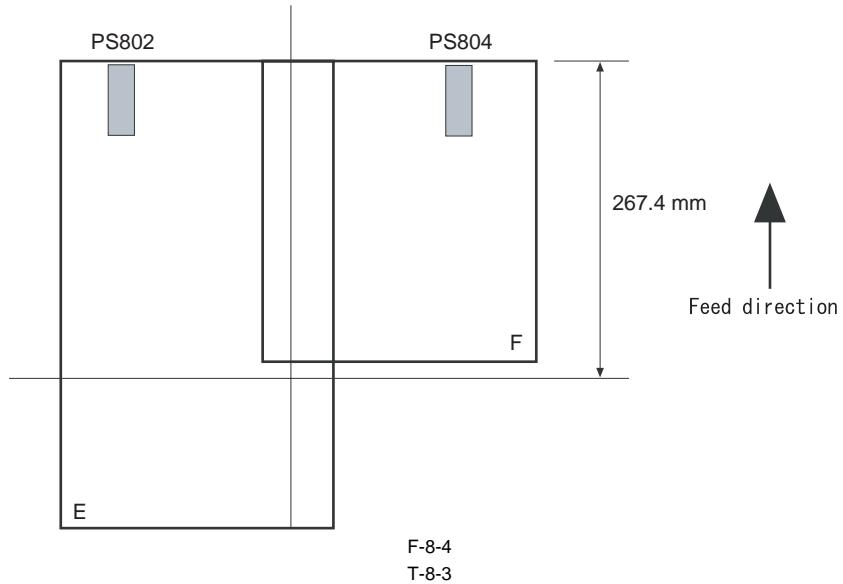

	Paper length	Paper width sensor	Delivery paper width sensor	Fixing mode
E	No object *2	Detect	Not detect	Small size paper mode
F	No object *2	Not detect	Detect	Small size paper mode

*1: Eight modes, except envelop/small size paper

*2: When setting papers at the end of the paper guide and passing them through the machine, it becomes the small size paper mode regardless of paper length.

8.3 Protection Function

8.3.1 Protection Function

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

In order to prevent the fixing heater runaway, the machine has the following 3 protection functions.

1. Protection function with CPU
2. Protection function with the fixing heater safety circuit
3. Protection function with the temperature fuse

The description of each function is as follow:

1. Protection Function with CPU

CPU always monitors voltage of the fixing heater temperature detection signal sent from the thermistor. If the fixing temperature greatly exceeds the specified value, CPU judges as failure of the fixing assembly, and it blocks the power distribution to the fixing heater. Moreover, error (E000) is displayed in the operation part at the same time.

T-8-4

Failure of fixing assembly	Thermistor temperature	Heater temperature detection time
From the start of temperature control until 1.47 sec	Less than 55 deg C	
Normal times	230 deg C or above	0.15 sec in a row

Failure of fixing assembly	Thermistor temperature	Heater temperature detection time
During normal temperature control	Less than 100 deg C	1.2 sec in a row
During temperature control at sheet-to-sheet interval, during cleaning mode	Less than 55 deg C	1.2 sec in a row
After the thermistor temperature exceeds 50 deg C	Less than 20 deg C	0.3 sec in a row
From the start of power distribution to the fixing heater until 23 sec	Less than 100 deg C	
While a paper is nipped in the fixing assembly	Less than 210 deg C	30 sec in a row
	Less than 145 deg C	30 sec in a row

2. Protection function with the fixing heater safety circuit

The circuit always monitors voltage of the fixing heater temperature detection signal sent from the thermistor. If the fixing temperature greatly exceeds the specified value, it blocks the power distribution to the fixing heater regardless of the instruction from CPU.

If the temperature of the fixing heater abnormally increases and the voltage of the fixing heater temperature detection signal sent from the thermistor becomes less than about 0.57V (equivalent of 265 deg C), the output of the comparator becomes 'L' and the transistor turns OFF. As a result of that, the relay is turned OFF to block the power distribution to the fixing heater regardless the relay drive signal sent from the CPU.

3. Protection function with the temperature fuse

If the temperature of the fixing heater abnormally increases and the temperature of the temperature fuse exceeds about 230 deg C, the temperature fuse melts down to block the power distribution to the fixing heater.

8.4 Parts Replacement Procedure

8.4.1 Fixing Unit

8.4.1.1 Preparation for Removing Fixing Assembly


i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Remove the front cover. [\(page 9-2\)](#) Reference[Removing the Front Cover]
- 2) Remove the right cover. [\(page 9-2\)](#) Reference[Removing the Right Cover]
- 3) Remove the left cover. [\(page 9-3\)](#) Reference[Removing the Left Cover]
- 4) Remove the rear cover. [\(page 9-2\)](#) Reference[Removing the Rear Cover]
- 5) Remove the scanner unit. [\(page 3-3\)](#) Reference[Removing the Scanner Unit]
- 6) Remove the printer cover. [\(page 9-4\)](#) Reference[Removing the Printer Cover]
- 7) Remove the upper cover. [\(page 9-4\)](#) Reference[Removing the Upper Cover]

8.4.1.2 Removing Fixing Assembly


i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Remove the 2 claws [1] to remove the fixing guide [2].

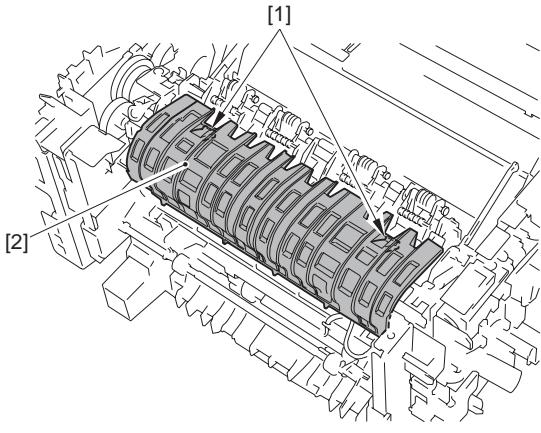


F-8-5

- 2) Disconnect the 5 connectors [1] on the left side, and remove the cable [2] from the cable guide.

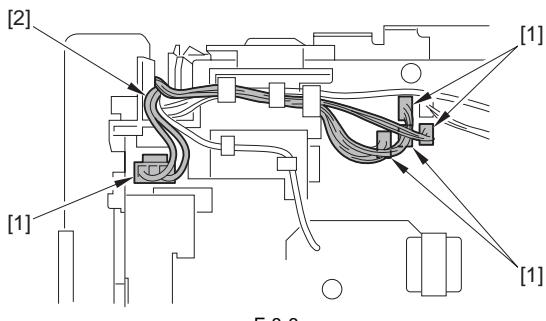


F-8-6

- 3) Disconnect the connector [1], and remove the cable (white) [2] from the cable guide.

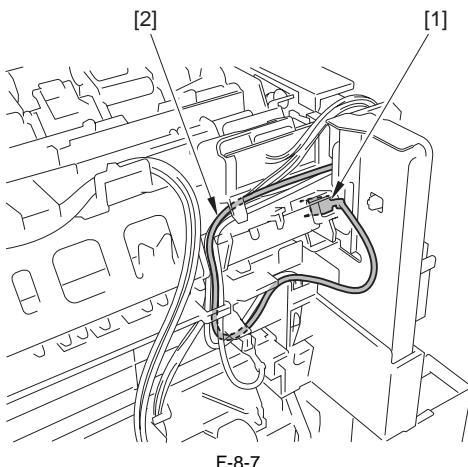


F-8-7

- 4) Unhook the 3 claws [1], and remove the delivery sensor [2].

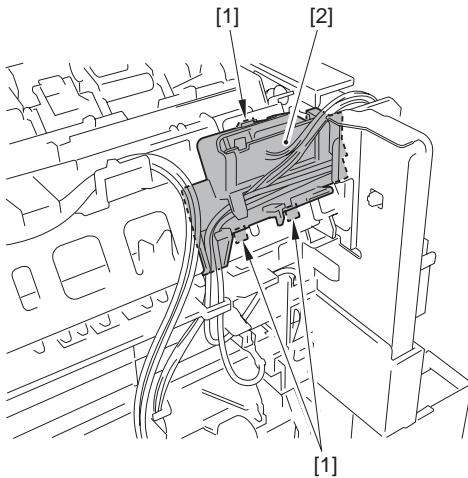

F-8-8

- 5) Remove the 3 screws [1], and remove the fixing assembly [2].

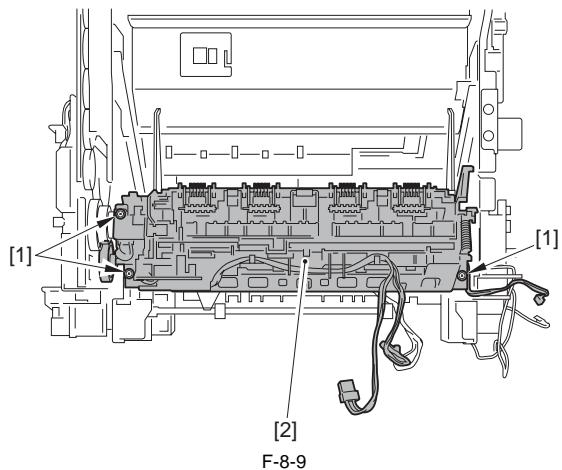

F-8-9

8.4.2 Fixing Film Unit

8.4.2.1 Preparation for Removing Fixing Film Unit

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Remove the front cover. [\(page 9-2\)](#) Reference[Removing the Front Cover]
- 2) Remove the right cover. [\(page 9-2\)](#) Reference[Removing the Right Cover]
- 3) Remove the left cover. [\(page 9-3\)](#) Reference[Removing the Left Cover]
- 4) Remove the rear cover. [\(page 9-2\)](#) Reference[Removing the Rear Cover]
- 5) Remove the scanner unit. [\(page 3-3\)](#) Reference[Removing the Scanner Unit]
- 6) Remove the printer cover. [\(page 9-4\)](#) Reference[Removing the Printer Cover]


Cover]

- 7) Remove the upper cover. [\(page 9-4\)](#) Reference[Removing the Upper Cover]
- 8) Remove the fixing assembly. [\(page 8-6\)](#) Reference[Removing Fixing Assembly]

8.4.2.2 Removing Fixing Film Unit


i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Free the cable [1] from the 4 cable guides [2].

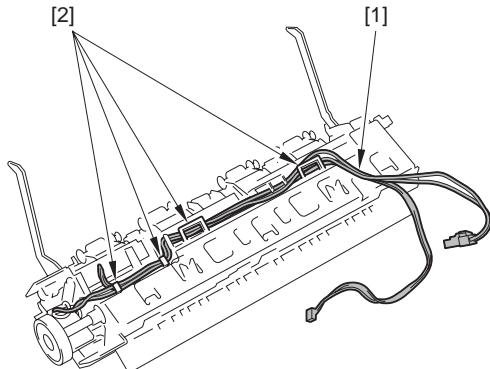

F-8-10

- 2) Remove the 2 screws [1] and open the fixing cover [2] in the direction of the arrow to detach.

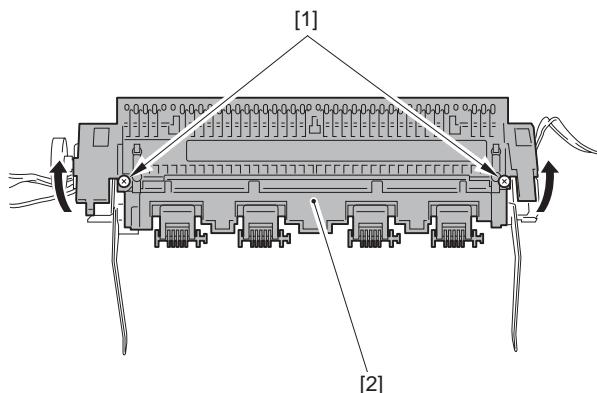

F-8-11


- 3) Recline the 2 pressure release levers [1], and remove the 2 springs [2].

- 4) Remove the fixing film unit [4].

- 2 pressure release levers [1]
- 2 pressure plates [3]



Do NOT touch the roller with bare hands.

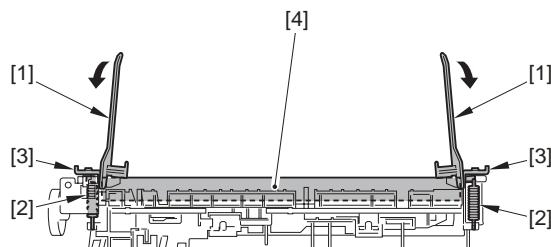

F-8-12

Chapter 9 External and Controls

Contents


9.1 Control Panel.....	9-1
9.1.1 Outline.....	9-1
9.2 Power Supply	9-1
9.2.1 Power Supply	9-1
9.2.1.1 Power Supply Route.....	9-1
9.2.2 Protection Function	9-1
9.2.2.1 Protecting Function	9-1
9.3 Parts Replacement Procedure.....	9-2
9.3.1 Front Cover	9-2
9.3.1.1 Removing the Front Cover.....	9-2
9.3.2 Rear Cover	9-2
9.3.2.1 Preparation for Removing the Rear Cover.....	9-2
9.3.2.2 Removing the Rear Cover	9-2
9.3.3 Right Cover	9-2
9.3.3.1 Removing the Right Cover.....	9-2
9.3.4 Left Cover	9-3
9.3.4.1 Removing the Left Cover.....	9-3
9.3.5 Upper Cover.....	9-4
9.3.5.1 Preparation for Removing the Upper Cover	9-4
9.3.5.2 Removing the Upper Cover	9-4
9.3.6 Cartridge Cover.....	9-4
9.3.6.1 Preparation for Removing the Printer Cover	9-4
9.3.6.2 Removing the Printer Cover.....	9-4
9.3.7 Operation Panel Unit.....	9-4
9.3.7.1 Removing the Control Panel Unit.....	9-4
9.3.8 SCNT Board.....	9-5
9.3.8.1 Preparation for Removing the SCNT PCB	9-5
9.3.8.2 Removing the SCNT PCB	9-5
9.3.8.3 Actions At Replacing the SCNT PCB	9-5
9.3.9 DCNT Board.....	9-6
9.3.9.1 Preparation for Removing the DCNT PCB	9-6
9.3.9.2 Removing the DCNT PCB	9-6
9.3.10 Power Supply PCB	9-7
9.3.10.1 Preparation for Removing the Power Supply PCB	9-7
9.3.10.2 Removing the Power Supply PCB	9-7
9.3.11 High-voltage Power Supply Board	9-7
9.3.11.1 Preparation for Removing the High Voltage PCB	9-7
9.3.11.2 Removing the High Voltage PCB	9-8

9.1 Control Panel

9.1.1 Outline

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

The machine's control panel consists of the following PCBs, and is controlled by the SCNT PCB.

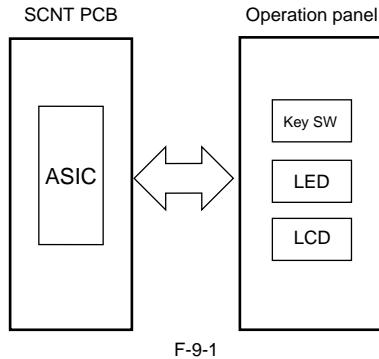


9.2 Power Supply

9.2.1 Power Supply

9.2.1.1 Power Supply Route

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

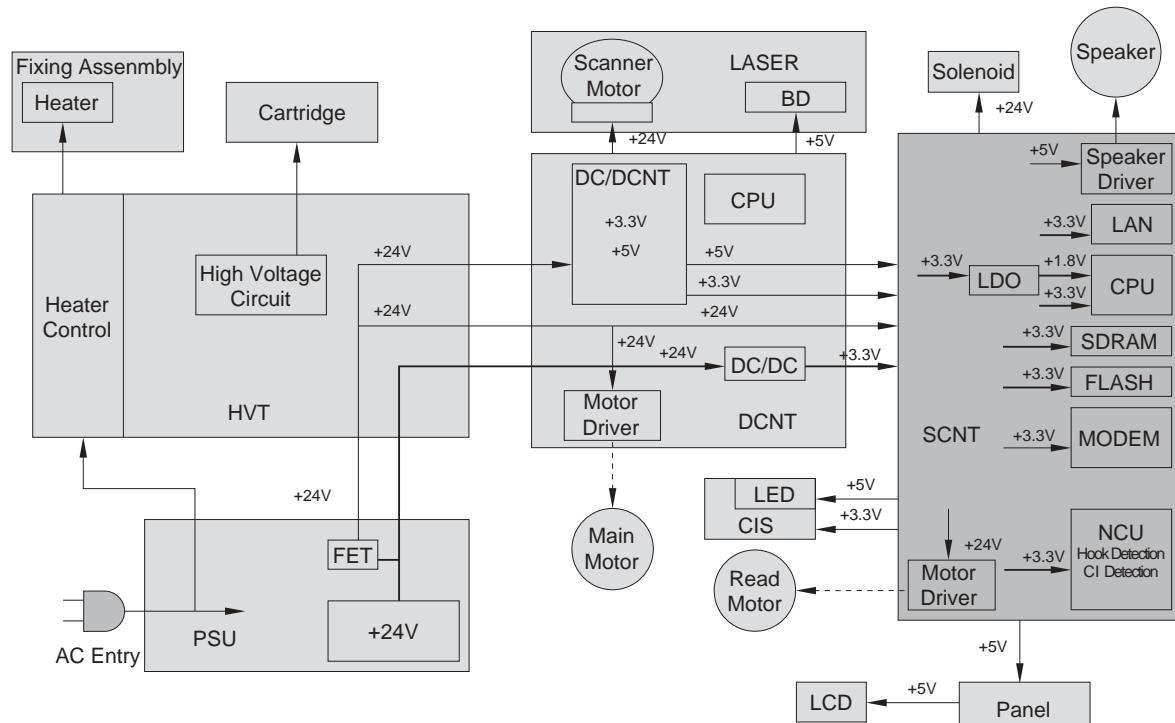

9.2.2 Protection Function

9.2.2.1 Protecting Function

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

In the case of troubles with power supply PCB such as short circuit to loads, and resulted in occurring overcurrent or over overvoltage, there is a protecting function for overcurrent/overvoltage to automatically shut the output voltage to avoid fault of power supply PCB.

In the case that the protecting function for overcurrent/overvoltage is activated, it recovers by turning off the main power switch to handle the load trouble, and then, turning on the main switch again. Also, there are 2 pc of fuses in PCB. If there is overcurrent in AC line, fuse is blown out and power distribution is shutdown.


9.3 Parts Replacement Procedure

9.3.1 Front Cover

9.3.1.1 Removing the Front Cover

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Remove the paper cassette [1].

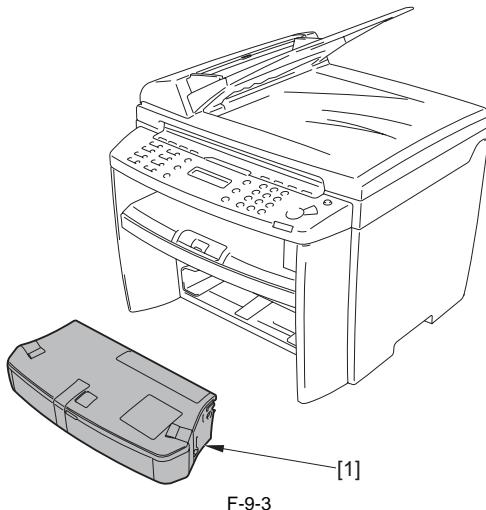


- 2) Open the control panel [1].

- 3) Open the printer cover [2].

- 4) Remove the front cover [5].

- 2 screws [3]
- 2 claws [4]

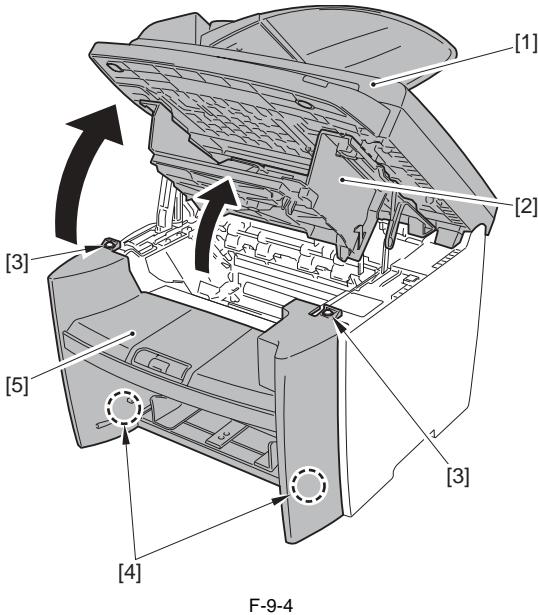

9.3.2 Rear Cover

9.3.2.1 Preparation for Removing the Rear Cover

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn


- 1) Remove the front cover. [\(page 9-2\)](#) Reference[Removing the Front Cover]
- 2) Remove the right cover. [\(page 9-2\)](#) Reference[Removing the Right Cover]
- 3) Remove the left cover. [\(page 9-3\)](#) Reference[Removing the Left Cover]

9.3.2.2 Removing the Rear Cover

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-


SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Remove the 2 shafts [1], and detach the rear cover [2].

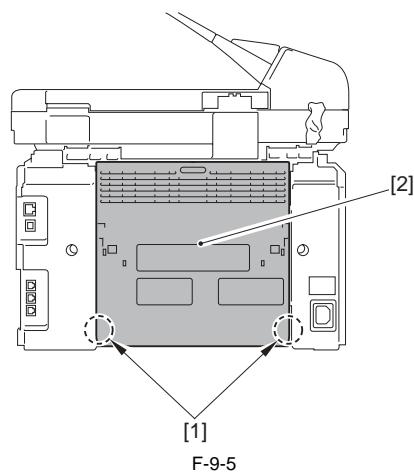

- 2) Remove the rear cover 2 [3].

- 4 screws [1]
- 2 claws [2]

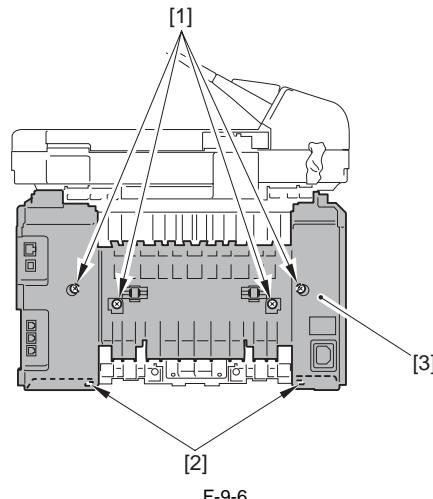


9.3.3 Right Cover

9.3.3.1 Removing the Right Cover

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Remove the front cover. [\(page 9-2\)](#) Reference[Removing the Front Cover]
- 2) Remove the 6 claws [1] to detach the right cover [2].

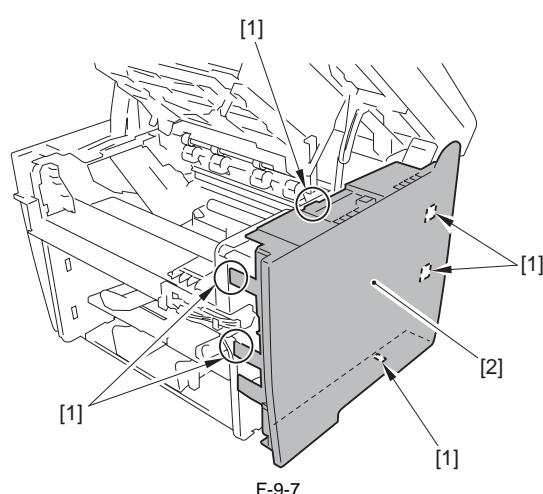


9.3.4 Left Cover

9.3.4.1 Removing the Left Cover


i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Remove the front over. (page 9-2) Reference[Removing the Front Cover]
- 2) Close the printer cover [1].
- 3) Disengage the claw to remove the holder [2].

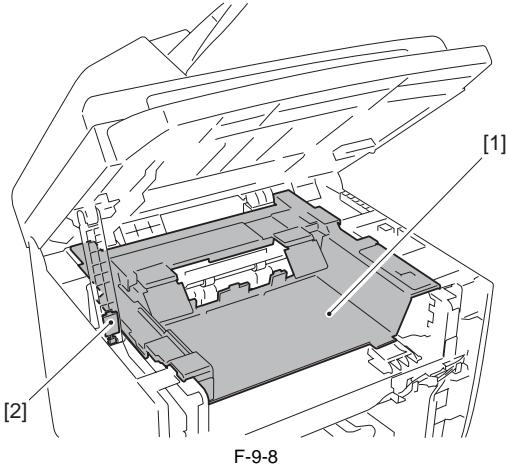


F-9-8

- 4) Remove from the damper rail while picking the damper [1]

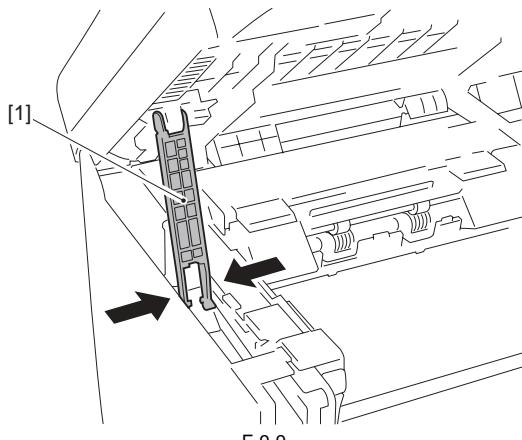

F-9-9

- 5) Remove the 4 screws [2] to remove the damper [1].

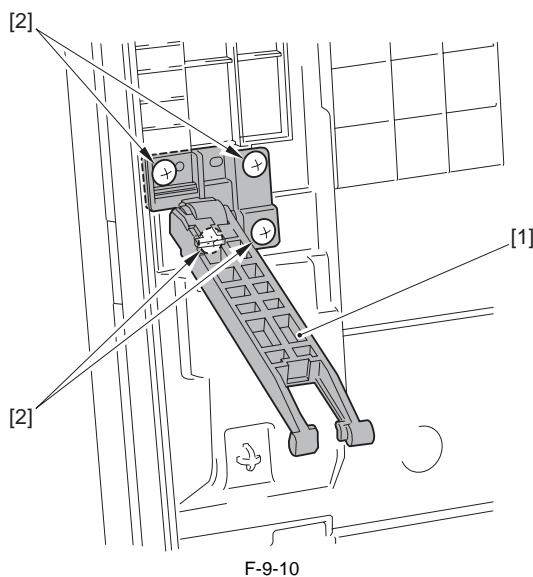


F-9-10



The scanner unit cannot be secured if the damper is removed. Be careful not to get your hands caught because you have to perform the work with the control panel open from now onward.

- 6) Remove the damper stopper [3].


- 1 screw [1]
- 1 claw [2]

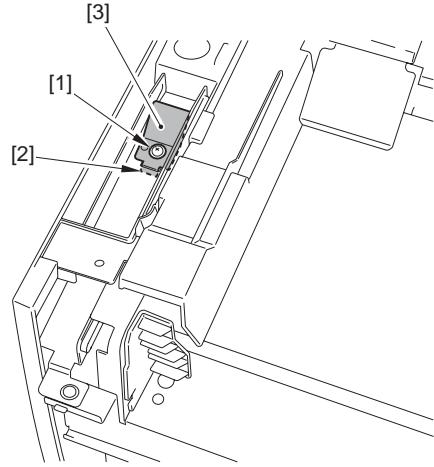

F-9-11

- 7) Remove the damper rail [3].


- 2 screws [1]
- 1 claw [2]

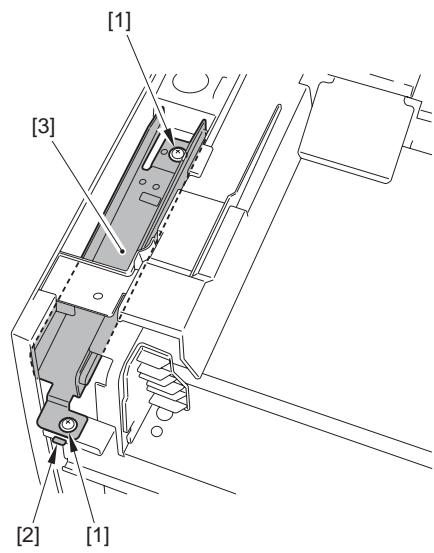

F-9-12

- 8) Open the printer cover [1].

- 9) Remove the 5 claws [2] to detach the left cover [3].

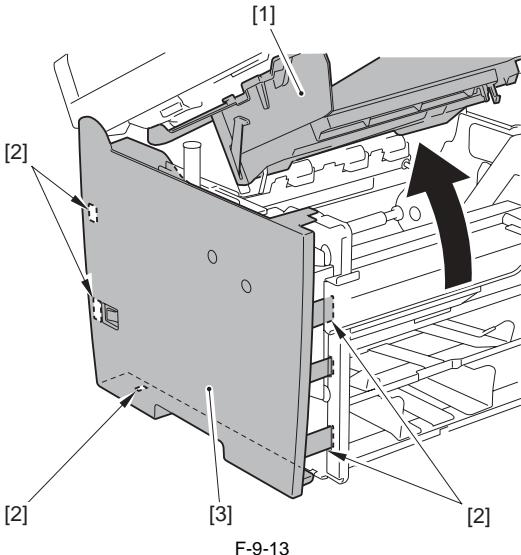


Unit]

9.3.6.2 Removing the Printer Cover

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Open the printer cover [1].
- 2) Remove the link stopper [2].
- 3) Remove the 2 pressure release levers [3] through the 2 holes [4].

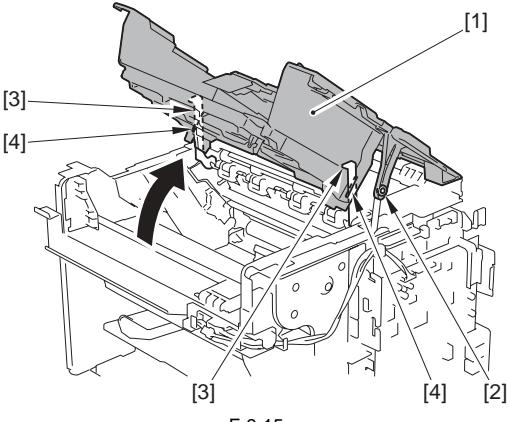

9.3.5 Upper Cover

9.3.5.1 Preparation for Removing the Upper Cover


i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Remove the front cover. [\(page 9-2\)](#) Reference[Removing the Front Cover]
- 2) Remove the right cover. [\(page 9-2\)](#) Reference[Removing the Right Cover]
- 3) Remove the left cover. [\(page 9-3\)](#) Reference[Removing the Left Cover]
- 4) Remove the rear cover. [\(page 9-2\)](#) Reference[Removing the Rear Cover]
- 5) Remove the scanner unit. [\(page 3-3\)](#) Reference[Removing the Scanner Unit]
- 6) Remove the printer cover. [\(page 9-4\)](#) Reference[Removing the Printer Cover]

9.3.5.2 Removing the Upper Cover

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn


- 1) Remove the 4 screws [1], and detach the upper cover [2].

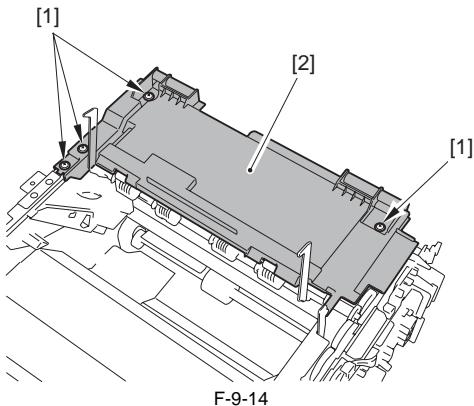

Points to Note When Attaching

Make sure to attach the link stopper [2] after attaching the right cover. If attaching the link stopper while attaching the printer cover, it may drop inside the machine.

- 4) With the printer cover [1] opened, detach it upward.

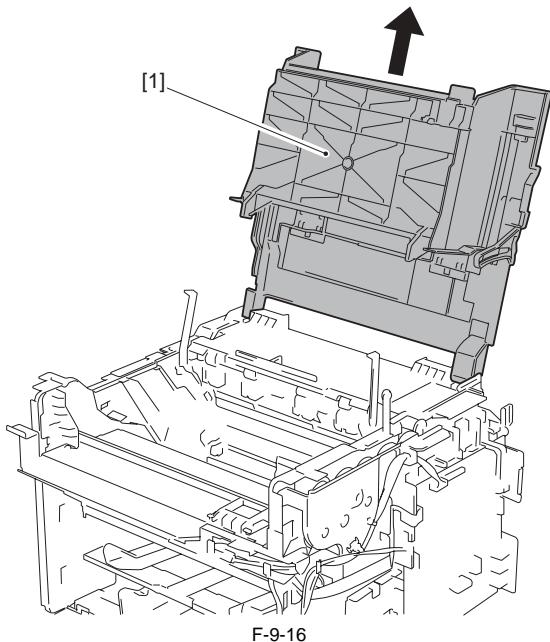

9.3.6 Cartridge Cover

9.3.6.1 Preparation for Removing the Printer Cover

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn


- 1) Remove the front cover. [\(page 9-2\)](#) Reference[Removing the Front Cover]
- 2) Remove the right cover. [\(page 9-2\)](#) Reference[Removing the Right Cover]
- 3) Remove the left cover. [\(page 9-3\)](#) Reference[Removing the Left Cover]
- 4) Remove the rear cover. [\(page 9-2\)](#) Reference[Removing the Rear Cover]
- 5) Remove the scanner unit. [\(page 3-3\)](#) Reference[Removing the Scanner

9.3.7 Operation Panel Unit

9.3.7.1 Removing the Control Panel Unit


i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Remove the 4 screws [1] and the 2 claws [2].

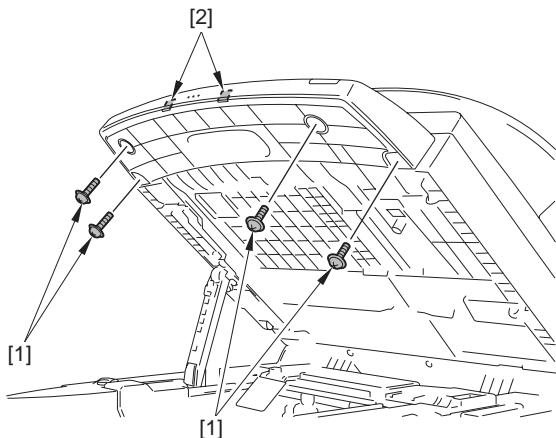

F-9-17

2) Disconnect the connector [1], and remove the control panel unit [2].

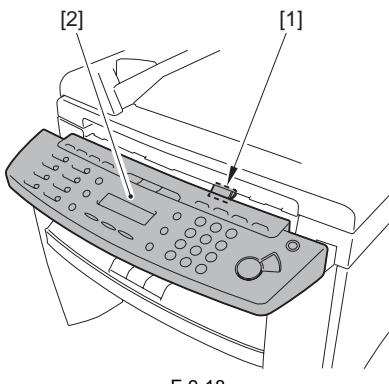

F-9-18

9.3.8 SCNT Board

9.3.8.1 Preparation for Removing the SCNT PCB

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

Outputting report

Before replacing the SCNT PCB, output and record the report for the information such as the user setting and the setting of the service mode.

Service mode > REPORT

Initial setting/registration > Report setting > Report output


- 1) Remove the front cover. [\(page 9-2\)](#) Reference[Removing the Front Cover]
- 2) Remove the right cover. [\(page 9-2\)](#) Reference[Removing the Right Cover]
- 3) Remove the left cover. [\(page 9-3\)](#) Reference[Removing the Left Cover]

9.3.8.2 Removing the SCNT PCB

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Remove the SCNT PCB [1].

- 6 connectors [2]
- 3 flat cables [3]
- 7 screws [4]

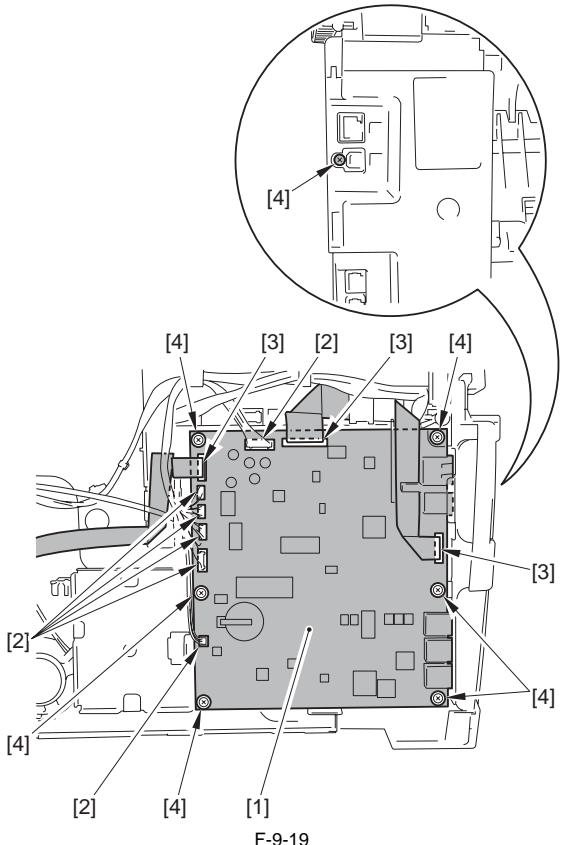

F-9-19

9.3.8.3 Actions At Replacing the SCNT PCB

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

Outputting report

Before replacing the SCNT PCB, be sure to output the report so that the information such as the user settings and the service mode settings can be saved.

In Service Mode > REPORT


Additional Functions > Report Settings > Report Output

After replacing the SCNT PCB, follow the description of the report to input the user data and the service data.

Changing the jumper connector

When replacing the SCNT PCB, be sure to switch the jumper connector locations to ON state.

* The SCNT PCB is shipped with the jumper connector of the lithium battery OFF.

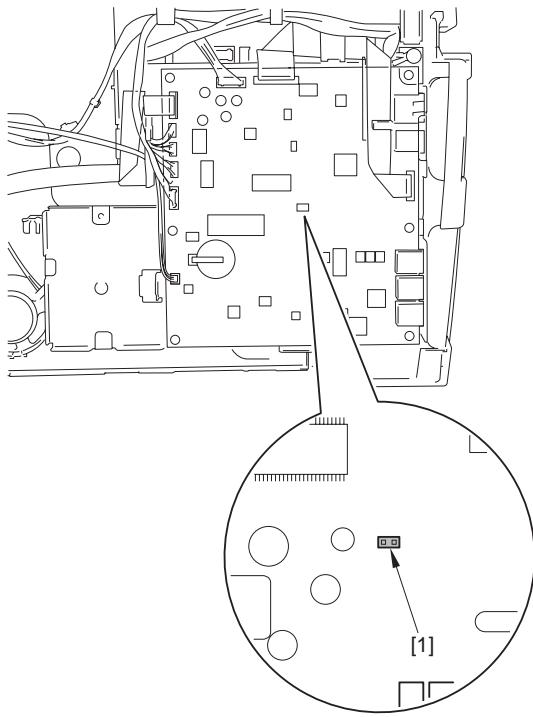

F-9-20

Switching of the language display

The language display will be in English after replacing the SCNT PCB. Be sure to change the settings so that the language display matches the communications standards of the respective country or region.

Additional Functions > # > SERVICE CHOICE > OK > COUNTRY/REGION CODE > OK > JAPAN > OK

9.3.9 DCNT Board**9.3.9.1 Preparation for Removing the DCNT PCB**


i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Remove the front cover. [\(page 9-2\)](#) Reference[Removing the Front Cover]
- 2) Remove the right cover. [\(page 9-2\)](#) Reference[Removing the Right Cover]
- 3) Remove the left cover. [\(page 9-3\)](#) Reference[Removing the Left Cover]
- 4) Remove the printer cover. [\(page 9-4\)](#) Reference[Removing the Printer Cover]

9.3.9.2 Removing the DCNT PCB


i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Remove the 2 guides [1] in the direction of the arrow.

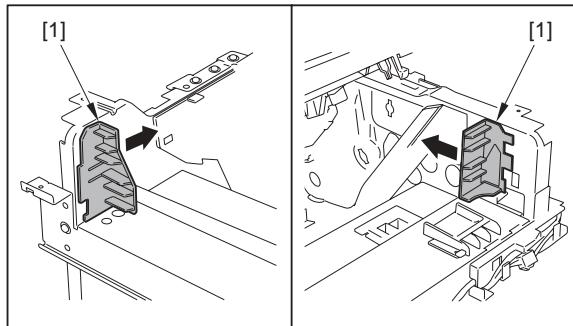


F-9-21

- 2) Remove the claw [1] to remove the cable guide [2] in the direction of the arrow.

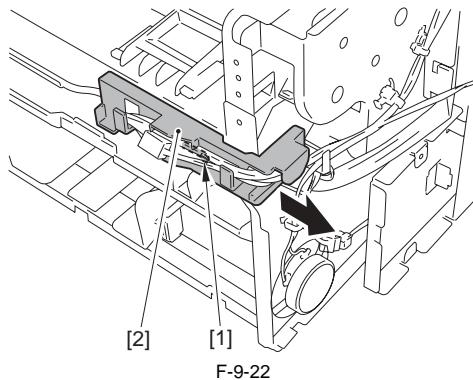

F-9-22

- 3) Remove the 4 screws [1], and detach the scanner cover (front) [2] and the scanner cover (rear) [3].

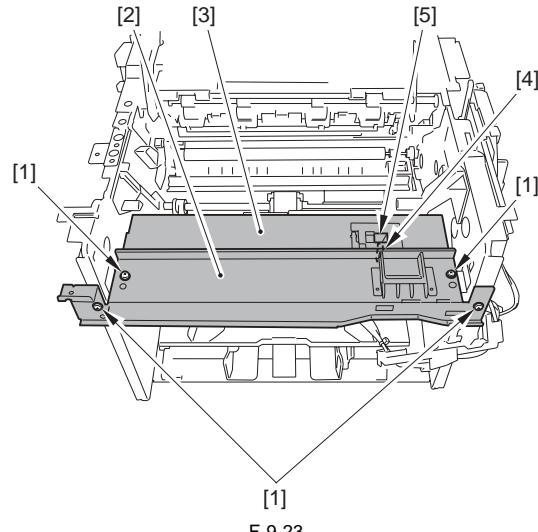


F-9-23

⚠ Points to Note When Attaching


Make sure to insert the shutter arm [4] through the hole [5] of the scanner cover (rear).

- 4) Disconnect the 2 connectors [1] located at the left side, and put them inside the left side plate through the holes [2].

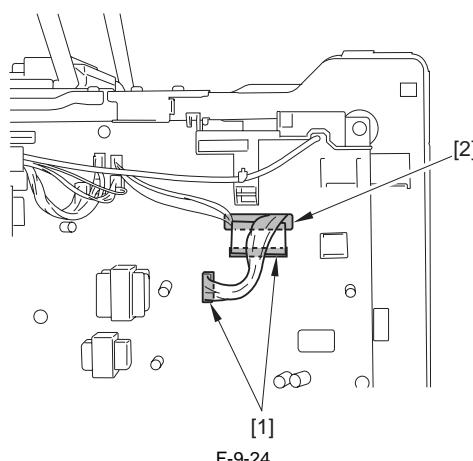


F-9-24

- 5) Disconnect the 5 connectors [1] and the flat cable [2] to remove the cable [3] from the PCB hole.
- 6) Free the cable [4] from the cable clamp [5].

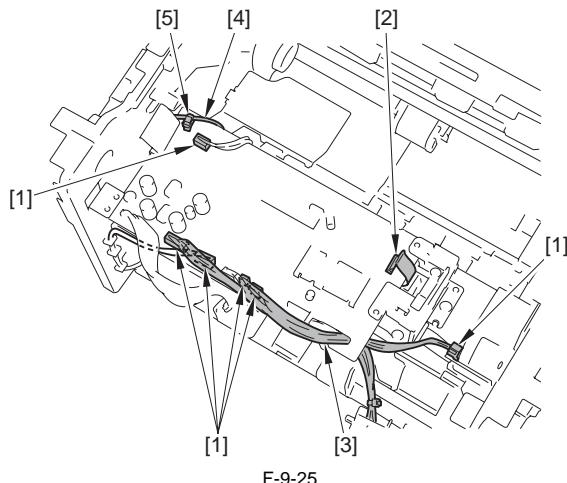

F-9-25

7) Disconnect the 4 connectors [1] to remove the flat cable [2].

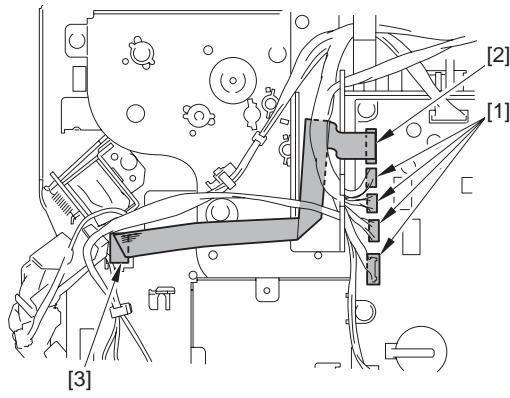


F-9-26

Points to Note When Attaching


Make sure to put the flat cable [2] through the hole [3].

8) Remove the 2 screws [1].

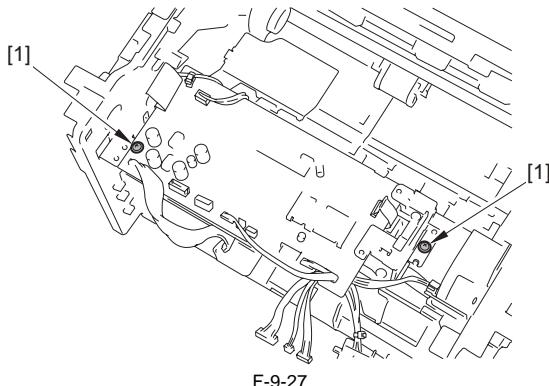

F-9-27

9) Disconnect the connector [1], put the cable [2] through the cable clamp [3], and remove the DCNT PCB [4].

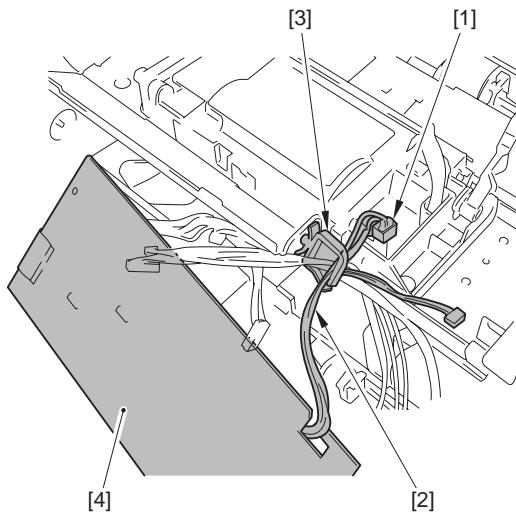

F-9-28

9.3.10 Power Supply PCB

9.3.10.1 Preparation for Removing the Power Supply PCB


i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Remove the front cover.[\(page 9-2\)](#) Reference[Removing the Front Cover]
- 2) Remove the right cover.[\(page 9-2\)](#) Reference[Removing the Right Cover]
- 3) Remove the left cover.[\(page 9-3\)](#) Reference[Removing the Left Cover]
- 4) Remove the rear cover.[\(page 9-2\)](#) Reference[Removing the Rear Cover]

9.3.10.2 Removing the Power Supply PCB

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Remove the power supply PCB [3].
 - 2 connectors [1]
 - 6 screws [2]

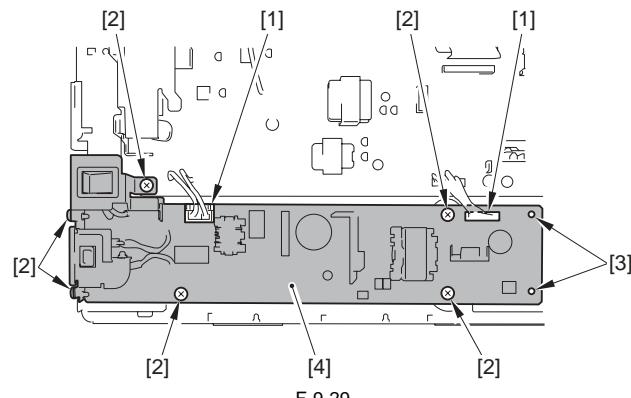

F-9-29

9.3.11 High-voltage Power Supply Board

9.3.11.1 Preparation for Removing the High Voltage PCB

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Remove the front cover.[\(page 9-2\)](#) Reference[Removing the Front Cover]
- 2) Remove the right cover.[\(page 9-2\)](#) Reference[Removing the Right Cover]
- 3) Remove the left cover.[\(page 9-3\)](#) Reference[Removing the Left Cover]
- 4) Remove the rear cover.[\(page 9-2\)](#) Reference[Removing the Rear Cover]
- 5) Remove the scanner unit.[\(page 3-3\)](#) Reference[Removing the Scanner Unit]
- 6) Remove the printer cover.[\(page 9-4\)](#) Reference[Removing the Printer


Cover]

- 7) Remove the upper cover. (page 9-4) Reference[Removing the Upper Cover]
 8) Remove the Power Supply PCB. (page 9-7) Reference[Removing the Power Supply PCB]

9.3.11.2 Removing the High Voltage PCB


i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

- 1) Remove the 2 claws [1] to remove the fixing guide [2].

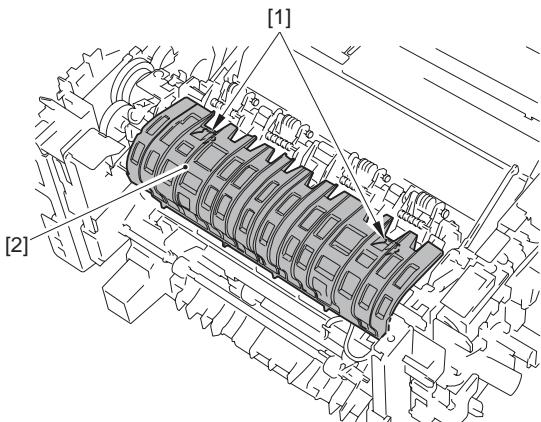

F-9-30

- 2) Disconnect the 3 connectors [1] at the back and free the cable [2] from the cable guide.

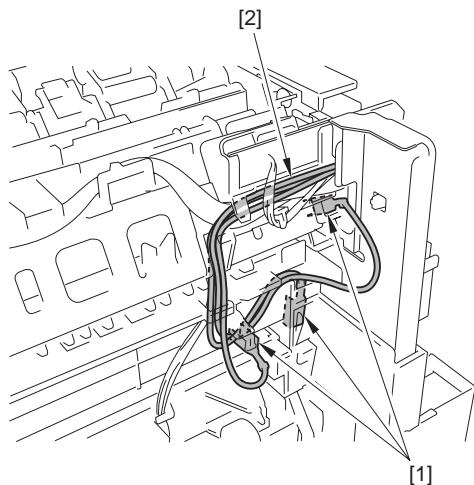


F-9-31

⚠ Points to Note When Attaching

Do not confuse the connecting target for the black cable and the red cable.
 Make sure to connect to the respective terminals stamped as 'RED' and 'BLACK'.

- 3) Remove the high voltage PCB [3].

- 8 connectors [1]
- 4 screws [2]

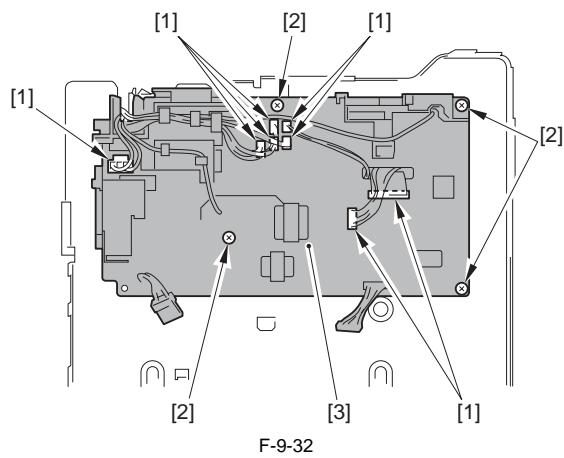

F-9-32

Chapter 10 Maintenance and Inspection

Contents

10.1 Periodically Replaced Parts	10-1
10.1.1 Periodically Replaced Parts	10-1
10.2 Periodical Service	10-1
10.2.1 Periodically Service Items	10-1
10.3 Cleaning	10-1
10.3.1 Cleaning Items	10-1
10.3.2 Cleaning Method (External Covers)	10-1
10.3.3 Cleaning Method (Reader Unit).....	10-2
10.3.4 Cleaning Method (Pressure Roller)	10-3

10.1 Periodically Replaced Parts

10.1.1 Periodically Replaced Parts

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

There are no periodically replaced parts with this machine.

10.2 Periodical Service

10.2.1 Periodically Service Items

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

There are no periodically service items with this machine.

10.3 Cleaning

10.3.1 Cleaning Items

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

T-10-1

Responsible by: Cleaning area	Cleaning area	Cleaning timing
User	External covers	When they are smudged
	Copyboard glass	When the image read from the copyboard is smudged
	Backside of copyboard cover	When the image read from the copyboard is smudged
	ADF reading area	When the image read from the ADF has a black line in vertical direction
	Document pickup roller	When document pickup performance drops away
	Scraper	When document separating performance drops away
	Document feed roller	When document feeding performance drops away
	Document delivery roller	When document delivery performance drops away
	Pressure roller (fixing unit)	When there are irregular black lines in vertical direction in the paper
Service Technician	Pickup roller	When paper pickup performance drops away
	Separation pad	When paper separating performance drops away
	Feed roller	When paper feeding performance drops away
	Transfer charging roller	When there is smudge at the back of the paper, or when there are white spots at the constant intervals of approx. 46mm in the image.
	Static eliminator	When there are dot patterns in the image
	Fixing inlet guide	When there is smudge in the paper, when there are irregular black lines in vertical direction, when there is paper jam, when there are wrinkles in the paper



Make sure to turn off the power and disconnect the power supply plug upon cleaning. It may cause fire/electric shock if failing turning off the power.

10.3.2 Cleaning Method (External Covers)

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn


Wring of the cloth moistened with water or mild detergent, and wipe off the smudges.

In the case of using mild detergent, make sure to wipe off the detergent with the cloth moistened with water afterward.
Once the smudge is removed, dry with the soft dry cloth.

10.3.3 Cleaning Method (Reader Unit)

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

In the case of ADF

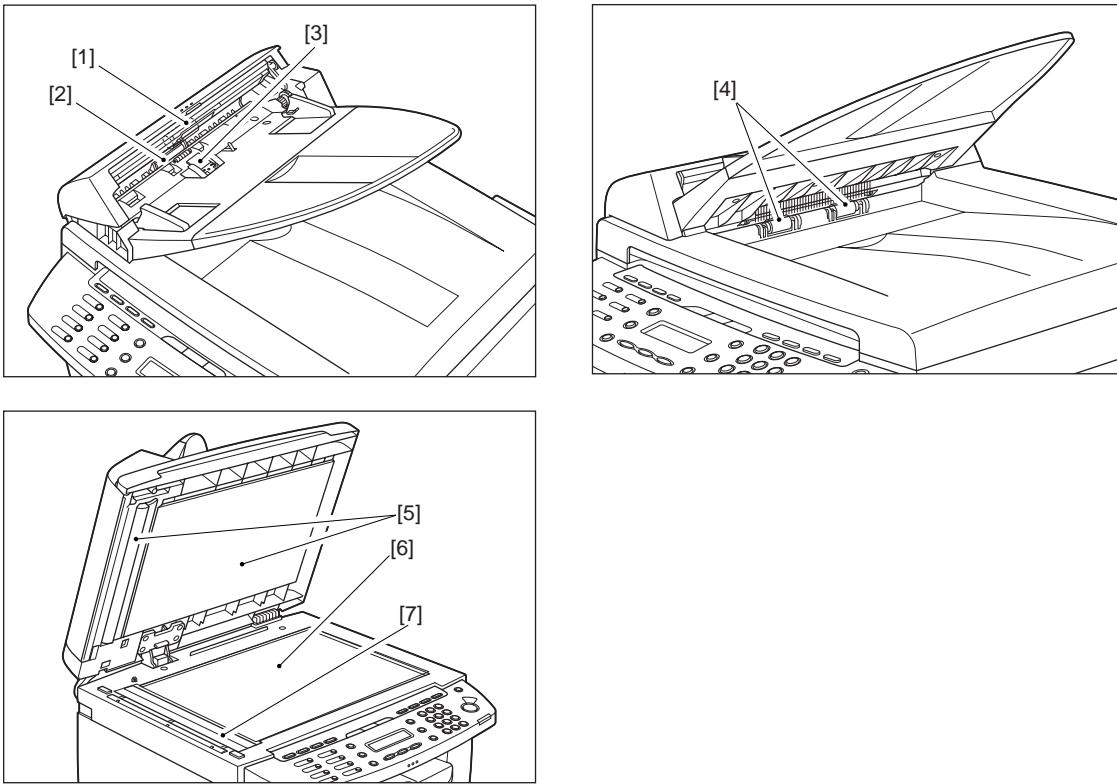

F-10-1

[1] Document pickup roller

Open the ADF and wipe off the smudge with the soft dry cloth.

[2] Document feed roller

Open the ADF and wipe off the smudge with the soft dry cloth.

[3] Scraper

Open the ADF and wipe off the smudge with the soft dry cloth.

[4] Document delivery roller

Wipe off the smudge with the soft dry cloth.

[5] Backside of copyboard cover

Open the copyboard cover and wipe off the smudge with the soft dry cloth.


[6] Copyboard glass

Open the copyboard cover and wipe off the smudge with the soft dry cloth.

[7] ADF reading area

Open the copyboard cover and wipe off the smudge with the soft dry cloth.

In the case of DADF

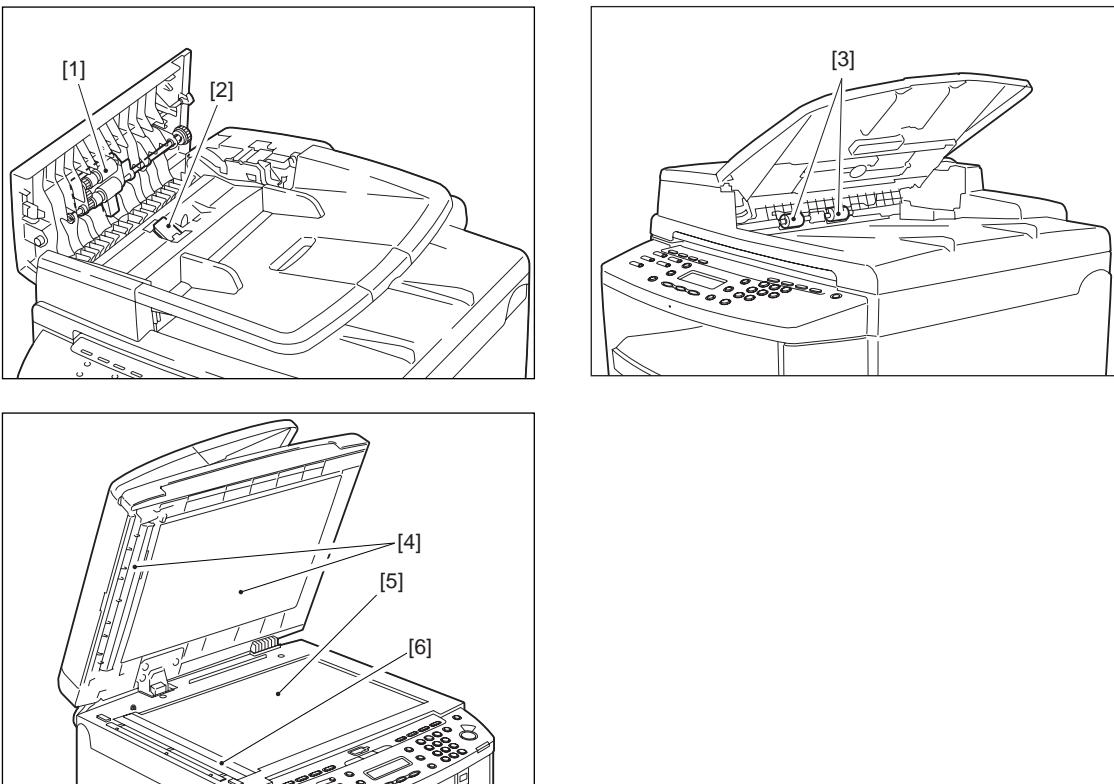

F-10-2

[1] DADF separation roller unit

Open the DADF and wipe off the smudge with the soft dry cloth.

[2] DADF separation pad

Open the DADF and wipe off the smudge with the soft dry cloth.

[3] Document delivery roller

Wipe off the smudge with the soft dry cloth.

[4] Backside of copyboard cover

Open the copyboard cover and wipe off the smudge with the soft dry cloth.

[5] Copyboard glass

Open the copyboard cover and wipe off the smudge with the soft dry cloth.

[6] DADF reading area

Open the copyboard cover and wipe off the smudge with the soft dry cloth.

10.3.4 Cleaning Method (Pressure Roller)

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn


MEMO:

Cleaning the roller takes approximately 130 seconds.

1) Press [Additional Functions].

2) Press [-] or [+>] to select <ADJUST./CLEANING>, then press [OK].

3) Load a sheet of blank A4 paper (standard paper) in the multi-purpose tray.

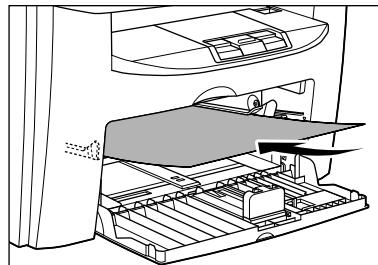

F-10-3

4) Press [-] or [+>] to select <FIX. UNIT CLEANING>, then press [OK].

Cleaning starts. When finished, the display returns to standby mode.

Chapter 11 Measurement and Adjustments

Contents

11.1 Basic Adjustments.....	11-1
11.1.1 Paper Margin Adjustment	11-1
11.1.2 Reading Adjustment.....	11-1
11.1.3 Print Adjustment	11-2


11.1 Basic Adjustments

11.1.1 Paper Margin Adjustment

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

After pressing 'Additional Functions' button and '#' button to select 'SERVICE'S CHOICE', select 'SERV-ICE MODE', then select 'PAPER MARGIN' with the cursor button and press 'OK' button.

Select the item to adjust by the cursor buttons (+/-).
Effective only when using 'COPY' function

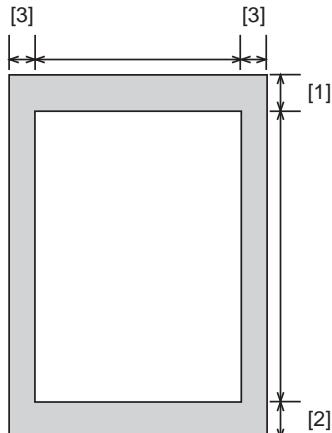

F-11-1


T-11-1

[1] Leading edge erase	4mm (0-5)
[2] Trailing edge erase	5mm (0-5)
[3] Vertical edge erase	3mm (0-5)

11.1.2 Reading Adjustment

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

After pressing 'Additional Functions' button and '#' button to select 'ADJUST', press 'OK' button.
Select the item to adjust by the cursor buttons (+/-).

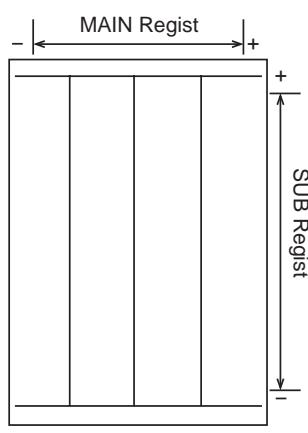

F-11-2

BOOK MAIN REGIST

Item to enable adjusting the reading start position of horizontal scanning at Book reading

BOOK SUB REGIST

Item to enable adjusting the reading start position of vertical scanning at Book reading

ADF MAIN REGIST

Item to enable adjusting reading start position of horizontal scanning at ADF reading

T-11-2

Setting value	Contents
70	-30 (-3.0 mm)
71	-29 (-2.9 mm)
:	:
98	-2 (-0.2 mm)
99	-1 (-0.1 mm)
100	0
101	+1 (+0.1 mm)
102	+2 (+0.2 mm)
:	:
129	+29 (+2.9 mm)
130	+30 (+3.0 mm)

ADF SUB REGIST DES

Item to enable adjusting reading start position of vertical scanning at ADF reading

T-11-3

Setting value	Contents
65	-35 (-3.5 mm)
66	-34 (-3.4 mm)
:	:
98	-2 (-0.2 mm)
99	-1 (-0.1 mm)
100	0
101	+1 (+0.1 mm)
102	+2 (+0.2 mm)
:	:
134	+34 (+3.4 mm)
135	+35 (+3.5 mm)

ADF SUB REGIST COPY

Item to enable adjusting reading end position of vertical scanning at making copy/ADF reading

ADF SUB REGIST SFINE

Item to enable adjusting reading end position of vertical scanning at FAX transmission&reception/ADF reading

ADF SUB REGIST FINE

Item to enable adjusting reading end position of vertical scanning at FAX transmission&reception/ADF reading

ADF SUB REGIST STD

Item to enable adjusting reading end position of vertical scanning at FAX transmission&reception/ADF reading

T-11-4

Setting value	Contents
50	-50 (-5.0 mm)
51	-49 (-4.9 mm)
:	:
98	-2 (-0.2 mm)
99	-1 (-0.1 mm)

Setting value	Contents
100	0
101	+1 (+0.1 mm)
102	+2 (+0.2 mm)
:	:
149	+49 (+4.9 mm)
150	+50 (+5.0 mm)

ADF SUB ZOOM

Item to perform reduction of vertical scanning direction only at ADF reading

T-11-5

Setting value	Contents
95	98.0%
96	98.4%
97	98.8%
98	99.2%
99	99.6%
100	100.0%
101	100.4%
102	100.8%
103	101.2%
104	101.6%
105	102.0%

BOOK SCAN L/R**BOOK COPY L/R****BOOK FAX L/R**

Item of setting range to enable adjusting right/left margins at Book reading (0 to 4mm)

ADF SCAN L/R**ADF COPY L/R****ADF FAX L/R**

Item of setting range to enable adjusting right/left margins at Book reading (0 to 4mm)

11.1.3 Print Adjustment

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

After pressing the 'Additional Functions' button and '#' button, select 'ADJUST', and then, press 'OK' button.

Select the item to adjust with the cursor buttons (+/-).

TOP-MP

Item to enable adjusting recording start position of vertical scanning when making prints from the manual feeder tray

TOP-CASSETTE

Item to enable adjusting recording start position of vertical scanning when making prints from the pickup tray

TOP-DUPLEX MP

Item to enable adjusting recording start position of vertical scanning when making duplex prints from the manual feeder tray

TOP-DUPLEX CAS.

Item to enable adjusting recording start position of vertical scanning when making duplex prints from the pickup tray

LEFT-MP

Item to enable adjusting recording start position of horizontal scanning when making prints from the manual feeder tray

LEFT-CASSETTE


Item to enable adjusting recording start position of horizontal scanning when making prints from the pickup tray

LEFT-DUPLEX MP

Item to enable adjusting recording start position of horizontal scanning when making duplex prints from the manual feeder tray

LEFT-DUPLEX CAS.

Item to enable adjusting recording start position of horizontal scanning when making duplex prints from the pickup tray

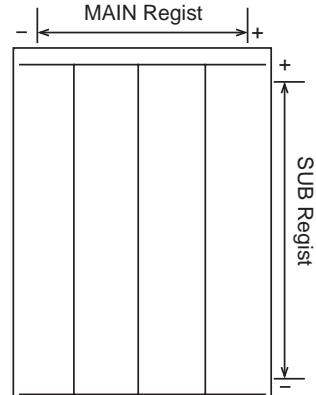

F-11-3

T-11-6

Setting value	Contents
70	-30 (-3.0 mm)
71	-29 (-2.9 mm)
:	:
98	-2 (-0.2 mm)
99	-1 (-0.1 mm)
100	0
101	+1 (+0.1 mm)
102	+2 (+0.2 mm)
:	:
129	+29 (+2.9 mm)
130	+30 (+3.0 mm)

Chapter 12 Correcting Faulty Images

Contents

12.1 Outline of Electrical Components	12-1
12.1.1 Clutch/Solenoid/Motor/Fan	12-1
12.1.1.1 List of Solenoids/Motors.....	12-1
12.1.2 Sensor.....	12-3
12.1.2.1 List of Sensors.....	12-3
12.1.3 PCBs	12-5
12.1.3.1 List of PCBs	12-5


12.1 Outline of Electrical Components

12.1.1 Clutch/Solenoid/Motor/Fan

12.1.1.1 List of Solenoids/Motors


i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

In the case of ADF

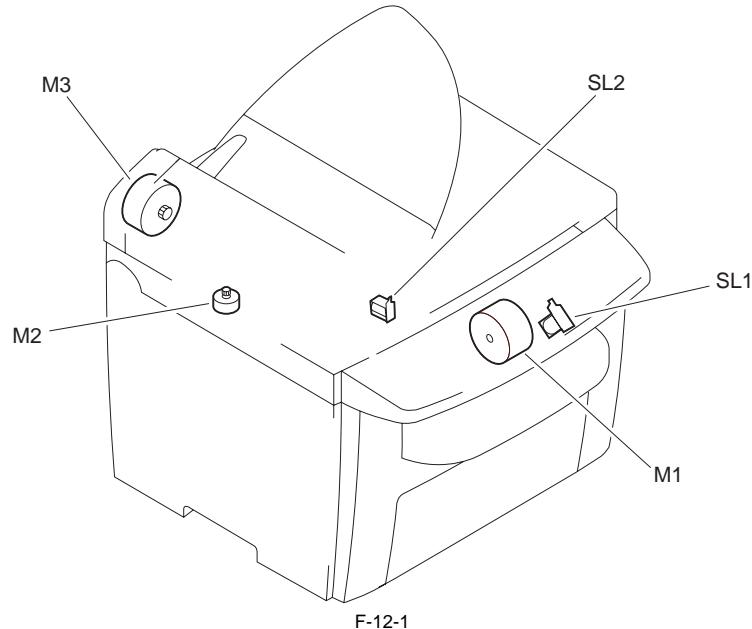

Symbol	Name
M1	Main motor
M2	Reader motor
M3	ADF motor
SL1	Cassette pickup solenoid
SL2	Duplexing drive solenoid

In the case of DADF

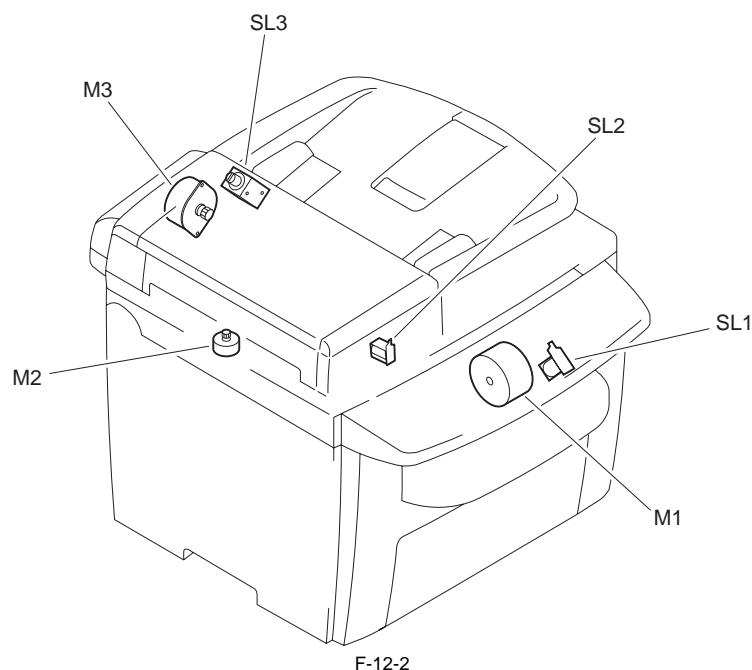


Symbol	Name
M1	Main motor
M2	Reader motor
M3	ADF motor
SL1	Cassette pickup solenoid
SL2	Duplexing drive solenoid
SL3	Reverse solenoid

12.1.2 Sensor

12.1.2.1 List of Sensors


i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

In the case of ADF

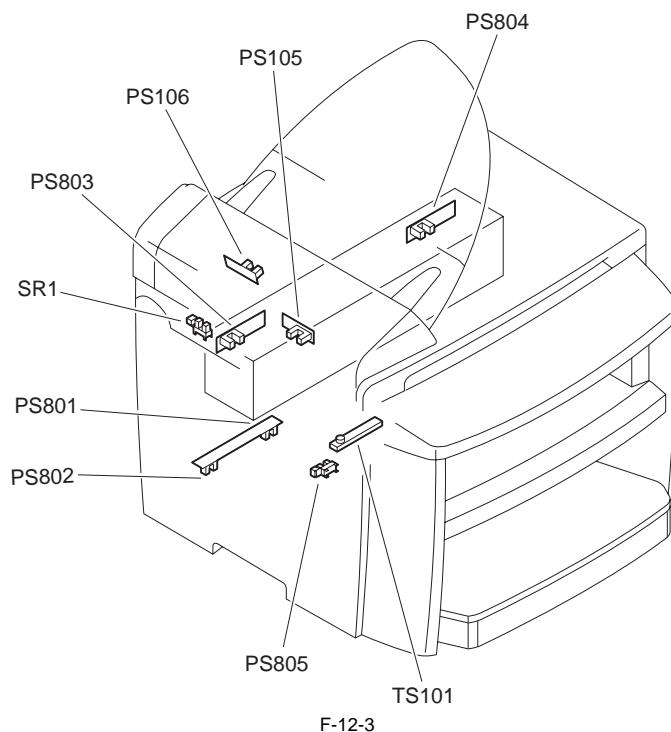

Symbol	Name
PS105	DES sensor
PS106	DS sensor
PS801	leading edge sensor
PS802	Paper width/cartridge detect sensor
PS803	delivery sensor
PS804	delivery paper width sensor
PS805	Multi-purpose pickup sensor
TS101	Toner level sensor

In the case of DADF

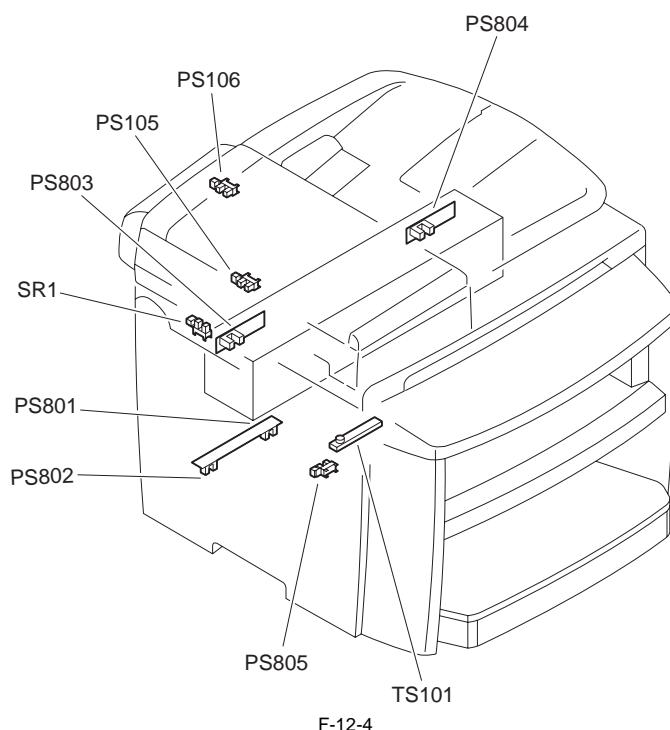

F-12-4


Symbol	Name
PS105	DES sensor
PS106	DS sensor
PS801	leading edge sensor
PS802	Paper width/cartridge detect sensor
PS803	delivery sensor
PS804	delivery paper width sensor
PS805	Multi-purpose pickup sensor
TS101	Toner level sensor

12.1.3 PCBs

12.1.3.1 List of PCBs


i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

In the case of ADF

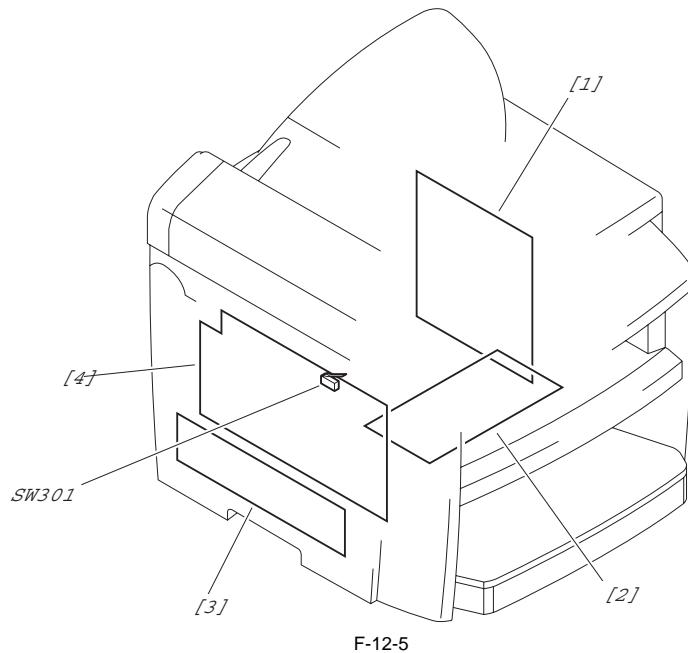

Symbol	Name
[1]	SCNT PCB
[2]	DCNT PCB
[3]	Power supply PCB
[4]	High voltage PCB
SW301	Interlock switch

In the case of DADF

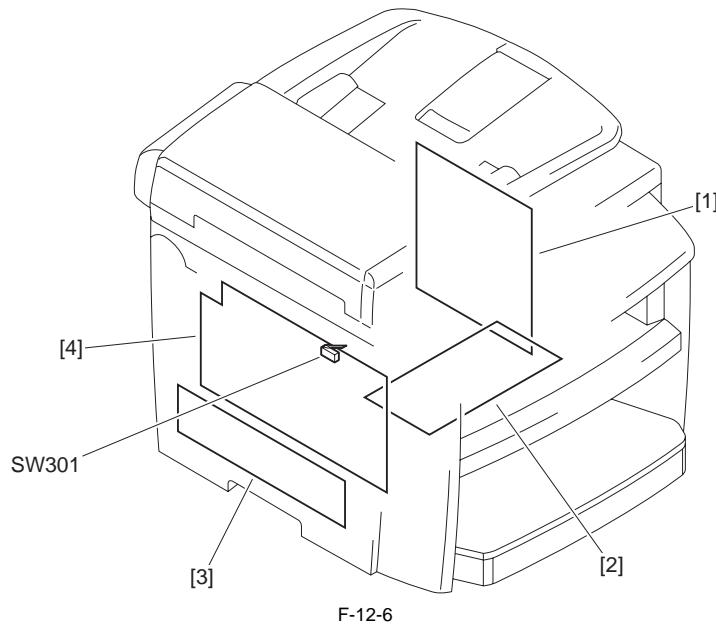

Symbol	Name
[1]	SCNT PCB

[2}	DCNT PCB
[3}	Power supply PCB
[4}	High voltage PCB
SW301	Interlock switch

Chapter 13 Error Code

Contents

13.1 Error Code.....	13-1
13.1.1 Error Code Outline.....	13-1
13.1.2 Error Code.....	13-1

13.1 Error Code

13.1.1 Error Code Outline

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

An error code is used to indicate a fault in a machine, and is indicated in the machine's LCD, showing the nature (symptoms) of the fault. Using the error code, the service man can readily find out how to correct the fault by simply referring to the service manual.

An error code may be either of the following two types:

Service Error Codes

If a fault calls for a service man for correction, it is indicated as a service man error code in the form of "SYSTEM ERROR E+number."

13.1.2 Error Code

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

System error code

T-13-1

Error code	Major cause/detection	Remedy
E198	Flash ROM write error.	- Turn the power OFF and then back ON.. - Replace the SCNT PCB.
E674	Modem error.	- Turn the power OFF and then back ON.. - Replace the SCNT PCB.

Scanner error code

T-13-2

Error code	Major cause/detection	Remedy
E225	CIS lamp has a fault.	- Turn the power OFF and then back ON.. - Replace the CIS unit.

Printer error code

T-13-3

Error code	Major cause/detection	Remedy
E000	The thermistor has an open circuit or a short circuit.	<ul style="list-style-type: none"> - Check the connector of the fixing film unit. - Replace the fixing film unit. - Replace the High-voltage PCB. - Replace the DCNT PCB.
	The heater has an open circuit. The thermal fuse has blown.	
	The High-voltage PCB has a fault.	
	The DCNT PCB has a fault.	
E100	The scanner assembly has a fault.	<ul style="list-style-type: none"> - Check the connector of the laser scanner assembly. - Replace the laser scanner assembly. - Replace the HVT unit. - Replace the DCNT PCB.

Communication error code

T-13-4

Error Code	Description
0001	Nothing G3 signal received within 35 sec.
0003	Received DIS after sending DIS signal
0004	Received DCN after sending DTC signal
0009	Can't receive any signal within 35 sec. in manual polling mode.
0010	Received DCN signal after sending DTC signal in Polling Rx.
0011	Can't receive any correct response after sending DTC signal.
0012	Remote side Password not match in Polling Rx/our side no any file to be polling.
0013	Can't receive carrier within 6 sec. after sending CFR in date phase C.
0014	Can't receive T.30 signal after sending FTT signal.

Error Code	Description
0016	Receive DCN signal after sending PTT signal.
0017	Can't receive any response from remote side after sending DIS
0018	Can't detect energy within 6 sec after sending FTT command
0019	Received DCN signal sending CFR signal
001A	No energy on line over 6 sec. within phase C before any corrected ECM frame.
001D	Can't detect flag after sending CFR signal
001E	Timeout in V.17 ECM Rx phase C
0020	Can't correct frame within 6 sec at phase C.
0021	File full.
0022	Owing to noise interference on the line, receiving side can't receive correct data within specified time (no ECM)
0023	Can't receive correct signal after sending CFR signal
0030	Can't receive any signal within 6 sec. At phase D.
0031	Received incorrect signal at phase D (not EOP, MPS, EOM, DCN, PPS_Q, PPS_Q,etc)
0032	Can't receive carrier within 6 sec after sending MCF or RTP, RTN signal
0033	Received DCN signal at ohase D within pages (not last page).
0039	In non_ECM mode, when machine alredy received the data dosen't receive 13.1 seconds
001F	Can't detect any G3 signal within 35 sec after sending DTC signal
003F	Remote side TSI not define in machine one touch or speed dial direcotry
0040	Can't receive carrier within 6 sec. after sending CTR.
0041	Can't receive carrier within 6 sec. after sending PPR.
0042	Can't receive correct signal after sending RNR signal
0043	Receive incorrect signal at phase D in ECM mode.
0044	Can't receive carrier/FSK signal within 6 sec. After sending MCF. In ECM mode.
0047	Can't receive correct signal or DCN received after sending ERR signal.
0048	Can't receive correct signal after receive PPS_PRI_Q
004B	Can't detect correct FSK signal even through detected FSK tone within 6 sec.
004C	Handshake fail during re-train or between page in V34 Rx.
004E	Receive DCN signal after sending DIS in V.34.
004F	Remote side disconnected after sending ANSam in V.8 phase.
0050	Can't receive any correct signal after detected CJ signal in V.8 phase.
0051	Can't receive phase 3 signal after phase 2 within 20 seconds in V.34.
0053	Modem disconnect after phase 4 in V.34.
0054	Remote side disconnect after phase 4 in V.8
0055	Receive incorrect signal after sending DIS signal in V.34
0056	Modem disconnect after sending CFR in V.34
0058	Can't detect image signal within 6 sec after modem enter to primary phase in V.34
005A	Modem cannot detect any correct ECM frame with 3 minutes in phase C.
005B	Modem can't detect control channel with 12 sec in phase C
005C	Detect busy tone within control channel after phase C.
005D	Modem can't detect any correct ECM frame with 12 sec in phase C.
005E	Can't detect control channel signal after received RCP frame within 6 sec
005F	Can't detect silence after sending JM signal for polling TX function.
0060	There are no any bulletin files to be polled in V.34.
0061	Machine cannot detect V.21 or V.8 signal with 35 sec.
0062	Modem disconnect in phase D after our side sending out flags sequence in control channel.
0063	Can't receive any flag sequence in control channel within 25 sec in phase D.
0064	Can't detect any control channel signal in phase D within 60 sec even through energy still on the line.
0065	Can't detect any control channel signal within 60 sec after detect silience in phase D.
0066	Can't receive T.30 signal or carrier after sending CFR in V.34.

Error Code	Description
0069	Capability no match paper size after received is DCS signal.
0070	User press stop key within receiving.
0071	Memory full within receiving.
0080	Can't detect any G3 signal within 35 sec. specified by ITU-T in phase B.
0081	Received DTC signal in transmission phase.
0082	Transmitting unit receives a signal other than DIS or DTC. And DCN in phase B.
0083	Detected FSK signal, but Can't receive any signal within 35 sec.
0084	Detect DCN signal in phase B.
0085	Transmitting unit sending DCS 3 times consecutively, but each time responds with DIS/DTC
0086	Detected responds signal other than DTC,DIS,FTT,DCN or CFR after sending DCS.
0087	Training attempt has failed because speed unit can't adjust to low lower speed.
0088	Received DCN signal after sending out DCS signal
008B	Receivers protocol of DIS is received, but it is not compatible with our machine.
008C	Remote side or our side not support capability.
008D	Receivers protocol of DIS is received, but remote side can't receive document temporary, may because by run out of paper or other reason.
008F	Modem not ready to received V.34 data within 6 sec after received CFR signal.
0090	Called side document not ready for our polling.
0091	Can't receive any commabd after send DCN signal 3 times consecutively
0093	Received DCN signal after sending out DCN signal
0094	Time out during transmit ECM frame or RCP command.
0095	Wrong ID number
0096	SUBADDRESS/PASSWORD capability not match in polling Rx mode.
009A	Can't detect any signal after sending CI signal.
009D	Remote side hang up before V.34 modem enter phase 2 state in V.34 polling Rx.
009E	Manual Tx over 15 minutes whin in phase C by non-ECM mode.
00A0	User stop or cancel transmission job.
00A1	Document JAM within transmission
00AE	Can't finished V.8 procedure or detect V.21 signal after CM signal
00AF	Modem can't enter into control channel after TX side sending out RCP signal for V34
00B1	Can't finish V.8 procedure or detect V.21 signal after ANSam signal within 35 sec.
00B2	Can't detect phase 2 signal after our side sending CJ signal within 30 sec
00B3	Can't detect correct V.21 or JM signal after sending CM or CJ signal.
00B4	Can't detect correct phase 2 signal within 25 second after CM/JM signal exchange.
00B5	Can't detect phase 3 signal after Phase 2
00B6	Can't detect phase 4 signal within 25 sec after CM/JM exchange.
00B8	Remote side disconnect after our side sending DCS signal in V.34.
00BA	Cannot received correct signal after our side sending DTC signal in V.34.
00BB	Every time our side received DIS signal after sending DTC in V.34.
00BC	Modem can't ready within 10 second after entering primary channel in V.34.
00BD	Can't detect correct V.21 or JM signal after detected FSK frequency.
00BE	Remote side no document to be polled after V.8 handshaking.
00BF	Capability no match after V.8 handshaking
00C1	At phase-D, transmitting units out EOP 3 times consecutively, but receive no answer from receiving unit.
00C2	Remote side disconnect after sending out V.8 CM signal.
00C4	After sending MPS signal, the received is not one of MCF, RTN, PIP, PIN, RTP, DCN.
00C5	Received DCN signal after sending MPS signal.
00C9	At phase D, sending MPS 3 times consecutively, but no answer from receiveing unit.
00CA	After sending EOP signal, the received is not one of MCF, RTN, PIP, PIN, PRI-EOP, DCN, RTP.
00CB	After sending EOP signal, the received is DCN signal.

Error Code	Description
00CF	Received incorrect signal after sending DTC signal for V.34 polling.
00D0	Received ERR signal after sending EOR_NULL.
00D1	Received incorrect response after sending PPS_EOP signal
00D2	Received DCN after sending PPS_EOP signal
00D3	Received DCN after sending PPS_NULL signal
00D8	Can't detect correct phase 3 signal for poling.
00D9	Can't detect correct phase 3 signal after detect silence after phase 2.
00DA	Can't detect phase 4 signal within 30 sec.
00DB	Can't received any T.30 signal within 30 sec within phase 4.
00DC	Received T.30 signal in phase 4 other than DCS, DIS or DTC
00DE	Remote side no SUB capability.
00E0	At phase-D, transmitting units out PPS_NULL 3 times consecutively but receive not answer.
00E1	Received incorrect response after sending PPS_NULL.
00E2	Can't receive any response in RR response procedure after sending PPS_NULL.
00E4	At phase D, transmitting units out PPS_MPS 3 times consecutivery but receive no answer.
00E5	Received incorrect response after sending PPS_MPS signal
00E6	Can't receive any response in RR response procedure after sending PPS_MPS.
00E7	Reseived DCN after sending PPS_MPS.
00E8	At phase-D, transmitting units out PPS_EOP 3 times consecutively but receive no answer.
00E9	Receive PIN signal after sent last page data.
00EA	Can't receive any response in RR response procedure after sending PPS_EOP.
00EE	At phase-D, transmitting units out EOR_NULL 3 times consecutively but receive no answer.
00EF	Received incorrect response after sending EOR_NULL.
00F0	Can't receive any response in RR response procedure after sending EOR_NULL.
00F1	At phasa-D, transmitting units out EOR_MPS 3 times consecutively but receive no answer.
00F2	Received incorrect response after sending EOR_MPS.
00F3	Received ERR signal after sending EOR_MPS.
00F4	Can't receive any response in RR response procedure after sending EOR_MPS.
00F5	At phasa-D, transmitting units out EOR_EOP 3 times consecutively but receive no answer.
00F6	Received incorrect response after sending EOR_EOP
00F7	After Received ERR, our side can't received response after sending EOR_EOP command.
00FC	Can't receive any response after sending CTC.
00FD	Can't speed down to lower speed.
00FE	Memory full for transmission
00FF	REDAIL ALL FAIL

Chapter 14 Service Mode

Contents

14.1 Outline.....	14-1
14.1.1 Setting Service Data.....	14-1
14.1.2 How to Activate Service Mode.....	14-1
14.1.3 Service Data Menu.....	14-2
14.2 Service Soft Switch Settings (SSSW).....	14-4
14.2.1 Outline.....	14-4
14.2.1.1 SOFT SWITCH Explained	14-4
14.2.2 SSSW-SW02:.....	14-6
14.2.2.1 Function List	14-6
14.2.2.2 Bit 2 and 3 Elaborated.....	14-6
14.2.2.3 Bit 5 Elaborated.....	14-6
14.2.3 SSSW-SW04.....	14-6
14.2.3.1 Function List	14-6
14.2.3.2 Bit 8 Elaborated.....	14-7
14.2.4 SSSW-SW10.....	14-7
14.2.4.1 Function List	14-7
14.2.4.2 Bit 1 Elaborated.....	14-8
14.2.4.3 Bit 2 Elaborated.....	14-8
14.2.5 SSSW-SW16.....	14-8
14.2.5.1 Function List	14-8
14.2.6 SSSW-SW20.....	14-8
14.2.6.1 機能一覧.....	14-8
14.2.6.2 Bit6、7、8 の詳細.....	14-8
14.2.7 SSSW-SW21.....	14-9
14.2.7.1 Function List	14-9
14.2.7.2 Bit 4 Elaborated.....	14-9
14.2.8 SSSW-SW23.....	14-9
14.2.8.1 機能一覧.....	14-9
14.2.8.2 Bit5、6 の詳細.....	14-10
14.2.8.3 Bit7、8 の詳細.....	14-10
14.2.9 SSSW-SW30.....	14-10
14.2.9.1 Function List	14-10
14.2.9.2 Bit 7 and 8 Elaborated.....	14-11
14.2.10 SSSW-SW37.....	14-11
14.2.10.1 Function List	14-11
14.2.10.2 Bit 1 to Bit 6 Elaborated.....	14-11
14.2.11 SSSW-SW39.....	14-12
14.2.11.1 Function List	14-12
14.2.11.2 Bit 7 Elaborated.....	14-12
14.2.11.3 Bit 8 Elaborated.....	14-13
14.2.12 SSSW-SW51	14-13
14.2.12.1 Function List	14-13
14.2.12.2 Bit 3 and 4 Elaborated.....	14-13
14.2.13 SSSW-SW54.....	14-13
14.2.13.1 Function List	14-13
14.2.13.2 Bit 6 and 7 Elaborated.....	14-14
14.3 Test Mode (TEST)	14-15
14.3.1 Overview	14-15
14.3.1.1 Outline of test mode	14-15
14.3.1.2 Test mode menu	14-15
14.3.2 Faculty Test.....	14-16
14.3.2.1 Print test pattern	14-16
14.3.2.2 信号テスト	14-16

Contents

14.3.2.3 Sensor test	14-16
14.3.2.4 Key test	14-16

14.1 Outline

14.1.1 Setting Service Data

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

Service Mode contains the following service data items. Each service data can be viewed or modified using the menu items displayed on the screen.

SERVICE'S CHOICE

Contains items such as service data, formatting to the user data, data transmission / reception speed setting etc.

ADJUST

Contains a margin adjustment item in printing and scanning.

VERSION DISPLAY

Displays version information on the screen.

SOFT SWITCH

Contains basic service function setting items for facsimile such as communication trouble measure.

REPORT

Generates service reports.

CLEAR DATA

Formats each data.

FUNCTION

Runs print pattern output and ADF feeding tests.


H/W TEST

Runs sensor tests and key tests.

14.1.2 How to Activate Service Mode

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn


The following flow chart shows how to activate Service Mode.

 


F-14-1

14.1.3 Service Data Menu

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

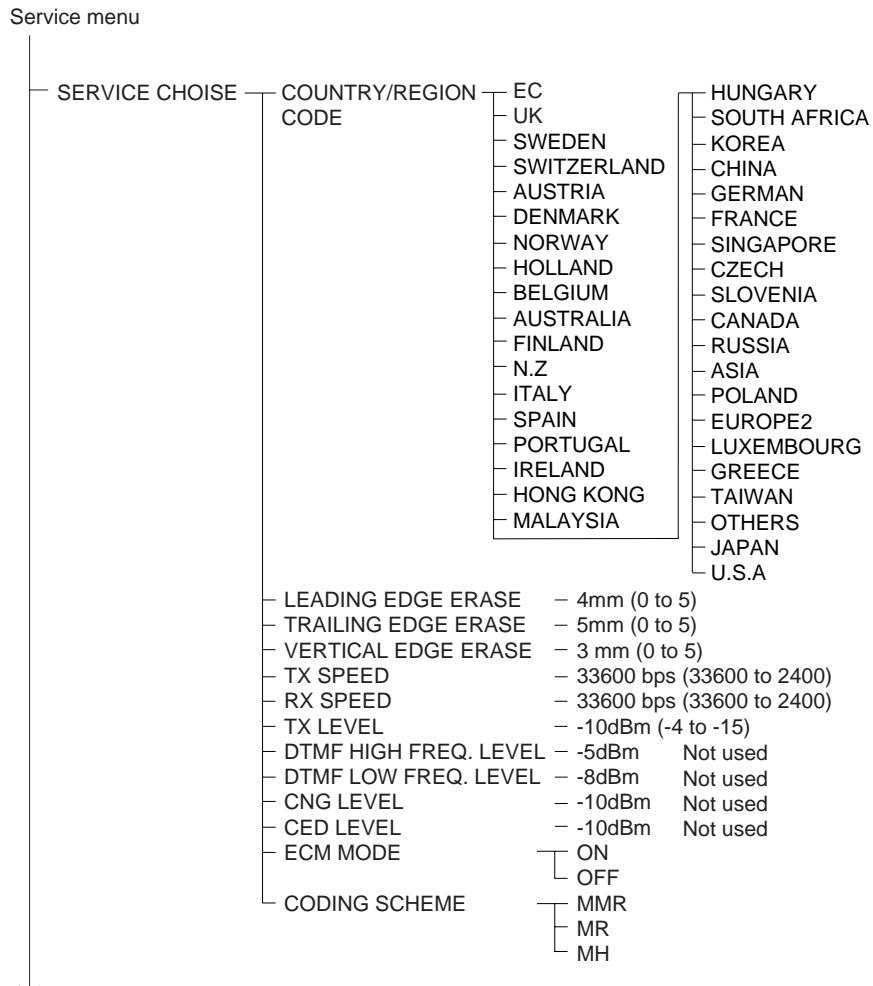

F-14-2

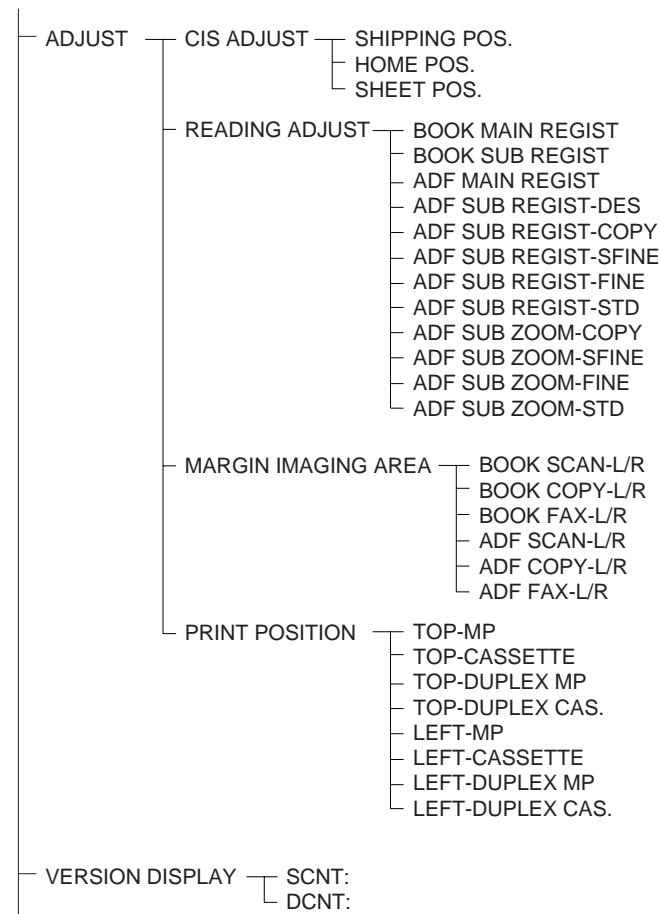

F-14-3

	Bit	1 2 3 4 5 6 7 8
SOFT SWITCH	SW01	----- Not used
	SW02	- 0 0 -----
		SW03~SW06: Not used
	SW07	----- Not used
	SW08	----- Not used
	SW09	----- Not used
	SW10	1 0 -----
		SW11~SW15: Not used
	SW16	- - 0 -----
	SW17	----- Not used
	SW18	----- Not used
	SW19	----- Not used
	SW20	----- Not used
	SW21	----- Not used
	SW22	----- Not used
	SW23	----- Not used
	SW24	----- Not used
		SW25~SW29: Not used
	SW30	----- 1 0
		SW31~SW36: Not used
	SW37	- - 0 0 0 --
		SW38~SW50: Not used
	SW51	- - 0 0 -----
	SW52	----- Not used
	SW53	----- Not used
	SW54	----- 0 1 0
		SW55~SW64: Not used

F-14-4

REPORT	— SERVICE DATA LIST
CLEAR DATA	<ul style="list-style-type: none"> — DRAM CLEAR — MEMORY CLEAR — PRINT COUNTER — SCAN COUNTER — PASSWORD CLEAR
FUNCTION	<ul style="list-style-type: none"> — PRINT TEST PATTERN — CONT. PRINTING — ON — OFF — BLACK — E — FIX — ASF — WHITE — SQUARE
H/W TEST	<ul style="list-style-type: none"> — SIGNAL TEST — RELAY TEST — SENSOR TEST — DIAL TEST — VOLUME TEST — KEY TEST — AGING — CIS TEST — BOOK SCAN TEST — COPY TEST — JPN PSUDO RING — ADF SCAN TEST — IR SCAN TEST

F-14-5

14.2 Service Soft Switch Settings (SSSW)


14.2.1 Outline

14.2.1.1 SOFT SWITCH Explained

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

Each entry / setting item of SOFT SWITCH consists of 8 bitswitches. Each bitswitch displayed on the screen has an assigned number as shown in the figure below.

Each Bit has a value - either 0 or 1.

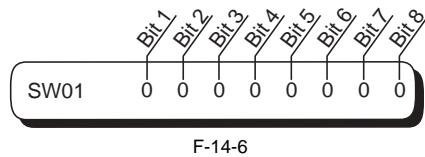

Shown below is what each number and data indicates in the bitswitch table.

Bit	Function	1	0
1	Not in Use		
2	Not in Use		
3	Original Reading Width	Letter	A4*
4	Not in Use		
5	Not in Use		
6	Not in Use		
7	Not in Use		
8	Not in Use		

Annotations with arrows point to the values 1 and 0:

- An arrow points to the value "1" with the text "Indicates the set value is '1.'"
- An arrow points to the value "0" with the text "Indicates the set value is '0.'"
- An arrow points to the value "A4*" with the text "Indicates this is the default setting."

F-14-7

14.2.2 SSSW-SW02:

14.2.2.1 Function List

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

T-14-1

Bit	Function	1	0
1	Not in Use	-	-
2	RTN Transmission Condition	1	0*
3	RTN Transmission Condition	1	0*
4	Not in Use	-	-
5	Change the Message Language	Displayed	Not displayed
6	Not in Use	-	-
7	Not in Use	-	-
8	Not in Use	-	-

14.2.2.2 Bit 2 and 3 Elaborated

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

If errors resulting from RTN signal transmission occur frequently while receiving, increase the parameter and ease the RTN transmission condition. The RTN transmission condition is defined as a percentage of the number of error lines in the total number of lines of a received image page. It is a combination of Bit 2 and Bit 3 and the percentages are shown below.

T-14-2

(Bit2, Bit3)=	(0, 0) 10%
	(1, 0) 15%
	(0, 1) 20%
	(1, 1) 25%

14.2.2.3 Bit 5 Elaborated

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

If 'displayed' is selected, an item is added to the user data so that the message language can be changed. By doing so, the language in which messages displayed on the screen and printed on the reports can be selected from a list of languages.

14.2.3 SSSW-SW04

14.2.3.1 Function List

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

T-14-3

Bit	Function	1	0
1	Not in Use	-	-
2	Not in Use	-	-
3	Not in Use	-	-
4	Not in Use	-	-
5	Not in Use	-	-
6	Not in Use	-	-
7	Not in Use	-	-
8	Alarm at the Completion of Transmission	ON	OFF *

14.2.3.2 Bit 8 Elaborated

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

An alarm can be set to go off when the transmission has been completed without a problem. Change the setting to ON in order to activate this alarm.

14.2.4 SSSW-SW10

14.2.4.1 Function List

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

T-14-4

Bit	Function	1	0
1	Alarm at Termination due to Error	ON *	OFF
2	Page Timer in Manual Sending	8 minutes	No Limit *
3	Not in Use	-	-
4	Not in Use	-	-
5	Not in Use	-	-
6	Not in Use	-	-
7	Not in Use	-	-
8	Not in Use	-	-

14.2.4.2 Bit 1 Elaborated

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

An alarm goes off when the transmission has been terminated due to some error. Change the setting to OFF in order to make this alarm inactive.

14.2.4.3 Bit 2 Elaborated

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

Enables to select a page timer used during manual sending.

14.2.5 SSSW-SW16**14.2.5.1 Function List**

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

T-14-5

Bit	Function	1	0
1	Not in Use	-	-
2	Not in Use	-	-
3	Original Reading Width	Letter	A4*
4	Not in Use	-	-
5	Not in Use	-	-
6	Not in Use	-	-
7	Not in Use	-	-
8	Not in Use	-	-

14.2.6 SSSW-SW20**14.2.6.1 ã@ñáíóó**

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

T-14-6

Bit	ã@ñáíóó	1	0
1	ñéégóp	-	-
2	ñéégóp	-	-
3	ñéégóp	-	-
4	ñéégóp	-	-
5	ñéégóp	-	-
6	CI MAX OFFéüä*	1	0*
7	CI MAX OFFéüä*	1*	0
8	CI MAX OFFéüä*	1*	0

14.2.6.2 Bit6ÅA7ÅA8Çèçþ

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

Bit6Å`Bit8ÇÃëgC>çáÇíÇ¼Ç...ÇÊÇËÅAà»â½ÇÃÇÊÇ§Ç...Ç»ÇÈÅB

(Bit6, Bit7, Bit8)= (0, 0, 0) 4 sec

(1, 0, 0) 5 sec

(0, 1, 0) 6 sec

(1, 1, 0) 7 sec

(0, 0, 1) 8 sec

(1, 0, 1) 9 sec

(0, 1, 1) 10 sec

(1, 1, 1) 11 sec

14.2.7 SSSW-SW21

14.2.7.1 Function List

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

T-14-7

Bit	Function	1	0
1	Not in Use	-	-
2	Not in Use	-	-
3	Not in Use	-	-
4	Received data in G3 mode contains 100 lines or less.	Print	Do Not Print*
5	Not in Use	-	-
6	Not in Use	-	-
7	Not in Use	-	-
8	Not in Use	-	-

14.2.7.2 Bit 4 Elaborated

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

When received data in G3 mode consists 100 lines or less, the data can be chosen to print or not to print. If the setting is changed to 'Do Not Print,' received data with 100 or less lines will be canceled and will not be printed out.

14.2.8 SSSW-SW23

14.2.8.1 ã@ñàíóó

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

T-14-8

Bit	ã@ñ	1	0
1	ñçégóp	-	-
2	ñçégóp	-	-
3	ñçégóp	-	-
4	ñçégóp	-	-
5	CI LONG OFFéúä*	1	0*
6	CI LONG OFFéúä*	1*	0
7	CI ONéúä*	1*	0
8	CI ONéúä*	1	0*

14.2.8.2 Bit5ÅA6ÇÃèçþ

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

Bit5ÇýBit6ÇÃëgÇ>çáÇíÇ!4Ç...ÇÊÇÈÅAà»â½ÇÃÇÉÇ\$Ç...Ç>ÇÈÅB

(Bit5, Bit6)= (0, 0) 200 msec

(1, 0) 500 msec

(0, 1) 1 sec

(1, 1) 1.5 sec

14.2.8.3 Bit7ÅA8ÇÃèçþ

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

Bit7ÇýBit8ÇÃëgÇ>çáÇíÇ!4Ç...ÇÊÇÈÅAà»â½ÇÃÇÉÇ\$Ç...Ç>ÇÈÅB

(Bit7, Bit8)= (0, 0) 100 msec

(1, 0) 150 msec

(0, 1) 200 msec

(1, 1) 300 msec

14.2.9 SSSW-SW30**14.2.9.1 Function List**

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

T-14-9

Bit	Function	1	0
1	Not in Use	-	-
2	Not in Use	-	-
3	Not in Use	-	-
4	Not in Use	-	-
5	Not in Use	-	-
6	Not in Use	-	-
7	Duration of Pause	1*	0
8	Duration of Pause	1	0*

14.2.9.2 Bit 7 and 8 Elaborated

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

Enables to set the duration of pause.
It is a combination of Bit 7 and Bit 8 and the duration is as listed below.

T-14-10

(Bit7, Bit8)=	(0, 0) 2.0 seconds
	(1, 0) 2.5 seconds
	(0, 1) 3.0 seconds
	(1, 1) 3.5 seconds

14.2.10 SSSW-SW37

14.2.10.1 Function List

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

T-14-11

Bit	Function	1	0
1	V.34 Maximum Baud Rate (TX)	1	0*
2	V.34 Maximum Baud Rate (TX)	1	0*
3	V.34 Maximum Baud Rate (TX)	1	0*
4	V.34 Maximum Baud Rate (RX)	1	0*
5	V.34 Maximum Baud Rate (RX)	1	0*
6	V.34 Maximum Baud Rate (RX)	1	0*
7	Not in Use	-	-
8	Not in Use	-	-

14.2.10.2 Bit 1 to Bit 6 Elaborated

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

Enables to select the maximum baud rate in V.34 primary channel from 2400, 2800, 3000, 3200, 3429 baud.
Different combinations of Bit 1 to Bit 6 lead to different baud rates as shown below.

In Sending

T-14-12

(Bit1, Bit2, Bit3)=	(0, 0, 0) 3429
	(1, 0, 0) 3200
	(0, 1, 0) 3000
	(1, 1, 0) 2800
	(0, 0, 1) 2400

In Receiving

T-14-13

(Bit4, Bit5, Bit6)=	(0, 0, 0) 3429
	(1, 0, 0) 3200
	(0, 1, 0) 3000

(1, 1, 0) 2800

(0, 0, 1) 2400

14.2.11 SSSW-SW39

14.2.11.1 Function List

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

T-14-14

Bit	Function	1	0
1	Not in Use	-	-
2	Not in Use	-	-
3	Not in Use	-	-
4	Not in Use	-	-
5	Not in Use	-	-
6	Not in Use	-	-
7	V8 Procedure at Incoming Call	Yes	No *
8	V8 Procedure at Outgoing Call	Yes	No *

14.2.11.2 Bit 7 Elaborated

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

Enables to choose whether or not to carry out V.8 procedure during incoming calls.
Change the setting to 'No' and V.8 procedure will not be carried out and T.30 procedure will start.

14.2.11.3 Bit 8 Elaborated

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

Enables to choose whether or not to carry out V.8 procedure during outgoing calls.

Change the setting to 'No' and V.8 procedure will not be carried out even if V.8 procedure has been received from the caller and T.30 procedure will be initiated.

14.2.12 SSSW-SW51

14.2.12.1 Function List

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

T-14-15

Bit	Function	1	0
1	Not in Use	-	-
2	Not in Use	-	-
3	Protocol Monitor Report Output	1	0*
4	Protocol Monitor Report Output	1	0*
5	Not in Use	-	-
6	Not in Use	-	-
7	Not in Use	-	-
8	Not in Use	-	-

14.2.12.2 Bit 3 and 4 Elaborated

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

Enables to specify the output setting of protocol monitor report.

Each combination of Bit 3 and Bit 4 as shown below determines the output setting.

T-14-16

(Bit3, Bit4)=	(0, 0) Do not print
	(1, 0) Print
	(0, 1) Print when error occurs
	(1, 1) Not in use

14.2.13 SSSW-SW54

14.2.13.1 Function List

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

T-14-17

Bit	Function	1	0
1	Not in Use	-	-
2	Not in Use	-	-
3	Not in Use	-	-
4	Not in Use	-	-
5	Not in Use	-	-
6	Time and Date Display in Reports	1	0*
7	Time and Date Display in Reports	1*	0

Bit	Function	1	0
8	Not in Use	-	-

14.2.13.2 Bit 6 and 7 Elaborated

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

Enables to select from different types of time and date display used in reports.
Each combination of Bit 6 and Bit7 as shown below determines the type.

T-14-18

(Bit6, Bit7)=	(0, 0) YYYY MM/DD
	(1, 0) MM/DD YYYY
	(0, 1) DD/MM YYYY
	(1, 1) Not in Use

14.3 Test Mode (TEST)

14.3.1 Overview

14.3.1.1 Outline of test mode

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

The static test mode can be operated according to the menu item displayed on the display.

Print test

The test pattern is printed in the print area.

H/W TEST

The function of the sensor and the operation panel can test.


14.3.1.2 Test mode menu

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

To operate the test mode,

- 1) Push the additional functions key and # key to enter SERVICE MODE.
- 2) Select FUNCTION or H/W TEST by the cursor button, and push the OK button.

Stopbotaning is pushed when coming off the test mode.

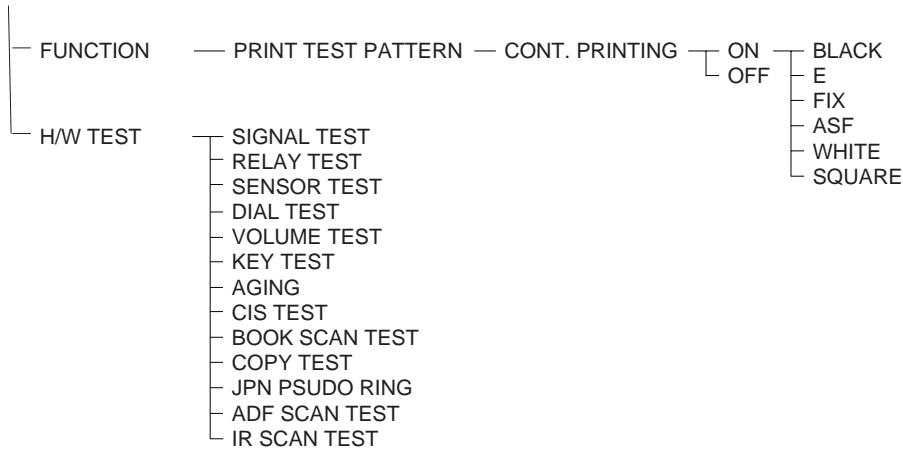

F-14-8

14.3.2 Faculty Test

14.3.2.1 Print test pattern

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

From the FUNCTION menu, select PRINT TEST PATTERN.

In this test, the printer unit will be used to print various patterns. For service work, be sure to use the BLACK pattern and the SQUARE pattern. Use the BLACK print pattern to make sure that the printout is free of white lines and unevenness; on the other hand, use the SQUARE printout to make sure that the printout is free of image contraction, elongation, and soiling.

MEMO

After completion of the print test, if the printing was normal, copy a document. If there is any defect in the copied image, there is a defect in the scan section.

14.3.2.2 MçÜEeEXÉg

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

H/W TESTÇseIesÇ2ÇÈÅBC±ÇÃÉeEXÉgÇÝÇÖÅAñ{ã@ÇÃÉÇÉfÉÄÇ©ÇÁidòbâÒê, êç±í[éqÇýEXÉsÅ[ÉJÇ©ÇÁêMçÜÇseöoÇ²ÇÈÅB TESTÉÅÉjÉÖÅ[Ç©ÇÁSIGNAL

çÄñ/	ì:óe
TX FSK	300bpsêMçÜeöeo
TX PSK	2400Å 14400bpsêMçÜeöeo
CED (2100HzÅj	CEDêMçÜeöeo
CNG (1100Hz)	CNGêMçÜeöeo
V.34 SIGNAL TX	V.34êMçÜeöeo

14.3.2.3 Sensor test

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

SENSOR TEST is selected from the H/W TEST menu. In this test, the state of each sensor of this machine can be checked on the display. For the sensor that uses the sensor arm and the microswitch, the output of the sensor can be confirmed by moving them by the hand.

T-14-19

Test	Function	Action
HOOK 1/2 DETECT	Handset status	OFF:inactive ON:Active
ADF DS TEST	ADF detect	OFF:inactive ON:Active
ADF DES TEST	ADF detect	OFF:inactive ON:Active
CRG TEST	Toner Cartridge detect	OFF:inactive ON:Active
TN Value	Display Toner remain value	from 0 to 127
RING DETECT	Ring detect	OFF:inactive ON:Active

14.3.2.4 Key test

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

KEY TEST is selected from the H/W TEST menu. In this test, whether the button on the operation panel works correctly can be checked.

Operation key test

In this test, the character on the display disappears when the key corresponding to the character is pushed. The correspondence table of the character and the key is as follows.

When the key is pushed for all keys, it is checked that the corresponding character on the display disappears.

T-14-20

Character	Operation button	Character	Operation button	Character	Operation button
0-9,*,#	Numeric key, tone key	K	[Start] key	V	[Hook] key
A	[COPY] key	L	[Clear] key	a	One-Touch Speed Dial [01] key
B	[SCAN] key	M	[Energy Saver] key	b	One-Touch Speed Dial [02] key
C	[Additional Functions] key	N	[View Settings] key	c	One-Touch Speed Dial [03] key
D	[System Monitor] key	O	[2-Sided] key	d	One-Touch Speed Dial [04] key
E	[Enlarge/Reduce] key	P	[Toner Gauge] key	e	One-Touch Speed Dial [05] key
F	[Density] key	Q	[OK] key	f	One-Touch Speed Dial [06] key
G	[Image Quality] key	R	[FAX] key	g	One-Touch Speed Dial [07] key
H	[Collate/2 on 1] key	S	[Address Book] key	h	One-Touch Speed Dial [08] key or [Reset] key

Character	Operation button	Character	Operation button	Character	Operation button
I	[+] key	T	[Coded Dial] key		
J	[-] key	U	[Redial/Pause] key		

One-touch dial key test

When the OK button is pushed, it becomes an one-touch dial key test.

The a thorough h characters corresponding to One-touch01 through 08 key are displayed. The character corresponding to respectively disappears when an one-touch key is pushed. Check that all characters disappear after all one-touch keys are pressed.

Chapter 15 Service Tools

Contents

15.1 Service Tools.....	15-1
15.1.1 Solvents / Lubricants Table	15-1

15.1 Service Tools

15.1.1 Solvents / Lubricants Table

i-SENSYS MF4300dn / i-SENSYS MF4350d / i-SENSYS MF4380dn / i-SENSYS MF4310/4318 / i-SENSYS MF4320d / i-SENSYS MF4330d / i-SENSYS MF4340d / i-SENSYS D450d / i-SENSYS MF4370dn

T-15-1

No.	Name	Purpose of Use	Component	Remarks
1	Alcohol	Cleaning E.g.) Plastics Rubber Metals Grease Buildup Toner Buildup	Alcohols	- Do not put close to fire. - Source locally
2	Lubricating Oil	- Apply to the gear - Apply in-between the shaft and the shaft support	Special oil Special solid lubricant agent Lithium soap	- Molykote EM-50L (Produced by Dow Corning Corporation) - Tool number: HY9-0007
3	Lubricating Oil	- Apply in-between the pressure roller shaft and the grounding plate	Carbon black Graphite Highly refined mineral oil	- Molykote 41 (Produced by Dow Corning Corporation) - Tool number: CK-8007



Use a rag to clean the exterior of the machine. Soak a rag in water and wring it out as completely as possible before cleaning.

PARTS CATALOG

**MF4383/4380/4370/4352/
4350/4340/4330/4322/4320,
D480/460/450/440/420**

Canon

Jul 17 2009

Contents

NUMERICAL INDEX

MF4383/4380/4370/4352/4350/4340/4330/4322/4320, D480/460/450/440/
420(Numerical Index) 1-1

MF4383/4380/4370/4352/4350/4340/4330/4322/4320, D480/460/450/
440/420(Parts Catalog)

A	ASSEMBLY LOCATION DIAGRAM	2-1
001	ACCESSORIES	2-2
100	EXTERNAL COVERS, PANELS, ETC.(ADF model EXCEPT MF4370dn,4370dnG)	2-5
100A	EXTERNAL COVERS, PANELS, ETC.(ADF model MF4370dn,4370dnG)	2-9
100B	EXTERNAL COVERS, PANELS, ETC.(COPYBOARD model)	2-12
100C	EXTERNAL COVERS, PANELS, ETC.(DADF model)	2-15
101	INTERNAL COMPONENTS 1	2-19
102	INTERNAL COMPONENTS 2	2-22
103	INTERNAL COMPONENTS 3	2-24
104	BASE PLATE ASS'Y	2-28
160	ADF ASS'Y (ADF model)	2-30
161	ADF ASS'Y (DADF model)	2-32
162	ADF PAPER FEED ASS'Y (DADF model)	2-35
310	PAPER PICK-UP ASS'Y	2-38
400	READER ASS'Y (ADF model)	2-40
401	READER ASS'Y (COPYBOARD model)	2-42
402	READER ASS'Y (DADF model)	2-44
810	FIXING ASS'Y	2-46

NUMERICAL INDEX

MF4383/4380/4370/4352/4350/4340/4330/4322/4320, D480/460/450/440/42

PARTS NUMBER	FIGURE & KEY NO.	PARTS NUMBER	FIGURE & KEY NO.	PARTS NUMBER	FIGURE & KEY NO.
FC5-4820-000	100 - 13	FC7-3637-000	160 - 8	FC7-3728-000	100A - 32
FC5-4820-000	100A - 32	FC7-3638-000	100 - 11	FC7-3728-000	100B - 13
FC5-4820-000	100C - 32	FC7-3638-000	100C - 11	FC7-3728-000	100C - 32
FC6-5204-000	100 - 1	FC7-3639-000	100 - 18	FC7-3741-000	160 - 1
FC6-5204-000	100B - 1	FC7-3639-000	100A - 18	FC7-3742-000	160 - 2
FC6-5204-000	100C - 1	FC7-3639-000	100B - 18	FC7-3743-000	100 - 6
FC6-5210-000	102 - 5	FC7-3639-000	100C - 18	FC7-3743-000	100B - 6
FC6-5210-000	103 - 22	FC7-3641-010	810 - 2	FC7-3744-000	100 - 7
FC6-5210-000	161 - 19	FC7-3642-000	810 - 3	FC7-3744-000	100C - 7
FC6-5210-000	162 - 1	FC7-3643-000	810 - 4	FC7-3751-000	100 - 15
FC7-3544-000	160 - 1	FC7-3644-000	810 - 5	FC7-3752-000	100 - 15
FC7-3548-000	160 - 3	FC7-3645-000	810 - 6	FC7-3753-000	100 - 15
FC7-3549-000	160 - 2	FC7-3646-000	102 - 7	FC7-3764-010	100 - 28
FC7-3553-000	400 - 12	FC7-3647-000	103 - 20	FC7-3764-010	100B - 28
FC7-3553-000	401 - 12	FC7-3648-000	100 - 9	FC7-3765-000	101 - 12
FC7-3554-010	100 - 4	FC7-3648-000	100A - 9	FC7-3766-000	100 - 29
FC7-3554-010	100A - 4	FC7-3648-000	100B - 9	FC7-3767-000	101 - 12
FC7-3554-010	100B - 4	FC7-3648-000	100C - 9	FC7-3788-000	001 - 3
FC7-3554-010	100C - 4	FC7-3649-000	100 - 10	FC7-3816-000	100 - 31
FC7-3557-000	810 - 1	FC7-3649-000	100A - 10	FC7-3816-000	100B - 31
FC7-3558-000	101 - 1	FC7-3649-000	100B - 10	FC7-3817-000	100 - 30
FC7-3561-010	100 - 6	FC7-3649-000	100C - 10	FC7-3817-000	100B - 30
FC7-3561-010	100B - 6	FC7-3652-000	810 - 7	FC7-3817-000	100C - 30
FC7-3565-000	100 - 2	FC7-3653-000	103 - 21	FC7-3821-000	100 - 14
FC7-3565-000	100B - 2	FC7-3656-000	100 - 19	FC7-3821-000	100A - 14
FC7-3566-010	100 - 7	FC7-3656-000	100B - 19	FC7-3821-000	100B - 14
FC7-3566-010	100B - 7	FC7-3657-000	100 - 20	FC7-3821-000	100C - 14
FC7-3566-010	100C - 7	FC7-3657-000	100A - 20	FC7-3823-000	310 - 8
FC7-3596-000	100 - 23	FC7-3657-000	100B - 20	FC7-3825-000	810 - 13
FC7-3596-000	100A - 23	FC7-3657-000	100C - 20	FC7-3826-000	810 - 12
FC7-3596-000	100B - 23	FC7-3666-000	102 - 4	FC7-3827-000	100B - 29
FC7-3596-000	100C - 23	FC7-3690-000	103 - 8	FC7-6052-010	162 - 2
FC7-3597-000	100 - 24	FC7-3700-000	102 - 2	FC7-6182-000	162 - 3
FC7-3597-000	100A - 24	FC7-3702-000	160 - 9	FC7-6278-000	162 - 4
FC7-3597-000	100B - 24	FC7-3710-000	100 - 11	FC7-6320-000	161 - 20
FC7-3597-000	100C - 24	FC7-3710-000	100B - 11	FC7-6321-000	161 - 21
FC7-3598-000	100 - 25	FC7-3710-000	100C - 11	FC7-6322-000	161 - 6
FC7-3598-000	100A - 25	FC7-3711-000	100 - 11	FC7-7296-000	100A - 5
FC7-3598-000	100B - 25	FC7-3711-000	100B - 11	FC7-7296-000	100C - 5
FC7-3598-000	100C - 25	FC7-3711-000	100C - 11	FC7-7300-000	100A - 26
FC7-3607-000	160 - 10	FC7-3712-000	100 - 11	FC7-7300-000	100C - 26
FC7-3615-000	400 - 1	FC7-3712-000	100B - 11	FC7-7301-000	100A - 19
FC7-3615-000	401 - 1	FC7-3713-000	400 - 5	FC7-7301-000	100C - 19
FC7-3616-000	400 - 2	FC7-3713-000	401 - 5	FC7-7334-000	100A - 31
FC7-3616-000	401 - 2	FC7-3714-000	100 - 12	FC7-7334-000	100C - 31
FC7-3621-000	103 - 6	FC7-3714-000	100A - 12	FC7-9572-000	100A - 13
FC7-3623-000	400 - 3	FC7-3714-000	100B - 12	FC7-9572-000	100C - 13
FC7-3623-000	401 - 3	FC7-3714-000	100C - 12	FC8-0651-000	100 - 7
FC7-3623-000	402 - 3	FC7-3726-000	100 - 26	FC8-0651-000	100A - 7
FC7-3630-000	400 - 4	FC7-3726-000	100B - 26	FC8-0651-000	100B - 7
FC7-3630-000	401 - 4	FC7-3727-000	101 - 13	FC8-0651-000	100C - 7
FC7-3630-000	402 - 4	FC7-3728-000	100 - 13	FC8-0654-000	100B - 32

NUMERICAL INDEX

MF4383/4380/4370/4352/4350/4340/4330/4322/4320, D480/460/450/440/420

PARTS NUMBER	FIGURE & KEY NO.	PARTS NUMBER	FIGURE & KEY NO.	PARTS NUMBER	FIGURE & KEY NO.
FC8-0657-000	400 - 12	FC8-9241-000	161 - 16	FC9-1290-000	100C - 24
FC8-0657-000	401 - 12	FC8-9242-000	161 - 10	FC9-1291-000	100 - 25
FC8-0659-000	100A - 11	FC8-9243-000	161 - 11	FC9-1291-000	100B - 25
FC8-0659-000	100C - 11	FC8-9251-000	161 - 24	FC9-1291-000	100C - 25
FC8-0690-000	100A - 1	FC8-9259-000	161 - 4	FC9-1292-000	100C - 26
FC8-0690-000	100C - 1	FC8-9295-000	101 - 2	FC9-1293-000	810 - 2
FC8-0697-000	160 - 8	FC8-9299-000	100C - 15	FC9-1296-000	100 - 2
FC8-1321-000	102 - 1	FC8-9300-000	100C - 15	FC9-1296-000	100B - 2
FC8-1389-000	100 - 6	FC8-9301-000	100C - 15	FC9-1297-000	100 - 26
FC8-1389-000	100A - 6	FC8-9303-000	101 - 12	FC9-1297-000	100B - 26
FC8-1389-000	100B - 6	FC8-9304-000	100C - 29	FC9-1299-000	100 - 18
FC8-1390-000	160 - 3	FC8-9305-000	101 - 12	FC9-1299-000	100B - 18
FC8-1392-000	100A - 11	FC8-9307-000	400 - 13	FC9-1299-000	100C - 18
FC8-1392-000	100C - 11	FC8-9307-000	401 - 13	FC9-1319-000	100A - 13
FC8-1393-000	100A - 11	FC8-9307-000	402 - 10	FC9-1319-000	100C - 13
FC8-1393-000	100C - 11	FC9-1253-000	161 - 15	FC9-1320-000	001 - 4
FC8-1394-000	100A - 11	FC9-1254-000	161 - 7	FC9-1321-000	001 - 4
FC8-1394-000	100C - 11	FC9-1255-000	161 - 8	FC9-1322-000	001 - 4
FC8-1403-000	100 - 30	FC9-1256-000	161 - 9	FC9-1324-000	400 - 13
FC8-1403-000	100A - 30	FC9-1257-000	161 - 11	FC9-1324-000	401 - 13
FC8-1403-000	100B - 30	FC9-1258-000	161 - 1	FC9-1324-000	402 - 10
FC8-1403-000	100C - 30	FC9-1259-000	161 - 4	FC9-1325-000	162 - 5
FC8-1407-000	160 - 1	FC9-1260-000	161 - 22	FC9-1337-000	100C - 15
FC8-1408-000	160 - 2	FC9-1261-000	161 - 2	FC9-5031-000	100C - 13
FC8-1425-000	100A - 7	FC9-1262-000	100C - 15	FC9-5032-000	161 - 1
FC8-1425-000	100C - 7	FC9-1263-000	100C - 15	FC9-5033-000	161 - 4
FC8-1426-000	160 - 1	FC9-1264-000	100C - 28	FC9-5034-000	161 - 2
FC8-1427-000	160 - 2	FC9-1266-000	101 - 12	FC9-5075-000	100 - 28
FC8-1541-000	100A - 15	FC9-1267-000	101 - 12	FC9-5075-000	100A - 28
FC8-1542-000	100A - 15	FC9-1268-000	101 - 12	FC9-5075-000	100C - 28
FC8-1543-000	100A - 15	FC9-1269-000	100C - 29	FC9-5077-000	101 - 12
FC8-1544-000	100A - 28	FC9-1270-000	402 - 5	FK2-1311-000	101 - 19
FC8-1544-000	100C - 28	FC9-1271-000	161 - 16	FK2-1316-000	101 - 22
FC8-1546-000	100A - 29	FC9-1274-000	100C - 6	FK2-1317-000	101 - 21
FC8-3826-000	001 - 6	FC9-1275-000	100C - 6	FK2-2869-000	400 - 6
FC8-3827-000	001 - 7	FC9-1276-000	100C - 6	FK2-2869-000	401 - 6
FC8-6307-000	001 - 6	FC9-1278-000	100 - 28	FK2-2869-000	402 - 6
FC8-9172-000	310 - 11	FC9-1278-000	100B - 28	FK2-3508-000	310 - 1
FC8-9207-000	161 - 1	FC9-1281-000	100 - 4	FK2-3510-000	103 - 11
FC8-9208-000	161 - 2	FC9-1281-000	100B - 4	FK2-3764-000	401 - 7
FC8-9209-000	161 - 15	FC9-1281-000	100C - 4	FK2-3765-000	400 - 8
FC8-9210-000	161 - 28	FC9-1283-000	100C - 5	FK2-3765-000	401 - 8
FC8-9211-000	161 - 7	FC9-1285-000	100C - 13	FK2-3765-000	402 - 8
FC8-9212-000	161 - 8	FC9-1287-000	102 - 2	FK2-4389-000	001 - 5
FC8-9213-000	161 - 9	FC9-1288-000	100 - 10	FK2-4390-000	101 - 17
FC8-9214-000	162 - 6	FC9-1288-000	100B - 10	FK2-4392-000	103 - 42
FC8-9231-000	100C - 6	FC9-1288-000	100C - 10	FK2-4393-000	101 - 18
FC8-9233-000	161 - 22	FC9-1289-000	100 - 23	FK2-4642-000	400 - 7
FC8-9234-000	161 - 1	FC9-1289-000	100B - 23	FK2-4642-000	402 - 7
FC8-9235-000	161 - 4	FC9-1289-000	100C - 23	FK2-6287-000	103 - 39
FC8-9237-000	161 - 2	FC9-1290-000	100 - 24	FK2-6890-000	101 - 20
FC8-9239-000	402 - 5	FC9-1290-000	100B - 24	FK2-7595-000	103 - 48

NUMERICAL INDEX

MF4383/4380/4370/4352/4350/4340/4330/4322/4320, D480/460/450/440/420

PARTS NUMBER	FIGURE & KEY NO.	PARTS NUMBER	FIGURE & KEY NO.	PARTS NUMBER	FIGURE & KEY NO.
FK2-7608-000	101 - 9	FL3-1021-000	161 - 17	FM3-4103-000	100B - 8
FK2-7609-000	101 - 9	FL3-1023-000	161 - 25	FM3-4107-000	100B - 5
FK2-7610-000	101 - 9	FL3-1394-000	100C - 2	FM3-4111-000	401 -
FK2-7611-000	101 - 9	FM2-8861-000	160 - 4	FM3-4488-000	100 - 16
FK2-7612-000	101 - 9	FM2-8862-000	160 - 5	FM3-4488-000	100A - 16
FK2-7613-000	101 - 9	FM2-8864-000	160 - 6	FM3-4488-000	100B - 16
FK2-7617-000	103 - 24	FM2-8868-000	400 - 10	FM3-4488-000	100C - 16
FK2-7660-000	103 - 5	FM2-8868-000	401 - 10	FM3-4491-000	160 - 4
FK2-7661-000	103 - 5	FM2-8870-000	100 - 16	FM3-4492-000	160 - 5
FK2-7663-000	103 - 5	FM2-8870-000	100B - 16	FM3-4493-000	160 - 6
FK2-7664-000	103 - 5	FM2-8870-000	100C - 16	FM3-4494-000	160 - 7
FK2-8243-000	001 - 1	FM2-8871-010	310 -	FM3-4495-000	400 -
FK2-8244-000	001 - 1	FM2-8872-000	310 - 2	FM3-4495-000	401 -
FK2-8245-000	001 - 1	FM2-8874-000	101 - 6	FM3-4496-000	100A - 8
FK2-8246-000	001 - 1	FM2-8877-000	104 - 2	FM3-5337-000	100A - 21
FK2-8247-000	001 - 1	FM2-8879-000	103 - 12	FM3-5338-000	100 - 21
FK2-8248-000	001 - 1	FM2-8882-000	102 - 3	FM3-5339-000	100 - 21
FK2-8249-000	001 - 1	FM2-8883-000	100 - 17	FM3-5340-000	100B - 21
FK2-8250-000	001 - 2	FM2-8883-000	100B - 17	FM3-5378-000	103 - 51
FK2-8251-000	001 - 1	FM2-8884-010	102 - 13	FM3-5872-000	001 - 5
FK2-8252-000	001 - 1	FM2-8885-000	810 - 8	FM3-7014-000	001 - 5
FK2-8253-000	001 - 1	FM2-8890-000	810 -	FM3-8649-000	100C - 21
FK2-8254-000	001 - 1	FM2-8891-000	810 -	FM3-8650-000	100C - 21
FK2-8255-000	001 - 1	FM2-8892-000	810 -	FM3-8651-000	100C - 21
FK2-8256-000	001 - 1	FM2-8908-000	100 - 22	FM3-8654-000	100C - 21
FK2-8257-000	001 - 1	FM2-8908-000	100B - 22	FM3-8656-000	100 - 21
FK2-8258-000	001 - 1	FM2-8910-000	104 - 3	FM3-8657-000	100 - 21
FK2-8259-000	001 - 1	FM2-8911-000	310 - 3	FM3-8658-000	100 - 21
FK2-8264-000	001 - 1	FM2-8912-000	101 - 5	FM3-8660-000	100 - 21
FK2-8265-000	001 - 1	FM2-8914-000	101 - 7	FM3-8661-000	100 - 21
FK2-8266-000	001 - 1	FM2-8915-000	810 - 9	FM3-8662-000	100 - 21
FK2-8267-000	001 - 1	FM2-8916-000	810 - 9	FM3-8663-000	100B - 21
FK2-8618-000	103 - 5	FM2-8917-000	810 - 9	FM3-8664-000	100B - 21
FK2-8619-000	103 - 5	FM2-8923-000	100 - 8	FM3-8665-000	100B - 21
FK2-9428-000	001 - 1	FM2-8923-000	100B - 8	FM3-8670-000	104 - 1
FL2-5620-000	100 - 3	FM2-8923-000	100C - 8	FM3-8672-000	161 - 5
FL2-5620-000	100C - 3	FM2-8924-000	100 - 8	FM3-8675-000	402 -
FL2-5621-000	401 - 9	FM2-8926-000	160 - 7	FM3-8677-000	161 - 18
FL2-5629-000	101 - 3	FM2-8933-000	100B - 5	FM3-8679-000	161 - 23
FL2-5630-000	100 - 27	FM2-9911-000	101 - 8	FM3-8680-000	162 -
FL2-5630-000	100B - 27	FM2-9912-000	101 - 8	FM3-8681-000	162 - 8
FL2-7040-000	100A - 2	FM2-9914-000	101 - 10	FM3-8682-000	162 - 9
FL2-7040-000	100C - 2	FM2-9916-000	101 - 11	FM3-8683-000	162 - 10
FL2-7043-000	100A - 27	FM3-0255-000	810 - 10	FM3-8684-000	162 - 11
FL2-7043-000	100C - 27	FM3-1494-000	101 - 14	FM3-8685-000	162 - 12
FL2-7044-000	100A - 27	FM3-1930-000	100A - 17	FM3-8686-000	162 - 13
FL2-7044-000	100C - 27	FM3-1930-000	100C - 17	FM3-8688-000	402 - 2
FL2-8495-000	100A - 3	FM3-1931-000	100A - 22	FM3-8690-000	162 - 14
FL2-8495-000	100C - 3	FM3-1931-000	100C - 22	FM3-8692-000	400 -
FL2-8496-000	400 - 9	FM3-4099-000	102 - 13	FM3-8693-000	100 - 21
FL2-8496-000	402 - 9	FM3-4103-000	100 - 8	FM3-8694-000	100 - 21
FL3-1018-000	162 - 7	FM3-4103-000	100A - 8	FM3-8695-000	100B - 21

NUMERICAL INDEX

MF4383/4380/4370/4352/4350/4340/4330/4322/4320, D480/460/450/440/420

PARTS NUMBER	FIGURE & KEY NO.	PARTS NUMBER	FIGURE & KEY NO.	PARTS NUMBER	FIGURE & KEY NO.
FM3-8696-000	100B - 21	FM4-1277-000	103 - 5	HH2-2824-000	103 - 43
FM3-8697-000	100B - 21	FM4-1278-000	103 - 5	HK1-0550-000	103 - 46
FM3-8698-000	100 - 21	FM4-1643-000	103 - 5	HK1-0559-000	103 - 44
FM3-8729-000	102 - 12	FM4-1993-000	100C - 8	NPN	001 -
FM3-8733-000	162 - 15	FM4-1994-000	100C - 8	NPN	100 -
FM3-8736-000	103 - 49	FM4-1995-000	100C - 8	NPN	100A -
FM3-8739-000	101 - 8	FM4-1996-000	100C - 8	NPN	100B -
FM3-8742-000	162 - 15	FM4-1997-000	100C - 21	NPN	100C -
FM3-9066-000	102 - 6	FM4-1998-000	810 -	NPN	101 -
FM3-9243-000	103 - 5	FM4-2001-000	100 - 21	NPN	102 -
FM3-9486-000	161 - 5	FM4-2002-000	100B - 21	NPN	103 -
FM3-9487-000	100C - 22	FM4-2003-000	100C - 21	NPN	104 -
FM3-9488-000	402 -	FM4-2004-000	100 - 21	NPN	160 -
FM3-9490-000	162 -	FM4-2091-000	103 - 5	NPN	161 -
FM3-9491-000	162 - 13	FM4-2098-000	001 - 5	QK1-6441-000	103 - 45
FM3-9494-000	104 - 2	FM4-4104-000	100B - 5	QK1-6441-000	103 - 47
FM3-9495-000	104 - 1	FU5-1552-000	161 - 26	RA0-1019-000	103 - 1
FM3-9496-000	810 -	FU5-1552-000	162 - 16	RA0-1172-000	103 - 18
FM3-9497-000	810 -	FU5-1804-000	102 - 9	RC1-1953-000	103 - 2
FM3-9498-000	100 - 22	FU5-1805-000	102 - 10	RC1-1954-000	103 - 3
FM3-9498-000	100B - 22	FU6-0831-000	161 - 12	RC1-1955-000	103 - 4
FM3-9499-000	100C - 17	FU6-2248-000	161 - 13	RC1-1959-000	103 - 7
FM3-9500-000	100C - 21	FU6-2249-000	162 - 17	RC1-1960-000	310 - 4
FM3-9501-000	100C - 21	FU6-2254-000	103 - 27	RC1-1990-000	310 - 5
FM3-9502-000	100C - 21	FU6-2255-000	103 - 28	RC1-1993-000	310 - 6
FM3-9503-000	100 - 21	FU6-2255-000	310 - 14	RC1-1994-000	310 - 7
FM3-9504-000	100B - 21	FU6-2875-000	810 - 11	RC1-2040-000	310 - 9
FM3-9505-000	100B - 21	FU6-2998-000	162 - 18	RC1-2041-000	310 - 10
FM3-9506-000	100 - 21	FU6-2999-000	162 - 19	RC1-2043-000	310 - 12
FM3-9507-000	100 - 17	FU7-0538-000	103 - 29	RC1-2044-000	310 - 13
FM3-9507-000	100B - 17	FU7-0539-000	103 - 30	RC1-2079-000	810 - 14
FM3-9509-000	100A - 21	FU7-0540-000	103 - 31	RC1-2097-000	810 - 15
FM3-9510-000	100A - 21	FU7-0541-000	103 - 23	RC1-2098-000	810 - 16
FM3-9511-000	100A - 21	FU7-0542-000	103 - 32	RC1-2139-000	810 - 17
FM3-9512-000	100A - 21	FU7-0543-000	103 - 33	RC1-3579-000	103 - 26
FM3-9513-000	100A - 21	FU7-0544-000	103 - 25	RC1-5550-000	310 - 15
FM3-9514-000	100A - 21	FU7-0545-000	103 - 34	RC1-5551-000	310 - 16
FM3-9515-000	100A - 21	FU7-0546-000	103 - 40	RC1-5552-000	310 - 17
FM3-9520-000	100 - 21	FU7-0547-000	103 - 41	RC1-5553-000	310 - 18
FM3-9522-000	100C - 21	FU7-0667-000	162 - 26	RL1-0266-000	310 - 19
FM4-0140-000	103 - 5	FU7-0668-000	162 - 20	RL1-0268-000	310 - 20
FM4-1265-000	103 - 5	FU7-0669-000	162 - 21	RM1-2046-000	310 - 21
FM4-1267-000	103 - 5	FU7-0671-000	162 - 22	RU5-0174-000	103 - 14
FM4-1268-000	103 - 5	FU7-0672-000	161 - 27	RU5-0175-000	103 - 15
FM4-1269-000	103 - 5	FU7-0676-000	162 - 23	RU5-0176-000	103 - 16
FM4-1270-000	103 - 5	FU7-0678-000	162 - 24	RU5-0179-000	103 - 19
FM4-1271-000	103 - 5	FU7-2018-000	161 - 3	RU5-0180-000	310 - 22
FM4-1272-000	103 - 5	FU7-2021-000	162 - 25	RU5-0312-000	103 - 35
FM4-1273-000	103 - 5	FU8-0470-000	103 - 38	RU5-0313-000	103 - 36
FM4-1274-000	103 - 5	HB1-4978-000	001 - 6	RU5-0314-000	103 - 37
FM4-1275-000	103 - 5	HC1-2012-000	001 - 6	RU5-0503-000	103 - 10
FM4-1276-000	103 - 5	HC1-2034-000	001 - 7	RU5-0505-000	103 - 13

NUMERICAL INDEX

MF4383/4380/4370/4352/4350/4340/4330/4322/4320, D480/460/450/440/420

PARTS NUMBER	FIGURE & KEY NO.	PARTS NUMBER	FIGURE & KEY NO.	PARTS NUMBER	FIGURE & KEY NO.
RU5-0506-000	103 - 17				
RU5-0523-000	810 - 19				
RU5-2178-000	810 - 20				
RU5-2492-000	102 - 11				
VS1-7177-002	101 - 15				
WG8-5696-000	162 - 27				
XA9-0476-000	100 - 32				
XA9-0476-000	100A - 33				
XA9-0476-000	100B - 15				
XA9-0476-000	100C - 33				
XA9-0476-000	161 - 14				
XA9-0476-000	400 - 11				
XA9-0476-000	401 - 11				
XA9-0476-000	402 - 1				
XA9-1420-000	101 - 4				
XA9-1420-000	102 - 15				
XA9-1495-000	100 - 5				
XA9-1495-000	100A - 34				
XA9-1495-000	100B - 3				
XA9-1495-000	100C - 34				
XA9-1495-000	101 - 16				
XA9-1495-000	102 - 14				
XA9-1495-000	103 - 9				
XA9-1495-000	104 - 4				
XA9-1495-000	310 - 23				
XA9-1501-000	102 - 8				
XA9-1503-000	103 - 50				
XB2-8300-609	810 - 501				
XB4-5401-009	101 - 501				
XB4-5401-009	160 - 502				
XB4-5401-009	161 - 502				
XB4-5401-009	310 - 501				
XB4-5401-009	400 - 501				
XB4-5401-009	401 - 501				
XB4-5401-009	402 - 501				
XB4-7300-807	160 - 501				
XB4-7300-807	161 - 501				
XB4-7300-807	162 - 501				
XB4-7300-807	400 - 502				
XB4-7300-807	401 - 502				
XB4-7300-807	402 - 502				

MF4383/4380/4370/4352/4350/4340/ 4330/4322/4320, D480/460/450/440/ 420(Parts Catalog)

imageCLASS MF4383dn

230V KR	F15-6667-000	ETC	DADF/FAX model
----------------	---------------------	------------	----------------

imageCLASS MF4380dn

120V US	F15-6631-000	EJW	DADF/FAX model
120V CA,LTN	F15-6631-000	EJY	DADF/FAX model
230V ASIA	F15-6641-000	EKE	DADF/FAX model
230V KR	F15-6661-000	ERY	DADF/FAX model
230V AU	F15-6681-000	EKF	DADF/FAX model

imageCLASS MF4370dnG

230V CN	F15-6672-000	FWY	ADF/FAX model
----------------	---------------------	------------	---------------

imageCLASS MF4370dn

120V TW	F15-6622-000	EKV	ADF/FAX model
120V US	F15-6632-000	EKH	ADF/FAX model
120V CA,LTN	F15-6632-000	EKJ	ADF/FAX model
230V ASIA	F15-6642-000	EKQ	ADF/FAX model
230V CN	F15-6652-000	EKT	ADF/FAX model
230V KR	F15-6662-000	EKU	ADF/FAX model
230V AU	F15-6682-000	EKR	ADF/FAX model

imageCLASS MF4352d

230V KR **F15-6668-000** ESU ADF/FAX model

imageCLASS MF4350dG

230V CN **F15-6673-000** FWZ ADF/FAX model

imageCLASS MF4350d

120V TW **F15-6623-000** ELN ADF/FAX model

120V US **F15-6633-000** EKW ADF/FAX model

120V CA,LTN **F15-6633-000** EKX ADF/FAX model

230V ASIA **F15-6643-000** ELD ADF/FAX model

230V CN **F15-6653-000** ELJ ADF/FAX model

230V KR **F15-6663-000** ELK ADF/FAX model

230V AU **F15-6683-000** ELE ADF/FAX model

imageCLASS MF4340d

230V KR **F15-6664-000** EMB COPYBOARD/FAX model

230V AU **F15-6684-000** EMA COPYBOARD/FAX model

imageCLASS MF4330dG

230V CN **F15-6675-000** FXA ADF model

imageCLASS MF4330d

230V ASIA **F15-6645-000** EMN ADF model

230V CN **F15-6655-000** EMP ADF model

230V KR **F15-6665-000** ERX ADF model

imageCLASS MF4322dG

230V CN	F15-6676-000	FXC	COPYBOARD model
---------	---------------------	-----	-----------------

imageCLASS MF4322d

230V CN	F15-6656-000	EMV	COPYBOARD model
---------	---------------------	-----	-----------------

imageCLASS MF4320d

230V ASIA	F15-6646-000	EMT	COPYBOARD model
230V CN	F15-6658-000	EMW	COPYBOARD model
230V KR	F15-6666-000	ERW	COPYBOARD model

i-SENSYS MF4380dn

230V EUR1	F15-6691-000	EJZ	DADF/FAX model
230V EUR2	F15-6691-000	EKA	DADF/FAX model
230V EUR3	F15-6691-000	EKD	DADF/FAX model

i-SENSYS MF4370dn

230V EUR1	F15-6692-000	EKK	ADF/FAX model
230V EUR2	F15-6692-000	EKN	ADF/FAX model
230V EUR3	F15-6692-000	EKP	ADF/FAX model

i-SENSYS MF4350d

230V EUR1	F15-6693-000	EKZ	ADF/FAX model
230V EUR2	F15-6693-000	ELA	ADF/FAX model
230V EUR3	F15-6693-000	ELC	ADF/FAX model

i-SENSYS MF4340d

230V EUR1	F15-6694-000	ELU	COPYBOARD/FAX model
230V EUR2	F15-6694-000	ELX	COPYBOARD/FAX model
230V EUR3	F15-6694-000	ELZ	COPYBOARD/FAX model

i-SENSYS MF4330d

230V EUR1	F15-6695-000	EMF	ADF model
230V EUR2	F15-6695-000	EML	ADF model

i-SENSYS MF4320d

230V EUR1	F15-6696-000	EMQ	COPYBOARD model
230V EUR2	F15-6696-000	EMS	COPYBOARD model

Satera MF4380dn

100V JP	F15-6611-000	EKG	DADF/FAX model
---------	---------------------	-----	----------------

Satera MF4370dn

100V JP	F15-6612-000	EKS	ADF/FAX model
---------	---------------------	-----	---------------

Satera MF4350d

100V JP	F15-6613-000	ELF	ADF/FAX model
---------	---------------------	-----	---------------

Satera MF4330d

100V JP	F15-6615-000	EMD	ADF model
---------	---------------------	-----	-----------

imageCLASS D480

120V US	F15-6931-000	DTG	DADF/FAX model
---------	---------------------	-----	----------------

120V CA F15-6931-000 DTJ DADF/FAX model

imageCLASS D460

120V US F15-6932-000 DTK DADF model

120V CA F15-6932-000 DTM DADF model

imageCLASS D440

120V US F15-6934-000 DTQ ADF model

120V CA F15-6934-000 DTR ADF model

imageCLASS D420

120V US F15-6935-000 DTS COPYBOARD model

120V CA F15-6935-000 DTT COPYBOARD model

i-SENSYS D450d

230V EUR1 F15-6993-000 DTN DADF model

230V EUR2 F15-6993-000 DTP DADF model

Satera D450d

100V JP F15-6913-000 ERZ DADF model

Contents

A	ASSEMBLY LOCATION DIAGRAM	2-1
001	ACCESSORIES.....	2-2
100	EXTERNAL COVERS, PANELS, ETC.(ADF model EXCEPT MF4370dn,4370dnG)2-5	2-5
100A	EXTERNAL COVERS, PANELS, ETC.(ADF model MF4370dn,4370dnG)	2-9
100B	EXTERNAL COVERS, PANELS, ETC.(COPYBOARD model)	2-12
100C	EXTERNAL COVERS, PANELS, ETC.(DADF model).....	2-15
101	INTERNAL COMPONENTS 1	2-19
102	INTERNAL COMPONENTS 2	2-22
103	INTERNAL COMPONENTS 3	2-24
104	BASE PLATE ASS'Y.....	2-28
160	ADF ASS'Y (ADF model)	2-30
161	ADF ASS'Y (DADF model).....	2-32
162	ADF PAPER FEED ASS'Y (DADF model).....	2-35
310	PAPER PICK-UP ASS'Y	2-38
400	READER ASS'Y (ADF model)	2-40
401	READER ASS'Y (COPYBOARD model).....	2-42
402	READER ASS'Y (DADF model).....	2-44
810	FIXING ASS'Y.....	2-46

FIGURE A ASSEMBLY LOCATION DIAGRAM




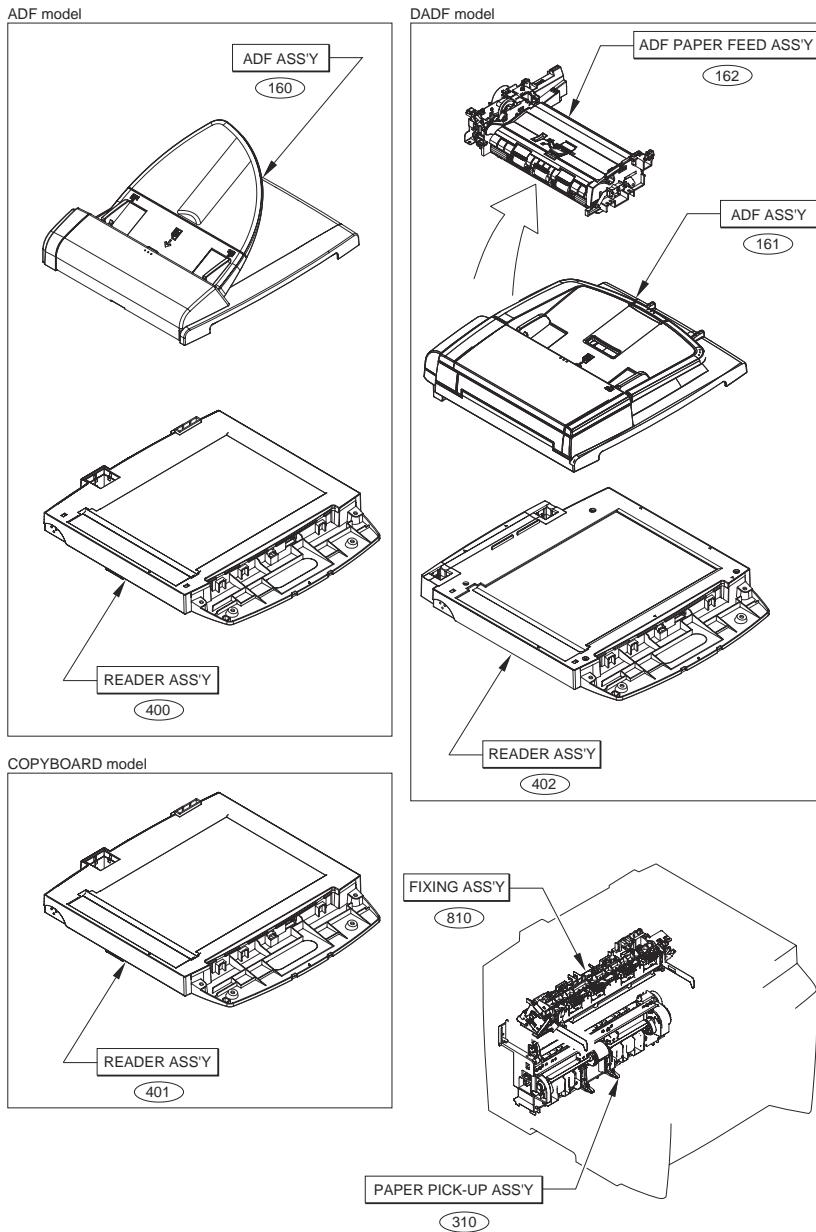


FIGURE 001


ACCESSORIES

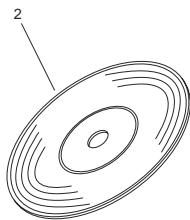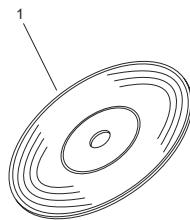


FAX model

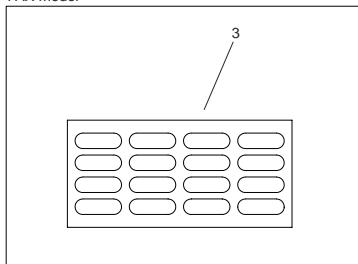


CA.LTN

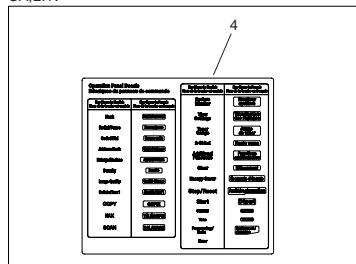

MF4370dn,4370dnG,4350d,4350dG CN

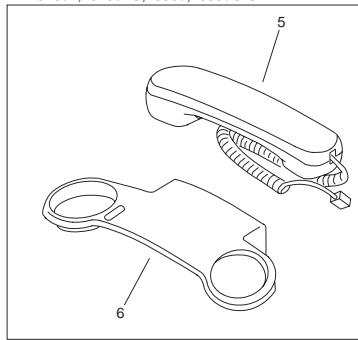

MF4370dn,4350d TW

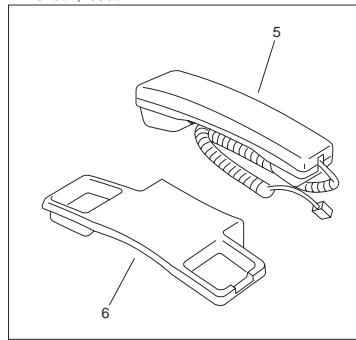

MF4370dn,4350d TW,CN
MF4370dnG,4350dG CN

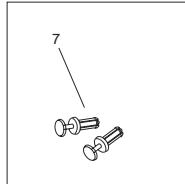


FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
Fig.001	NPN		RF	ACCESSORIES		
1	FK2-8248-000		1	CD-ROM, USER SOFTWARE	UK English EKE,EKF,EKQ,EKR	
1	FK2-8258-000		1	CD-ROM, USER SOFTWARE	UK English ELD,ELE,EMA,EMN,EMT	
1	FK2-8246-000		1	CD-ROM, USER SOFTWARE	English,French,Italian,German,Spanish EZ,EKA,EKD,EKK,EKN,EKP	
1	FK2-8247-000		1	CD-ROM, USER SOFTWARE	English,Russian,Dutch,Polish EZ,EKA,EKD,EKK,EKN,EKP	
1	FK2-8256-000		1	CD-ROM, USER SOFTWARE	English,French,Italian,German,Spanish EKZ,ELA,ELC,ELU,ELX,ELZ,EMF,EML,EMQ,EMS	
1	FK2-8257-000		1	CD-ROM, USER SOFTWARE	English,Russian,Dutch,Polish EKZ,ELA,ELC,ELU,ELX,ELZ,EMF,EML,EMQ,EMS	
1	FK2-8266-000		1	CD-ROM, USER SOFTWARE	English,French,Italian,German,Spanish DTN,DTP	
1	FK2-8267-000		1	CD-ROM, USER SOFTWARE	English,Russian,Dutch,Polish DTN,DTP	
1	FK2-8243-000		1	CD-ROM, USER SOFTWARE	US English EJW,EKH	
1	FK2-8244-000		1	CD-ROM, USER SOFTWARE	English,French,Spanish,Portuguese EJY,EKJ	
1	FK2-8251-000		1	CD-ROM, USER SOFTWARE	US English DTG,DTK	
1	FK2-8252-000		1	CD-ROM, USER SOFTWARE	English,French,Spanish,Portuguese DTJ,DTM	
1	FK2-8253-000		1	CD-ROM, USER SOFTWARE	US English EKW	
1	FK2-8254-000		1	CD-ROM, USER SOFTWARE	English,French,Spanish,Portuguese EKX	
1	FK2-8264-000		1	CD-ROM, USER SOFTWARE	UK English DTQ,DTS	
1	FK2-8265-000		1	CD-ROM, USER SOFTWARE	English,French,Spanish,Portuguese DTR,DTT	
1	FK2-8249-000		1	CD-ROM, USER SOFTWARE	UK English,Korean,Simplified Chinese,Traditional Chinese ETC,ERY,EKV,EKT,EKU,FWY	

FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
1	FK2-8259-000		1	CD-ROM, USER SOFTWARE	UK English,Korean,Simplified Chinese,Traditional Chinese ESU,ELN,ELJ,ELK,EMB,EMP,ERX,EMV,EMW,ERW, FWZ,FXA,FXC	
1	FK2-8245-000		1	CD-ROM, USER SOFTWARE	Japanese EKG,EKS	
1	FK2-8255-000		1	CD-ROM, USER SOFTWARE	Japanese ELF,EMD	
1	FK2-9428-000		1	CD-ROM, USER SOFTWARE	Japanese ERZ	
2	FK2-8250-000		1	CD-ROM, UTILITY	English,French,Italian,German,Spanish i-SENSYS	
3	FC7-3788-000		1	LABEL, DESTINATION	FAX model	
4	FC9-1320-000		1	LABEL, PANEL	MF4380dn CA,LTN	
4	FC9-1321-000		1	LABEL, PANEL	MF4370dn,4350d CA,LTN	
4	FC9-1322-000		1	LABEL, PANEL	D400 Series CA,LTN	
5	FM3-5872-000		1	HANDSET UNIT	MF4370dn,4370dnG CN	
5	FM3-7014-000		1	HANDSET UNIT	MF4370dn TW	
5	FK2-4389-000		1	HANDSET UNIT	MF4350d,4350dG CN	
5	FM4-2098-000		1	HANDSET UNIT	MF4350d TW	
6	FC8-3826-000		1	HOLDER, HANDSET CRADLE	MF4370dn TW	
6	FC8-6307-000		1	HOLDER, HANDSET CRADLE	MF4370dn CN, MF4370dnG CN	
6	HB1-4978-000		1	HOLDER, HANDSET CRADLE	MF4350d TW	
6	HC1-2012-000		1	HOLDER, HANDSET CRADLE	MF4350d,4350dG CN	
7	FC8-3827-000		2	RIVET	MF4370dn TW,CN, MF4370dnG CN	
7	HC1-2034-000		2	RIVET	MF4350d CN,TW, MF4350dG CN	

FIGURE 100
**EXTERNAL COVERS, PANELS, ETC.(ADF model
 EXCEPT MF4370dn,4370dnG)**

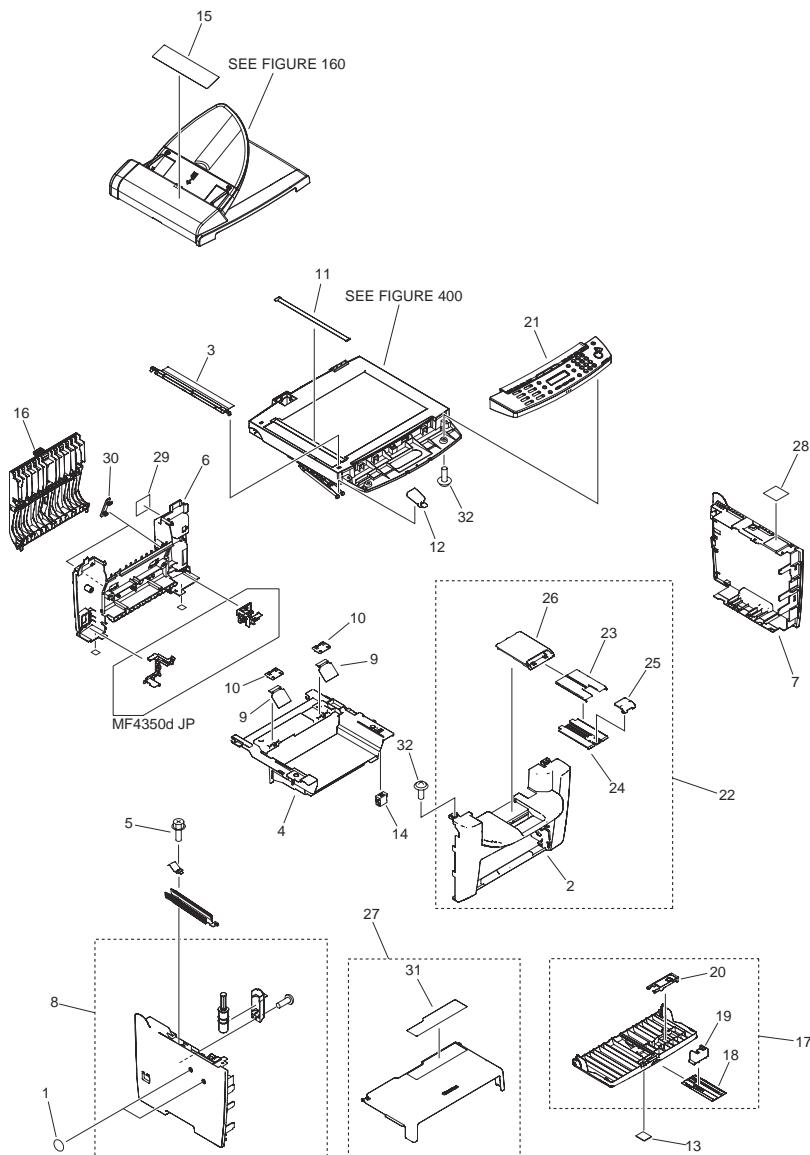


FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
Fig.100	NPN		RF	EXTERNAL COVERS, PANELS, ETC.	ADF model EXCEPT MF4370dn,4370dnG	
1	FC6-5204-000		2	SHEET, HANDSET		
2	FC7-3565-000		1	COVER UNIT, FRONT	MF4300 Series	
2	FC9-1296-000		1	COVER UNIT, FRONT	D400 Series	
3	FL2-5620-000		1	HOLDER, DOCUMENT RELEASE SHEET		
4	FC7-3554-010		1	COVER, CRG	MF4300 Series	
4	FC9-1281-000		1	COVER, CRG	D400 Series	
5	XA9-1495-000		1	SCREW, RS, M3X6		
6	FC7-3561-010		1	COVER, REAR	MF4352d,4350d	
6	FC8-1389-000		1	COVER, REAR	MF4350dG,4330dG	
6	FC7-3743-000		1	COVER, REAR	MF4330d,D440	
7	FC7-3566-010		1	COVER, RIGHT	MF4352d,D440, MF4350d, 4330d EXCEPT JP	
7	FC7-3744-000		1	COVER, RIGHT	MF4350d,4330d JP	
7	FC8-0651-000		1	COVER, RIGHT	MF4350dG,4330dG	
8	FM2-8923-000		1	LEFT COVER ASS'Y	MF4352d,D440, MF4350d, 4330d EXCEPT JP	
8	FM2-8924-000		1	LEFT COVER ASS'Y	MF4350d,4330d JP	
8	FM3-4103-000		1	LEFT COVER ASS'Y	MF4350dG,4330dG	
9	FC7-3648-000		2	SHEET, PAPER FEED		
10	FC7-3649-000		2	CAP, SHEET	MF4300 Series	
10	FC9-1288-000		2	CAP, SHEET	D400 Series	
11	FC7-3638-000		1	PLATE, PAPER SIZE	MF4350d,4330d AB SIZE	
11	FC7-3710-000		1	PLATE, PAPER SIZE	MF4350d,4330d A SIZE	
11	FC7-3711-000		1	PLATE, PAPER SIZE	MF4350d,D440 A/INCH SIZE	
11	FC7-3712-000		1	PLATE, PAPER SIZE	MF4352d,4350d,4350dG, MF4330d,4330dG AB/ INCH SIZE	
12	FC7-3714-000		1	RETAINER, STAY		
13	FC7-3728-000		1	EMBLEM, LASER SHOT	EXCEPT JP	
13	FC5-4820-000		1	EMBLEM, SATERA	JP	
14	FC7-3821-000		1	MAGNET		
15	FC7-3751-000		1	SHEET, GLASS CLEANING	MF4350d,D440 US	

FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
15	FC7-3752-000		1	SHEET, GLASS CLEANING	MF4350d,4330d EUR	
15	FC7-3753-000		1	SHEET, GLASS CLEANING	MF4352d KR, MF4350d,4350dG, MF4330d,4330dG ASIA,AU,CN,JP,KR,TW	
16	FM2-8870-000		1	DUPLEXING COVER UNIT	EXCEPT MF4350dG,4330dG	
16	FM3-4488-000		1	DUPLEXING COVER UNIT	MF4350dG,4330dG	
17	FM2-8883-000		1	PAPER PICK-UP TRAY ASS'Y	MF4300 Series	
17	FM3-9507-000		1	PAPER PICK-UP TRAY ASS'Y	D400 Series	
18	FC7-3639-000		1	PLATE, EXTENSION	MF4300 Series	
18	FC9-1299-000		1	PLATE, EXTENSION	D400 Series	
19	FC7-3656-000		1	STOPER, PAPER		
20	FC7-3657-000		1	STOPER, CARD		
21	FM4-2004-000		1	CONTROL PANEL ASS'Y	MF4352d KR	
21	FM3-8656-000		1	CONTROL PANEL ASS'Y	MF4350d US	
21	FM3-8657-000		1	CONTROL PANEL ASS'Y	MF4350d EUR	
21	FM3-8658-000		1	CONTROL PANEL ASS'Y	MF4350d ASIA,AU	
21	FM3-8660-000		1	CONTROL PANEL ASS'Y	MF4350d CN	
21	FM3-8661-000		1	CONTROL PANEL ASS'Y	MF4350d KR	
21	FM3-8662-000		1	CONTROL PANEL ASS'Y	MF4350d TW	
21	FM3-9506-000		1	CONTROL PANEL ASS'Y	MF4350d JP	
21	FM3-5338-000		1	CONTROL PANEL ASS'Y	MF4350dG CN	
21	FM3-8693-000		1	CONTROL PANEL ASS'Y	MF4330d ASIA	
21	FM3-8694-000		1	CONTROL PANEL ASS'Y	MF4330d EUR	
21	FM4-2001-000		1	CONTROL PANEL ASS'Y	MF4330d KR	
21	FM3-8698-000		1	CONTROL PANEL ASS'Y	MF4330d CN	
21	FM3-9520-000		1	CONTROL PANEL ASS'Y	MF4330d JP	
21	FM3-5339-000		1	CONTROL PANEL ASS'Y	MF4330dG CN	
21	FM3-9503-000		1	CONTROL PANEL ASS'Y	D440 US	
22	FM2-8908-000		1	FRONT COVER ASS'Y	MF4300 Series	
22	FM3-9498-000		1	FRONT COVER ASS'Y	D400 Series	
23	FC7-3596-000		1	TRAY, PAPER DELIVERY	MF4300 Series	
23	FC9-1289-000		1	TRAY, PAPER DELIVERY	D400 Series	

FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
24	FC7-3597-000		1	TRAY, PAPER DELIVERY EXTENSION	MF4300 Series	
24	FC9-1290-000		1	TRAY, PAPER DELIVERY EXTENSION	D400 Series	
25	FC7-3598-000		1	STOPPER, PAPER DELIVERY	MF4300 Series	
25	FC9-1291-000		1	STOPPER, PAPER DELIVERY	D400 Series	
26	FC7-3726-000		1	COVER, PAPER DELIVERY TRAY	MF4300 Series	
26	FC9-1297-000		1	COVER, PAPER DELIVERY TRAY	D400 Series	
27	FL2-5630-000		1	DUST COVER ASSEMBLY		
28	FC7-3764-010		1	LABEL, JAM CLEARING	MF4300 Series EXCEPT JP	
28	FC9-1278-000		1	LABEL, JAM CLEARING	D400 Series EXCEPT JP	
28	FC9-5075-000		1	LABEL, JAM CLEARING	JP	
29	FC7-3766-000		1	LABEL, JAM CLEARING, ADF2		
30	FC7-3817-000		2	CAP, COVER, REAR	EXCEPT MF4350dG,4330dG	
30	FC8-1403-000		2	CAP, COVER, REAR	MF4350dG,4330dG	
31	FC7-3816-000		1	LABEL, SIZE INSTRUCTION		
32	XA9-0476-000		4	SCREW,TP M3X8		

FIGURE 100A EXTERNAL COVERS, PANELS, ETC.(ADF model MF4370dn,4370dnG)

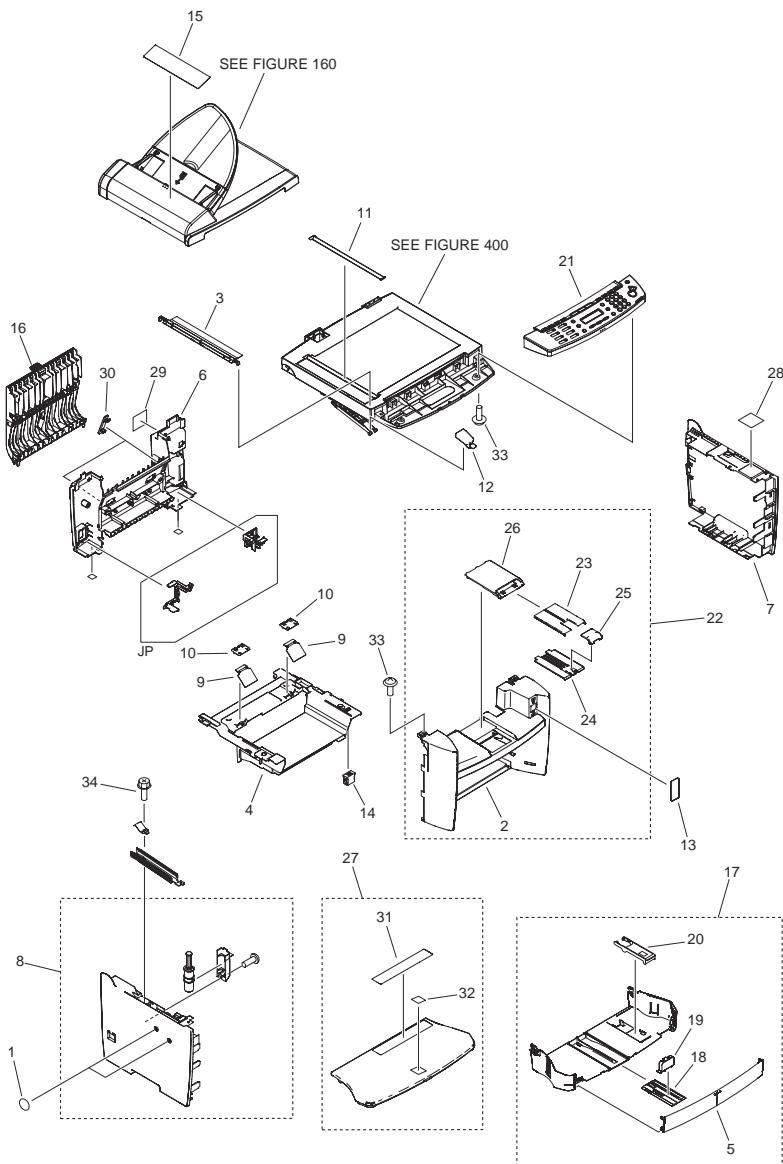


FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
Fig.100A	NPN		RF	EXTERNAL COVERS, PANELS, ETC.	ADF model MF4370dn,4370dnG	
1	FC8-0690-000		2	SHEET, HANDSET		
2	FL2-7040-000		1	COVER UNIT, FRONT		
3	FL2-8495-000		1	HOLDER, DOCUMENT RELEASE SHEET		
4	FC7-3554-010		1	COVER, CRG		
5	FC7-7296-000		1	COVER,FRONT,PAPER SUPPLY TRAY		
6	FC8-1389-000		1	COVER, REAR		
7	FC8-0651-000		1	COVER, RIGHT	EXCEPT JP	
7	FC8-1425-000		1	COVER, RIGHT	JP	
8	FM3-4103-000		1	LEFT COVER ASS'Y	EXCEPT JP	
8	FM3-4496-000		1	LEFT COVER ASS'Y	JP	
9	FC7-3648-000		2	SHEET, PAPER FEED		
10	FC7-3649-000		2	CAP, SHEET		
11	FC8-0659-000		1	PLATE, PAPER SIZE	A SIZE	
11	FC8-1392-000		1	PLATE, PAPER SIZE	A/INCH SIZE	
11	FC8-1393-000		1	PLATE, PAPER SIZE	AB/INCH SIZE	
11	FC8-1394-000		1	PLATE, PAPER SIZE	AB SIZE	
12	FC7-3714-000		1	RETAINER, STAY		
13	FC7-9572-000		1	COVER, USB	EXCEPT JP	
13	FC9-1319-000		1	COVER, USB	JP	
14	FC7-3821-000		1	MAGNET		
15	FC8-1541-000		1	SHEET, GLASS CLEANING	ASIA,AU,CN,JP,KR,TW	
15	FC8-1542-000		1	SHEET, GLASS CLEANING	US	
15	FC8-1543-000		1	SHEET, GLASS CLEANING	EUR	
16	FM3-4488-000		1	DUPLEXING COVER UNIT		
17	FM3-1930-000		1	PAPER PICK-UP TRAY ASS'Y		
18	FC7-3639-000		1	PLATE, EXTENSION		
19	FC7-7301-000		1	STOPER, PAPER		
20	FC7-3657-000		1	STOPER, CARD		
21	FM3-5337-000		1	CONTROL PANEL ASS'Y	MF4370dnG CN	
21	FM3-9509-000		1	CONTROL PANEL ASS'Y	TW	

FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
21	FM3-9510-000		1	CONTROL PANEL ASS'Y	US	
21	FM3-9511-000		1	CONTROL PANEL ASS'Y	ASIA,AU	
21	FM3-9512-000		1	CONTROL PANEL ASS'Y	MF4370dn CN	
21	FM3-9513-000		1	CONTROL PANEL ASS'Y	KR	
21	FM3-9514-000		1	CONTROL PANEL ASS'Y	JP	
21	FM3-9515-000		1	CONTROL PANEL ASS'Y	EUR	
22	FM3-1931-000		1	FRONT COVER ASS'Y		
23	FC7-3596-000		1	TRAY, PAPER DELIVERY		
24	FC7-3597-000		1	TRAY, PAPER DELIVERY EXTENSION		
25	FC7-3598-000		1	STOPPER, PAPER DELIVERY		
26	FC7-7300-000		1	COVER, PAPER DELIVERY TRAY		
27	FL2-7043-000		1	DUST COVER ASSEMBLY	EXCEPT JP	
27	FL2-7044-000		1	DUST COVER ASSEMBLY	JP	
28	FC8-1544-000		1	LABEL, JAM CLEARING	EXCEPT JP	
28	FC9-5075-000		1	LABEL, JAM CLEARING	JP	
29	FC8-1546-000		1	LABEL, JAM CLEARING, ADF2		
30	FC8-1403-000		2	CAP, COVER, REAR		
31	FC7-7334-000		1	LABEL, SIZE INSTRUCTION		
32	FC7-3728-000		1	EMBLEM, LASER SHOT	EXCEPT JP	
32	FC5-4820-000		1	EMBLEM, SATERA	JP	
33	XA9-0476-000		4	SCREW,TP M3X8		
34	XA9-1495-000		1	SCREW, RS, M3X6		

FIGURE 100B
**EXTERNAL COVERS, PANELS, ETC.(COPYBOARD
model)**

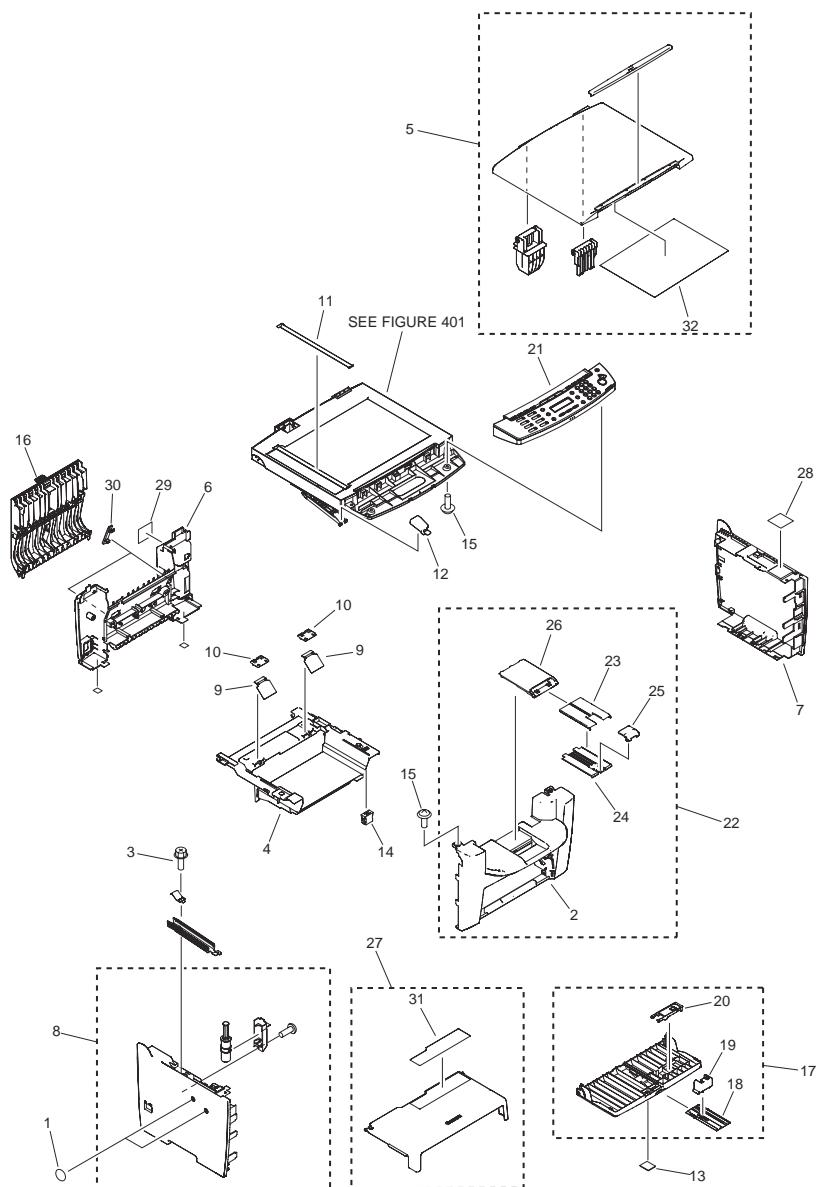


FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
Fig.100B	NPN		RF	EXTERNAL COVERS, PANELS, ETC.	COPYBOARD model	
1	FC6-5204-000		2	SHEET, HANDSET		
2	FC7-3565-000		1	COVER UNIT, FRONT	MF4300 Series	
2	FC9-1296-000		1	COVER UNIT, FRONT	D400 Series	
3	XA9-1495-000		1	SCREW, RS, M3X6		
4	FC7-3554-010		1	COVER, CRG	MF4300 Series	
4	FC9-1281-000		1	COVER, CRG	D400 Series	
5	FM2-8933-000		1	COPYBOARD COVER ASS'Y	EXCEPT MF4322d,4322dG	
5	FM3-4107-000		1	COPYBOARD COVER ASS'Y	MF4322d	
5	FM4-4104-000		1	COPYBOARD COVER ASS'Y	MF4322dG	
6	FC7-3561-010		1	COVER, REAR	MF4340d	
6	FC7-3743-000		1	COVER, REAR	MF4322d,4320d,D420	
6	FC8-1389-000		1	COVER, REAR	MF4322dG	
7	FC7-3566-010		1	COVER, RIGHT	EXCEPT MF4322dG	
7	FC8-0651-000		1	COVER, RIGHT	MF4322dG	
8	FM2-8923-000		1	LEFT COVER ASS'Y	EXCEPT MF4322dG	
8	FM3-4103-000		1	LEFT COVER ASS'Y	MF4322dG	
9	FC7-3648-000		2	SHEET, PAPER FEED		
10	FC7-3649-000		2	CAP, SHEET	MF4300 Series	
10	FC9-1288-000		2	CAP, SHEET	D400 Series	
11	FC7-3710-000		1	PLATE, PAPER SIZE	MF4340d,4320d A SIZE	
11	FC7-3711-000		1	PLATE, PAPER SIZE	D420 A/INCH SIZE	
11	FC7-3712-000		1	PLATE, PAPER SIZE	MF4340d,4322d,MF4322d G,4320d AB/INCH SIZE	
12	FC7-3714-000		1	RETAINER, STAY		
13	FC7-3728-000		1	EMBLEM, LASER SHOT		
14	FC7-3821-000		1	MAGNET		
15	XA9-0476-000		4	SCREW,TP M3X8		
16	FM2-8870-000		1	DUPLEXING COVER UNIT	EXCEPT MF4322dG	
16	FM3-4488-000		1	DUPLEXING COVER UNIT	MF4322dG	
17	FM2-8883-000		1	PAPER PICK-UP TRAY ASS'Y	MF4300 Series	
17	FM3-9507-000		1	PAPER PICK-UP TRAY ASS'Y	D400 Series	

FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
18	FC7-3639-000		1	PLATE, EXTENSION	MF4300 Series	
18	FC9-1299-000		1	PLATE, EXTENSION	D400 Series	
19	FC7-3656-000		1	STOPER, PAPER		
20	FC7-3657-000		1	STOPER, CARD		
21	FM3-8663-000		1	CONTROL PANEL ASS'Y	MF4340d EUR	
21	FM3-8664-000		1	CONTROL PANEL ASS'Y	MF4340d AU	
21	FM3-8665-000		1	CONTROL PANEL ASS'Y	MF4340d KR	
21	FM3-8697-000		1	CONTROL PANEL ASS'Y	MF4322d CN	
21	FM3-5340-000		1	CONTROL PANEL ASS'Y	MF4322dG CN	
21	FM3-8695-000		1	CONTROL PANEL ASS'Y	MF4320d EUR	
21	FM3-8696-000		1	CONTROL PANEL ASS'Y	MF4320d ASIA	
21	FM3-9505-000		1	CONTROL PANEL ASS'Y	MF4320d CN	
21	FM4-2002-000		1	CONTROL PANEL ASS'Y	MF4320d KR	
21	FM3-9504-000		1	CONTROL PANEL ASS'Y	D420 US	
22	FM2-8908-000		1	FRONT COVER ASS'Y	MF4300 Series	
22	FM3-9498-000		1	FRONT COVER ASS'Y	D400 Series	
23	FC7-3596-000		1	TRAY, PAPER DELIVERY	MF4300 Series	
23	FC9-1289-000		1	TRAY, PAPER DELIVERY	D400 Series	
24	FC7-3597-000		1	TRAY, PAPER DELIVERY EXTENSION	MF4300 Series	
24	FC9-1290-000		1	TRAY, PAPER DELIVERY EXTENSION	D400 Series	
25	FC7-3598-000		1	STOPPER, PAPER DELIVERY	MF4300 Series	
25	FC9-1291-000		1	STOPPER, PAPER DELIVERY	D400 Series	
26	FC7-3726-000		1	COVER, PAPER DELIVERY TRAY	MF4300 Series	
26	FC9-1297-000		1	COVER, PAPER DELIVERY TRAY	D400 Series	
27	FL2-5630-000		1	DUST COVER ASSEMBLY		
28	FC7-3764-010		1	LABEL, JAM CLEARING	MF4300 Series	
28	FC9-1278-000		1	LABEL, JAM CLEARING	D400 Series	
29	FC7-3827-000		1	LABEL, JAM CLEARING, P2		
30	FC7-3817-000		2	CAP, COVER, REAR	EXCEPT MF4322dG	
30	FC8-1403-000		2	CAP, COVER, REAR	MF4322dG	
31	FC7-3816-000		1	LABEL, SIZE INSTRUCTION		
32	FC8-0654-000		1	PANEL, COPYBOARD		

FIGURE 100C
EXTERNAL COVERS, PANELS, ETC.(DADF model)

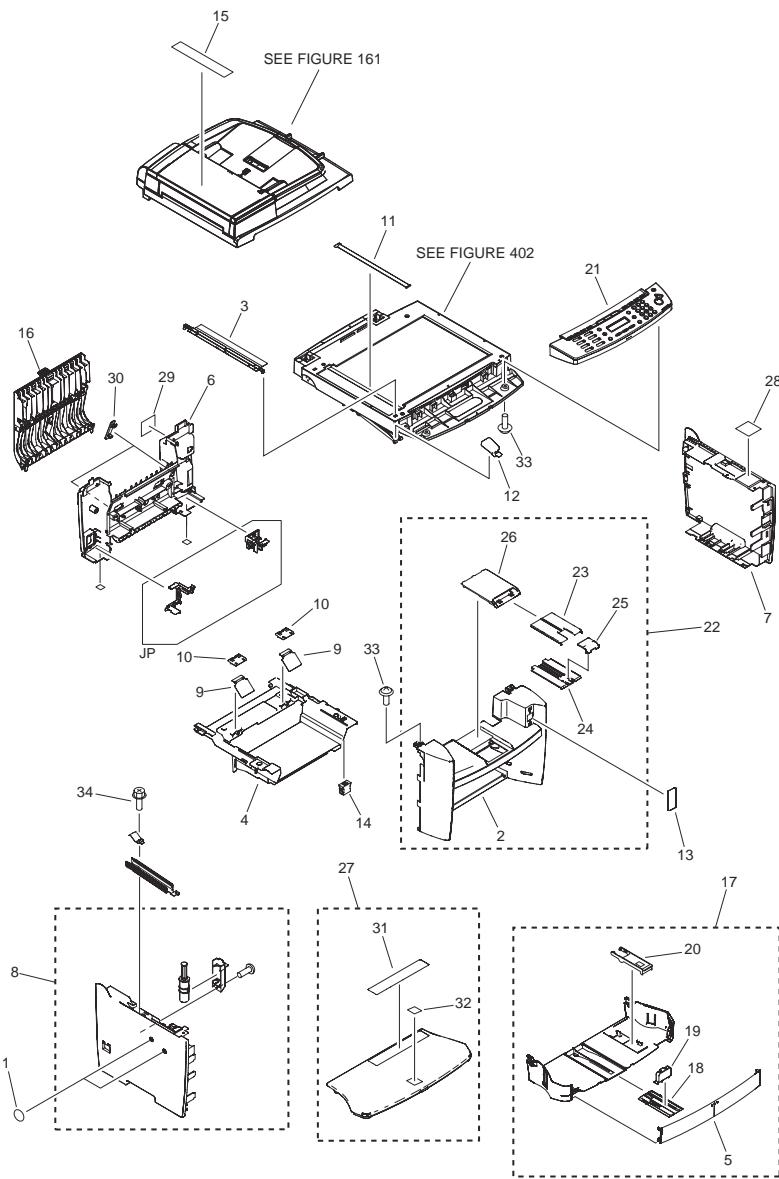


FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
Fig.100C	NPN		RF	EXTERNAL COVERS, PANELS, ETC.	DADF model	
1	FC8-0690-000		2	SHEET, HANDSET	MF4300 Series	
1	FC6-5204-000		2	SHEET, HANDSET	D400 Series	
2	FL2-7040-000		1	COVER UNIT, FRONT	MF4300 Series	
2	FL3-1394-000		1	COVER UNIT, FRONT	D400 Series	
3	FL2-8495-000		1	HOLDER, DOCUMENT RELEASE SHEET	MF4300 Series	
3	FL2-5620-000		1	HOLDER, DOCUMENT RELEASE SHEET	D400 Series	
4	FC7-3554-010		1	COVER, CRG	MF4300 Series	
4	FC9-1281-000		1	COVER, CRG	D400 Series	
5	FC7-7296-000		1	COVER,FRONT,PAPER SUPPLY TRAY	MF4300 Series	
5	FC9-1283-000		1	COVER,FRONT,PAPER SUPPLY TRAY	D400 Series	
6	FC8-9231-000		1	COVER, REAR	MF4300 Series	
6	FC9-1274-000		1	COVER, REAR	D480	
6	FC9-1275-000		1	COVER, REAR	D460	
6	FC9-1276-000		1	COVER, REAR	D450d	
7	FC8-0651-000		1	COVER, RIGHT	MF4300 Series EXCEPT JP	
7	FC8-1425-000		1	COVER, RIGHT	MF4380 JP	
7	FC7-3566-010		1	COVER, RIGHT	D400 Series EXCEPT JP	
7	FC7-3744-000		1	COVER, RIGHT	D450d JP	
8	FM4-1995-000		1	LEFT COVER ASS'Y	MF4300 Series EXCEPT JP	
8	FM4-1996-000		1	LEFT COVER ASS'Y	MF4380dn JP	
8	FM2-8923-000		1	LEFT COVER ASS'Y	D460,450d EXCEPT JP	
8	FM4-1993-000		1	LEFT COVER ASS'Y	D480	
8	FM4-1994-000		1	LEFT COVER ASS'Y	D450d JP	
9	FC7-3648-000		2	SHEET, PAPER FEED		
10	FC7-3649-000		2	CAP, SHEET	MF4300 Series	
10	FC9-1288-000		2	CAP, SHEET	D400 Series	
11	FC8-0659-000		1	PLATE, PAPER SIZE	MF4380dn A SIZE	
11	FC8-1392-000		1	PLATE, PAPER SIZE	MF4380dn A/INCH SIZE	
11	FC8-1393-000		1	PLATE, PAPER SIZE	MF4383dn,4380d AB/ INCH SIZE	

FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
11	FC8-1394-000		1	PLATE, PAPER SIZE	MF4380dn AB SIZE	
11	FC7-3711-000		1	PLATE, PAPER SIZE	D480,460 A/INCH SIZE	
11	FC7-3710-000		1	PLATE, PAPER SIZE	D450d A SIZE	
11	FC7-3638-000		1	PLATE, PAPER SIZE	D450d AB SIZE	
12	FC7-3714-000		1	RETAINER, STAY		
13	FC7-9572-000		1	COVER, USB	MF4300 Series EXCEPT JP	
13	FC9-1319-000		1	COVER, USB	MF4380dn JP	
13	FC9-1285-000		1	COVER, USB	D400 Series EXCEPT JP	
13	FC9-5031-000		1	COVER, USB	D450d JP	
14	FC7-3821-000		1	MAGNET		
15	FC8-9299-000		1	SHEET, GLASS CLEANING	MF4380dn EUR	
15	FC8-9300-000		1	SHEET, GLASS CLEANING	MF4380dn US	
15	FC8-9301-000		1	SHEET, GLASS CLEANING	MF4383dn,4380dn ASIA,AU,JP,KR	
15	FC9-1262-000		1	SHEET, GLASS CLEANING	D450d EUR	
15	FC9-1337-000		1	SHEET, GLASS CLEANING	D450d JP	
15	FC9-1263-000		1	SHEET, GLASS CLEANING	D480,460 US	
16	FM3-4488-000		1	DUPLEXING COVER UNIT	MF4300 Series	
16	FM2-8870-000		1	DUPLEXING COVER UNIT	D400 Series	
17	FM3-1930-000		1	PAPER PICK-UP TRAY ASS'Y	MF4300 Series	
17	FM3-9499-000		1	PAPER PICK-UP TRAY ASS'Y	D400 Series	
18	FC7-3639-000		1	PLATE, EXTENSION	MF4300 Series	
18	FC9-1299-000		1	PLATE, EXTENSION	D400 Series	
19	FC7-7301-000		1	STOPER, PAPER		
20	FC7-3657-000		1	STOPER, CARD		
21	FM4-2003-000		1	CONTROL PANEL ASS'Y	MF4383dn KR	
21	FM3-8649-000		1	CONTROL PANEL ASS'Y	MF4380dn US	
21	FM3-8650-000		1	CONTROL PANEL ASS'Y	MF4380dn EUR	
21	FM3-8651-000		1	CONTROL PANEL ASS'Y	MF4380dn ASIA,AU	
21	FM3-8654-000		1	CONTROL PANEL ASS'Y	MF4380dn KR	
21	FM3-9522-000		1	CONTROL PANEL ASS'Y	MF4380dn JP	
21	FM3-9500-000		1	CONTROL PANEL ASS'Y	D460 US	

FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
21	FM3-9501-000		1	CONTROL PANEL ASS'Y	D480 US	
21	FM3-9502-000		1	CONTROL PANEL ASS'Y	D450d EUR	
21	FM4-1997-000		1	CONTROL PANEL ASS'Y	D450d JP	
22	FM3-1931-000		1	FRONT COVER ASS'Y	MF4300 Series	
22	FM3-9487-000		1	FRONT COVER ASS'Y	D400 Series	
23	FC7-3596-000		1	TRAY, PAPER DELIVERY	MF4300 Series	
23	FC9-1289-000		1	TRAY, PAPER DELIVERY	D400 Series	
24	FC7-3597-000		1	TRAY, PAPER DELIVERY EXTENSION	MF4300 Series	
24	FC9-1290-000		1	TRAY, PAPER DELIVERY EXTENSION	D400 Series	
25	FC7-3598-000		1	STOPPER, PAPER DELIVERY	MF4300 Series	
25	FC9-1291-000		1	STOPPER, PAPER DELIVERY	D400 Series	
26	FC7-7300-000		1	COVER, PAPER DELIVERY TRAY	MF4300 Series	
26	FC9-1292-000		1	COVER, PAPER DELIVERY TRAY	D400 Series	
27	FL2-7043-000		1	DUST COVER ASSEMBLY	EXCEPT JP	
27	FL2-7044-000		1	DUST COVER ASSEMBLY	JP	
28	FC8-1544-000		1	LABEL, JAM CLEARING	MF4300 Series EXCEPT JP	
28	FC9-1264-000		1	LABEL, JAM CLEARING	D400 Series EXCEPT JP	
28	FC9-5075-000		1	LABEL, JAM CLEARING	JP	
29	FC8-9304-000		1	LABEL, JAM CLEARING, DADF2	MF4300 Series	
29	FC9-1269-000		1	LABEL, JAM CLEARING, DADF2	D400 Series	
30	FC8-1403-000		2	CAP, COVER, REAR	MF4300 Series	
30	FC7-3817-000		2	CAP, COVER, REAR	D400 Series	
31	FC7-7334-000		1	LABEL, SIZE INSTRUCTION		
32	FC7-3728-000		1	EMBLEM, LASER SHOT	EXCEPT JP	
32	FC5-4820-000		1	EMBLEM, SATERA	JP	
33	XA9-0476-000		4	SCREW,TP M3X8		
34	XA9-1495-000		1	SCREW, RS, M3X6		

FIGURE 101 INTERNAL COMPONENTS 1

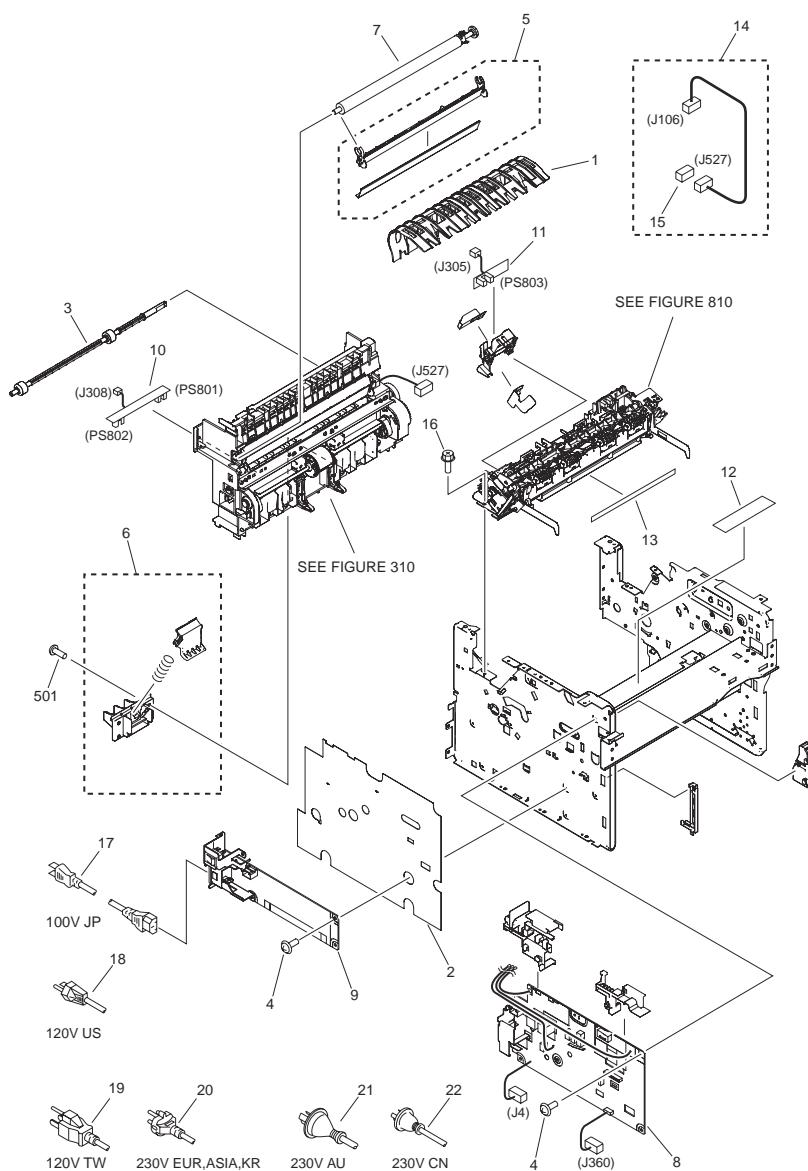


FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
Fig.101	NPN		RF	INTERNAL COMPONENTS 1		
1	FC7-3558-000		1	GUIDE, INNER FEED		
2	FC8-9295-000		1	SHEET, INSULATING		
3	FL2-5629-000		1	DUPLEXING FEED ROLLER ASS'Y		
4	XA9-1420-000		11	SCREW, W/WASHER, M3X8		
5	FM2-8912-000		1	TRANSFER GUIDE ASS'Y		
6	FM2-8874-000		1	SEPARATION PAD ASS'Y		
7	FM2-8914-000		1	TRANSFER ROLLER ASS'Y		
8	FM3-8739-000		1	HVT PCB ASS'Y	100V	
8	FM2-9911-000		1	HVT PCB ASS'Y	120V	
8	FM2-9912-000		1	HVT PCB ASS'Y	230V	
9	FK2-7608-000		1	POWER SUPPLY ASSEMBLY	100V DADF model	
9	FK2-7609-000		1	POWER SUPPLY ASSEMBLY	120V DADF model	
9	FK2-7610-000		1	POWER SUPPLY ASSEMBLY	230V DADF model	
9	FK2-7611-000		1	POWER SUPPLY ASSEMBLY	100V ADF,COPYBOARD model	
9	FK2-7612-000		1	POWER SUPPLY ASSEMBLY	120V ADF,COPYBOARD model	
9	FK2-7613-000		1	POWER SUPPLY ASSEMBLY	230V ADF,COPYBOARD model	
10	FM2-9914-000		1	SENSOR PCB ASS'Y	PS801,PS802	
11	FM2-9916-000		1	SENSOR PCB ASS'Y	PS803	
12	FC8-9303-000		1	LABEL, JAM CLEARING, DADF1	MF4383dn,4380dn EXCEPT JP	
12	FC9-1266-000		1	LABEL, JAM CLEARING, DADF1	D480,460,450d EXCEPT JP	
12	FC7-3765-000		1	LABEL, JAM CLEARING, ADF1	MF4352d,4350d,4350dG, MF4330d,4330dG EXCEPT JP	
12	FC8-9305-000		1	LABEL, JAM CLEARING, ADF1	MF4370dn,4370dnG EXCEPT JP	
12	FC9-1267-000		1	LABEL, JAM CLEARING, ADF1	D440	
12	FC7-3767-000		1	LABEL, JAM CLEARING, P1	MF4340d,4322d,MF4322d G,4320d	
12	FC9-1268-000		1	LABEL, JAM CLEARING, P1	D420	
12	FC9-5077-000		1	LABEL, JAM CLEARING, P1	JP	

FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
13	FC7-3727-000		1	LABEL, HIGH TMP. CAUTION		
14	FM3-1494-000		1	CABLE, SOLENOID		
15	VS1-7177-002		1	CONNECTOR, SNAP TIGHT, BK		
16	XA9-1495-000		3	SCREW, RS, M3X10		
17	FK2-4390-000		1	CORD, POWER	100V JP	
18	FK2-4393-000		1	CORD, POWER	120V US	
19	FK2-1311-000		1	CORD, POWER	120V TW	
20	FK2-6890-000		1	CORD, POWER	230V EUR,ASIA,KR	
21	FK2-1317-000		1	CORD, POWER	230V AU	
22	FK2-1316-000		1	CORD, POWER	230V CN	
501	XB4-5401-009		4	SCREW, TAP, M4X10		

FIGURE 102 INTERNAL COMPONENTS 2

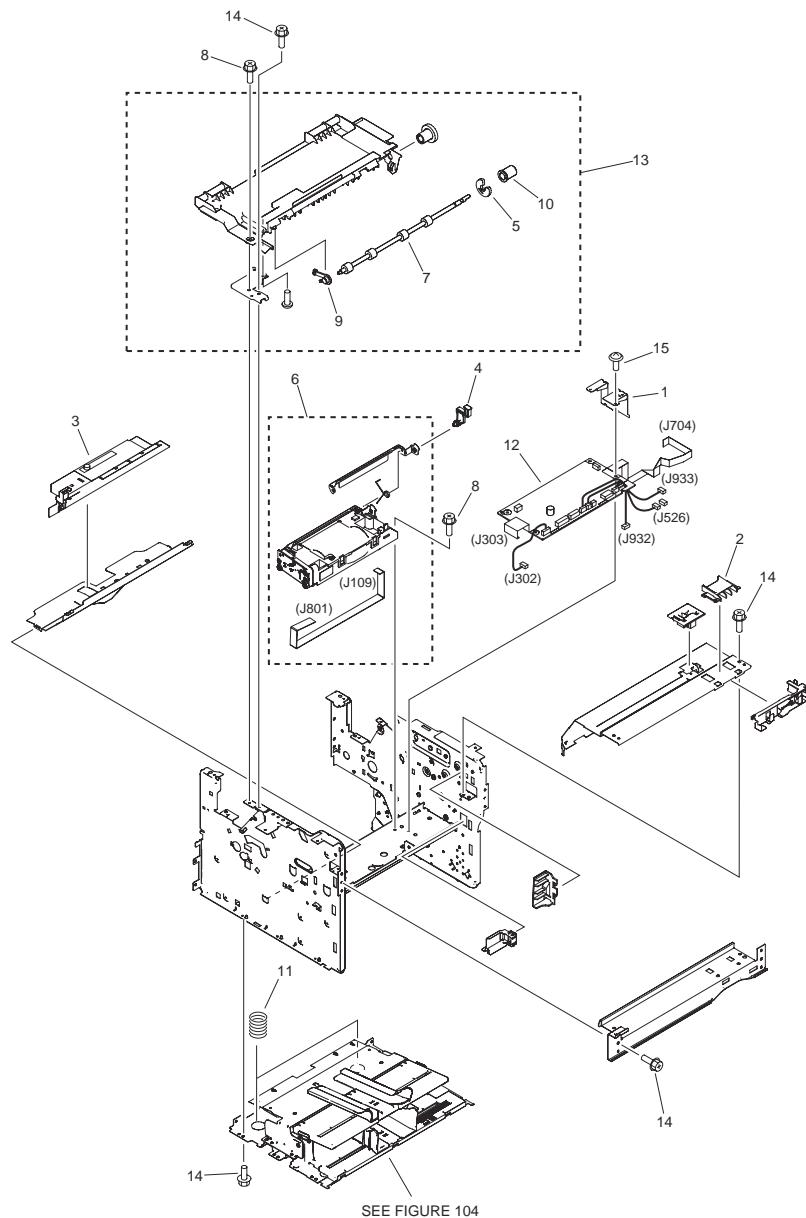


FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
Fig.102	NPN		RF	INTERNAL COMPONENTS 2		
1	FC8-1321-000		1	CROSSMEMBER, ENGINE CONTROLLER		
2	FC7-3700-000		1	COVER, FRONT LOWER	MF4300 Series	
2	FC9-1287-000		1	COVER, FRONT LOWER	D400 Series	
3	FM2-8882-000		1	TONER SENSOR ASS'Y		
4	FC7-3666-000		1	ARM, SHUTTER		
5	FC6-5210-000		1	RETAINING RING (E-TYPE)		
6	FM3-9066-000		1	LASER SCANNER ASS'Y		
7	FC7-3646-000		1	ROLLER, PAPER FEED		
8	XA9-1501-000		12	SCREW, RS, M3X10		
9	FU5-1804-000		1	BUSHING, ROLLER, LEFT		
10	FU5-1805-000		1	BUSHING, ROLLER, RIGHT		
11	RU5-2492-000		2	SPRING, COMPRESSION		
12	FM3-8729-000		1	DCNT PCB ASS'Y		
13	FM3-4099-000		1	PAPER FEED COVER ASS'Y	MF4383dn,4380dn,4370dn,4370dnG	
13	FM2-8884-010		1	PAPER FEED COVER ASS'Y	EXCEPT MF4383dn,4380dn,4370dn,4370dnG	
14	XA9-1495-000		AR	SCREW, RS, M3X6		
15	XA9-1420-000		2	SCREW, W/WASHER, M3X8		

FIGURE 103 INTERNAL COMPONENTS 3

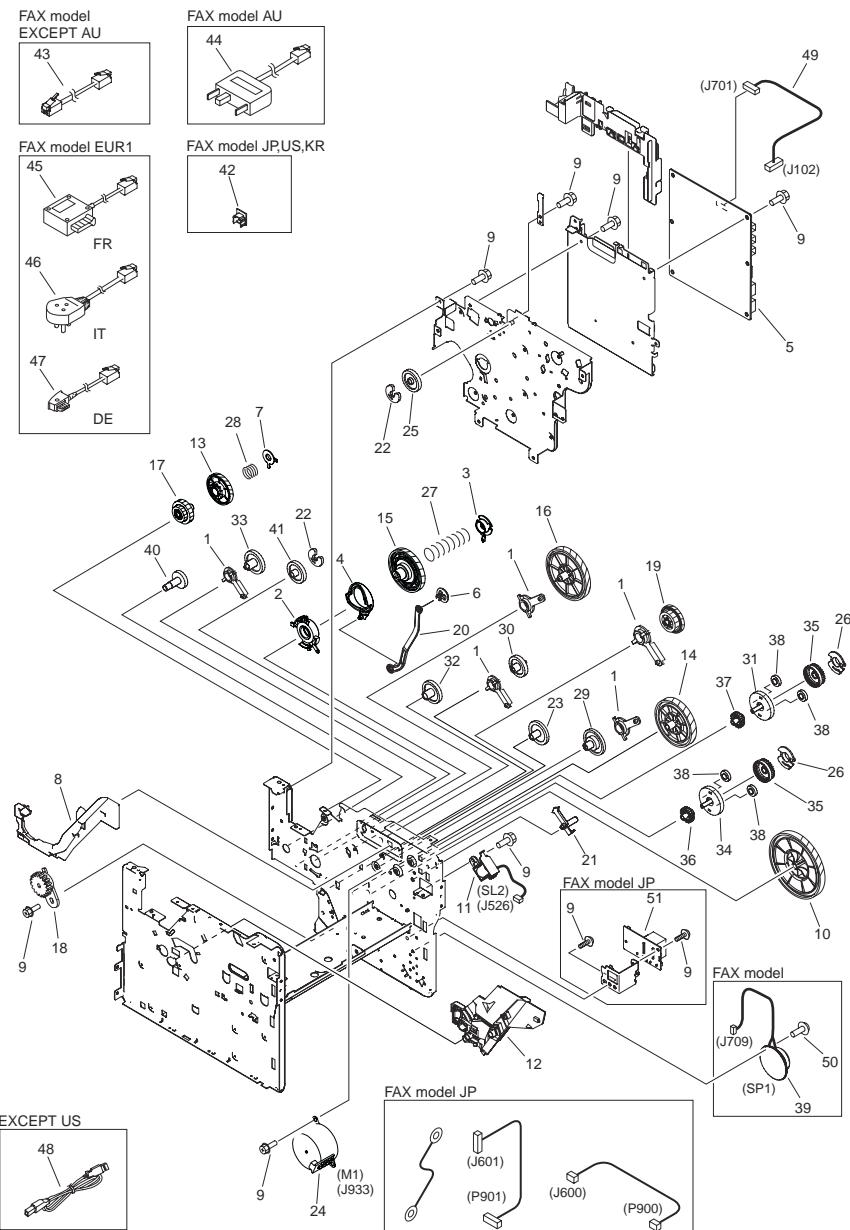


FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
Fig.103	NPN		RF	INTERNAL COMPONENTS 3		
1	RA0-1019-000		5	BUSHING		
2	RC1-1953-000		1	BUSHING		
3	RC1-1954-000		1	BUSHING		
4	RC1-1955-000		1	CAM, COUPLING		
5	FM4-1265-000		1	SCNT PCB ASS'Y	MF4383dn, MF4380dn EXCEPT AU,JP	
5	FM4-1267-000		1	SCNT PCB ASS'Y	MF4380dn AU	
5	FM4-1268-000		1	SCNT PCB ASS'Y	MF4380dn JP	
5	FM4-1269-000		1	SCNT PCB ASS'Y	MF4370dn EXCEPT AU,CN,JP	
5	FM4-1270-000		1	SCNT PCB ASS'Y	MF4370dn, 4370dnG CN	
5	FM4-1271-000		1	SCNT PCB ASS'Y	MF4370dn AU	
5	FM4-1272-000		1	SCNT PCB ASS'Y	MF4370dn JP	
5	FM4-1273-000		1	SCNT PCB ASS'Y	MF4352d, MF4350d EXCEPT AU,CN,JP	
5	FM4-1274-000		1	SCNT PCB ASS'Y	MF4350d, 4350dG CN	
5	FM4-1275-000		1	SCNT PCB ASS'Y	MF4350d AU	
5	FM4-1276-000		1	SCNT PCB ASS'Y	MF4350d JP	
5	FM4-1277-000		1	SCNT PCB ASS'Y	MF4340d EUR,KR	
5	FM4-1278-000		1	SCNT PCB ASS'Y	MF4340d AU	
5	FK2-7660-000		1	SCNT PCB ASS'Y	MF4330d EXCEPT CN	
5	FM4-0140-000		1	SCNT PCB ASS'Y	MF4330d, 4330dG CN	
5	FM3-9243-000		1	SCNT PCB ASS'Y	MF4322d, 4322dG CN	
5	FK2-7661-000		1	SCNT PCB ASS'Y	MF4320d EXCEPT CN	
5	FM4-1643-000		1	SCNT PCB ASS'Y	MF4320d CN	
5	FM4-2091-000		1	SCNT PCB ASS'Y	D480	
5	FK2-7664-000		1	SCNT PCB ASS'Y	D460	
5	FK2-7663-000		1	SCNT PCB ASS'Y	D450d	
5	FK2-8618-000		1	SCNT PCB ASS'Y	D440	
5	FK2-8619-000		1	SCNT PCB ASS'Y	D420	
6	FC7-3621-000		1	STOPPER		
7	RC1-1959-000		1	BUSHING		

FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
8	FC7-3690-000		1	GUIDE, CARTRIDGE, RIGHT		
9	XA9-1495-000		AR	SCREW, RS, M3X6		
10	RU5-0503-000		1	GEAR, 166T/87T		
11	FK2-3510-000		1	SOLENOID	SL2	
12	FM2-8879-000		1	CARTRIDGE GUIDE LEFT ASS'Y		
13	RU5-0505-000		1	GEAR, 74T		
14	RU5-0174-000		1	GEAR, 117T		
15	RU5-0175-000		1	GEAR, 108T		
16	RU5-0176-000		1	GEAR, 129T		
17	RU5-0506-000		1	GEAR, 35T/18T		
18	RA0-1172-000		1	GEAR, 17T		
19	RU5-0179-000		1	GEAR, 66T/25T		
20	FC7-3647-000		1	ARM, CARTRIDGE		
21	FC7-3653-000		1	ARM, SOLENOID		
22	FC6-5210-000		2	RETAINING RING (E-TYPE)		
23	FU7-0541-000		1	GEAR, 32T		
24	FK2-7617-000		1	MOTOR, STEPPING, DC	M1	
25	FU7-0544-000		1	GEAR, 29T		
26	RC1-3579-000		2	BUSHING		
27	FU6-2254-000		1	SPRING, COMPRESSION		
28	FU6-2255-000		1	SPRING, COMPRESSION		
29	FU7-0538-000		1	GEAR, 68/17T		
30	FU7-0539-000		1	GEAR, 28T		
31	FU7-0540-000		1	GEAR, 37T		
32	FU7-0542-000		1	GEAR, 30T		
33	FU7-0543-000		1	GEAR, 31T		
34	FU7-0545-000		1	GEAR, 38T		
35	RU5-0312-000		2	GEAR		
36	RU5-0313-000		1	GEAR		
37	RU5-0314-000		1	GEAR		
38	FU8-0470-000		4	GEAR		
39	FK2-6287-000		1	SPEAKER	FAX model SP1	

FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
40	FU7-0546-000		1	GEAR, 23T		
41	FU7-0547-000		1	GEAR, 29T		
42	FK2-4392-000		1	SPACER,MODULAR	FAX model JP,KR,US	
43	HH2-2824-000		1	MODULAR CORD	FAX model EXCEPT AU	
44	HK1-0559-000		1	MODULAR CORD	FAX model AU	
45	QK1-6441-000		1	CORD	FAX model EUR1 FR	
46	HK1-0550-000		1	MODULAR CORD	FAX model EUR1 IT	
47	QK1-6441-000		1	CORD	FAX model EUR1 DE	
48	FK2-7595-000		1	CABLE, USB	EXCEPT US	
49	FM3-8736-000		1	CABLE, DCNT-SCNT		
50	XA9-1503-000		1	SCREW, TP, M3X6	FAX model	
51	FM3-5378-000		1	PSEUDO CI PCB ASSEMBLY	FAX model JP	

FIGURE 104
BASE PLATE ASS'Y

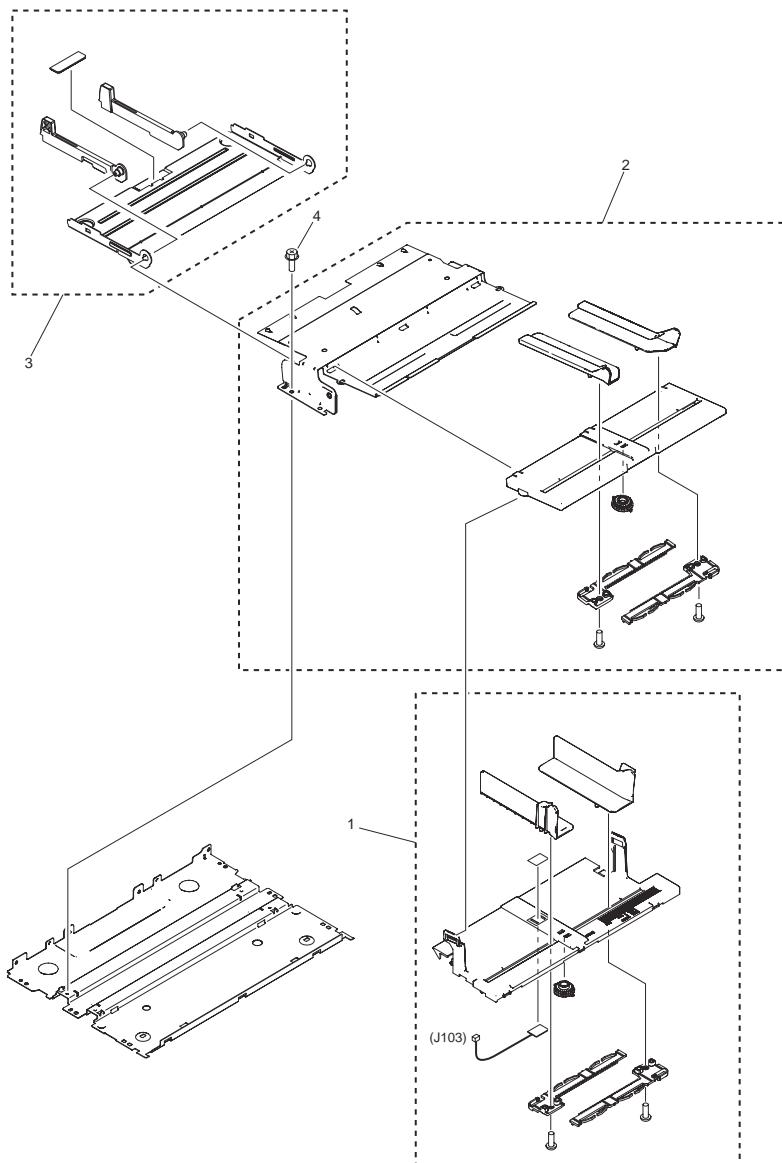


FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
Fig.104	NPN		RF	BASE PLATE ASS'Y		
1	FM3-8670-000		1	CENTER PLATE GUIDE RAIL ASS'Y	MF4300 Series	
1	FM3-9495-000		1	CENTER PLATE GUIDE RAIL ASS'Y	D400 Series	
2	FM2-8877-000		1	FEED GUIDE RAIL ASS'Y	MF4300 Series	
2	FM3-9494-000		1	FEED GUIDE RAIL ASS'Y	D400 Series	
3	FM2-8910-000		1	LIFTING PLATE ASS'Y		
4	XA9-1495-000		4	SCREW, RS, M3X6		

FIGURE 160
ADF ASS'Y (ADF model)

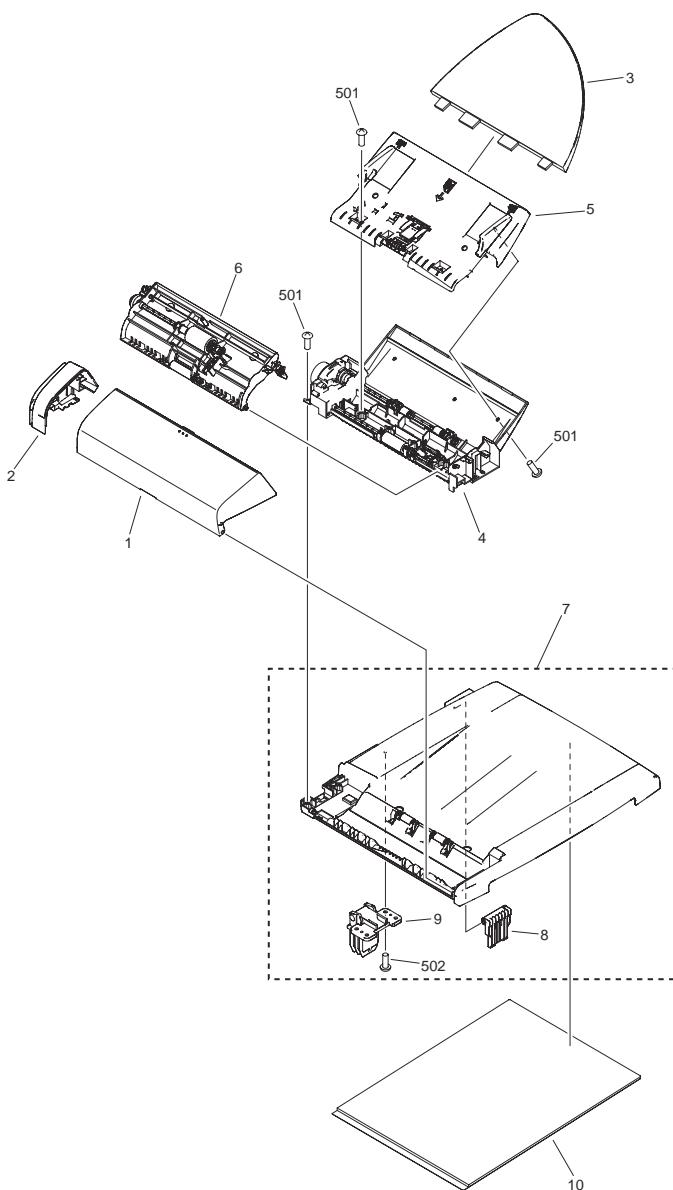


FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
Fig.160	NPN		RF	ADF ASS'Y	ADF model	
1	FC8-1407-000		1	COVER, ADF, UPPER	MF4370dnG,4350dG,4330dG,MF4370dn EXCEPT JP	
1	FC8-1426-000		1	COVER, ADF, UPPER	MF4370dn JP	
1	FC7-3544-000		1	COVER, ADF, UPPER	MF4352d,D440,MF4350d,4330d EXCEPT JP	
1	FC7-3741-000		1	COVER, ADF, UPPER	MF4350d,4330d JP	
2	FC8-1408-000		1	COVER, ADF, REAR	MF4370dnG,4350dG,4330dG,MF4370dn EXCEPT JP	
2	FC8-1427-000		1	COVER, ADF, REAR	MF4370dn JP	
2	FC7-3549-000		1	COVER, ADF, REAR	MF4352d,D440,MF4350d,4330d EXCEPT JP	
2	FC7-3742-000		1	COVER, ADF, REAR	MF4350d,4330d JP	
3	FC8-1390-000		1	TRAY, DOCUMENT	MF4370dn,4370dnG	
3	FC7-3548-000		1	TRAY, DOCUMENT	EXCEPT MF4370dn,4370dnG	
4	FM3-4491-000		1	DOCUMENT FEED UNDER ASS'Y	MF4370dn,4370dnG	
4	FM2-8861-000		1	DOCUMENT FEED UNDER ASS'Y	EXCEPT MF4370dn,4370dnG	
5	FM3-4492-000		1	DOCUMENT GUIDE ASS'Y	MF4370dn,4370dnG,MF4350dG,4330dG	
5	FM2-8862-000		1	DOCUMENT GUIDE ASS'Y	MF4352d,4350d,4330d,D440	
6	FM3-4493-000		1	DOCUMENT FEED UPPER ASS'Y	MF4370dn,4370dnG	
6	FM2-8864-000		1	DOCUMENT FEED UPPER ASS'Y	EXCEPT MF4370dn,4370dnG	
7	FM3-4494-000		1	ADF BASE ASS'Y	MF4370dn,4370dnG,MF4350dG,4330dG	
7	FM2-8926-000		1	ADF BASE ASS'Y	MF4352d,4350d,4330d,D440	
8	FC8-0697-000		1	HINGE, ADF	MF4370dn,4370dnG	
8	FC7-3637-000		1	HINGE, ADF	EXCEPT MF4370dn,4370dnG	
9	FC7-3702-000		1	HINGE, ADF		
10	FC7-3607-000		1	PANEL, COPYBOARD		
501	XB4-7300-807	AR		SCREW, TAPPING, BINDING HEAD		
502	XB4-5401-009		4	SCREW, P, M4X10		

FIGURE 161
ADF ASS'Y (DADF model)

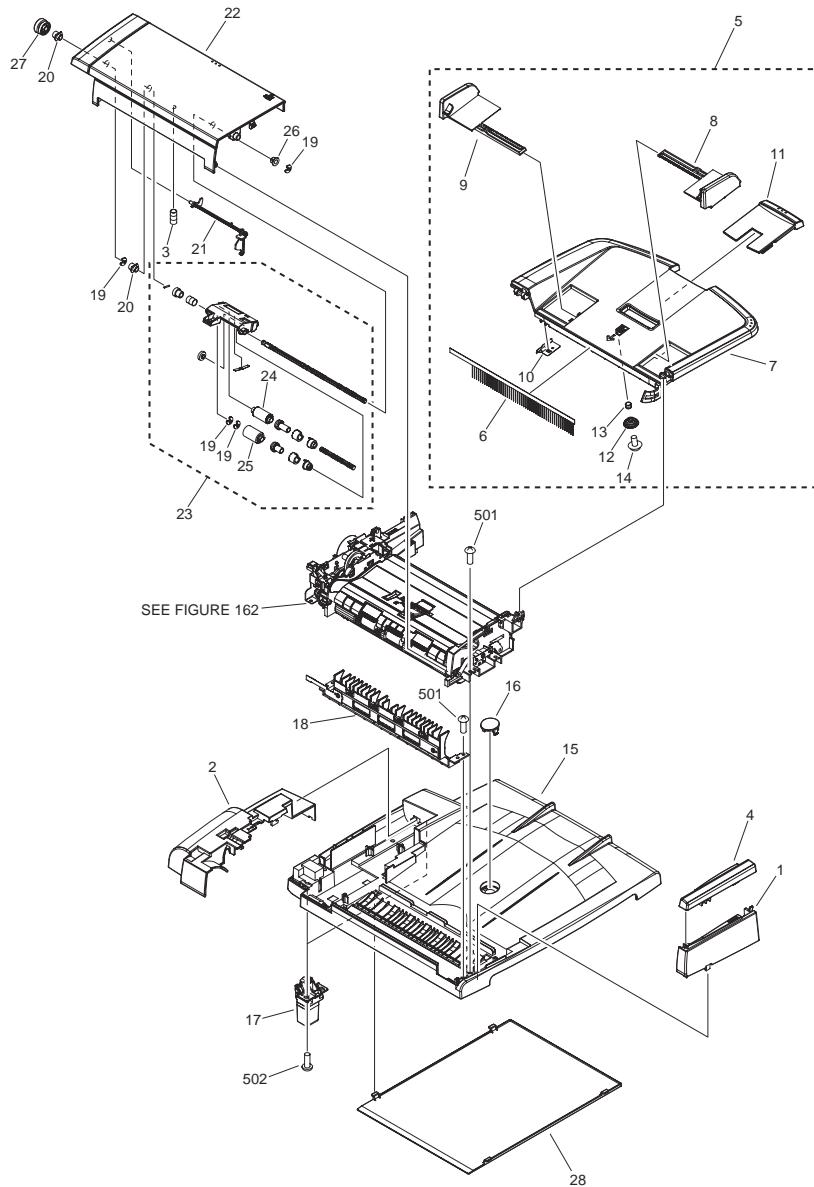


FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
Fig.161	NPN		RF	ADF ASS'Y	DADF model	
1	FC8-9207-000		1	COVER, DF, FRONT	MF4300 Series EXCEPT JP	
1	FC8-9234-000		1	COVER, DF, FRONT	MF4380dn JP	
1	FC9-1258-000		1	COVER, DF, FRONT	D400 Series EXCEPT JP	
1	FC9-5032-000		1	COVER, DF, FRONT	D450d JP	
2	FC8-9208-000		1	COVER, REAR	MF4300 Series EXCEPT JP	
2	FC8-9237-000		1	COVER, REAR	MF4380dn JP	
2	FC9-1261-000		1	COVER, REAR	D400 Series EXCEPT JP	
2	FC9-5034-000		1	COVER, REAR	D450d JP	
3	FU7-2018-000		1	SPRING, COMPRESSION		
4	FC8-9259-000		1	COVER, FRONT UPPER	MF4300 Series EXCEPT JP	
4	FC8-9235-000		1	COVER, FRONT UPPER	MF4380dn JP	
4	FC9-1259-000		1	COVER, FRONT UPPER	D400 Series EXCEPT JP	
4	FC9-5033-000		1	COVER, FRONT UPPER	D450d JP	
5	FM3-8672-000		1	DOCUMENT TRAY ASSEMBLY	MF4300 Series	
5	FM3-9486-000		1	DOCUMENT TRAY ASSEMBLY	D400 Series	
6	FC7-6322-000		1	ELIMINATOR, STATIC CHARGE		
7	FC8-9211-000		1	TRAY, DOCUMENT	MF4300 Series	
7	FC9-1254-000		1	TRAY, DOCUMENT	D400 Series	
8	FC8-9212-000		1	GUIDE, DOCUMENT, FRONT	MF4300 Series	
8	FC9-1255-000		1	GUIDE, DOCUMENT, FRONT	D400 Series	
9	FC8-9213-000		1	GUIDE, DOCUMENT, REAR	MF4300 Series	
9	FC9-1256-000		1	GUIDE, DOCUMENT, REAR	D400 Series	
10	FC8-9242-000		1	PLATE, STATIC CHARGE GROUNDING		
11	FC8-9243-000		1	TRAY, DOCUMENT SUB	MF4300 Series	
11	FC9-1257-000		1	TRAY, DOCUMENT SUB	D400 Series	
12	FU6-0831-000		1	GEAR, 18T		
13	FU6-2248-000		1	SPRING, SLIDER		
14	XA9-0476-000		1	SCREW, TP M3X8		
15	FC8-9209-000		1	COVER, UPPER	MF4300 Series	

FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
15	FC9-1253-000		1	COVER, UPPER	D400 Series	
16	FC8-9241-000		1	CAP	MF4300 Series	
16	FC9-1271-000		1	CAP	D400 Series	
17	FL3-1021-000		2	HINGE, ADF		
18	FM3-8677-000		1	OPEN/CLOSE PANEL ASSEMBLY		
19	FC6-5210-000		4	RETAINING RING (E-TYPE)		
20	FC7-6320-000		2	BUSHING		
21	FC7-6321-000		1	FLAG, DOCUMENT SCANNER		
22	FC8-9233-000		1	COVER, ADF	MF4300 Series	
22	FC9-1260-000		1	COVER, ADF	D400 Series	
23	FM3-8679-000		1	SEPARATION ROLLER ASS'Y		
24	FC8-9251-000		1	ROLLER, PICK-UP		
25	FL3-1023-000		1	ROLLER, SEPARATION		
26	FU5-1552-000		1	BUSHING		
27	FU7-0672-000		1	GEAR, 24T		
28	FC8-9210-000		1	PANEL, COPYBOARD		
501	XB4-7300-807	AR		SCREW, TAPPING, BINDING HEAD		
502	XB4-5401-009		4	SCREW, P, M4X10		

FIGURE 162
ADF PAPER FEED ASS'Y (DADF model)

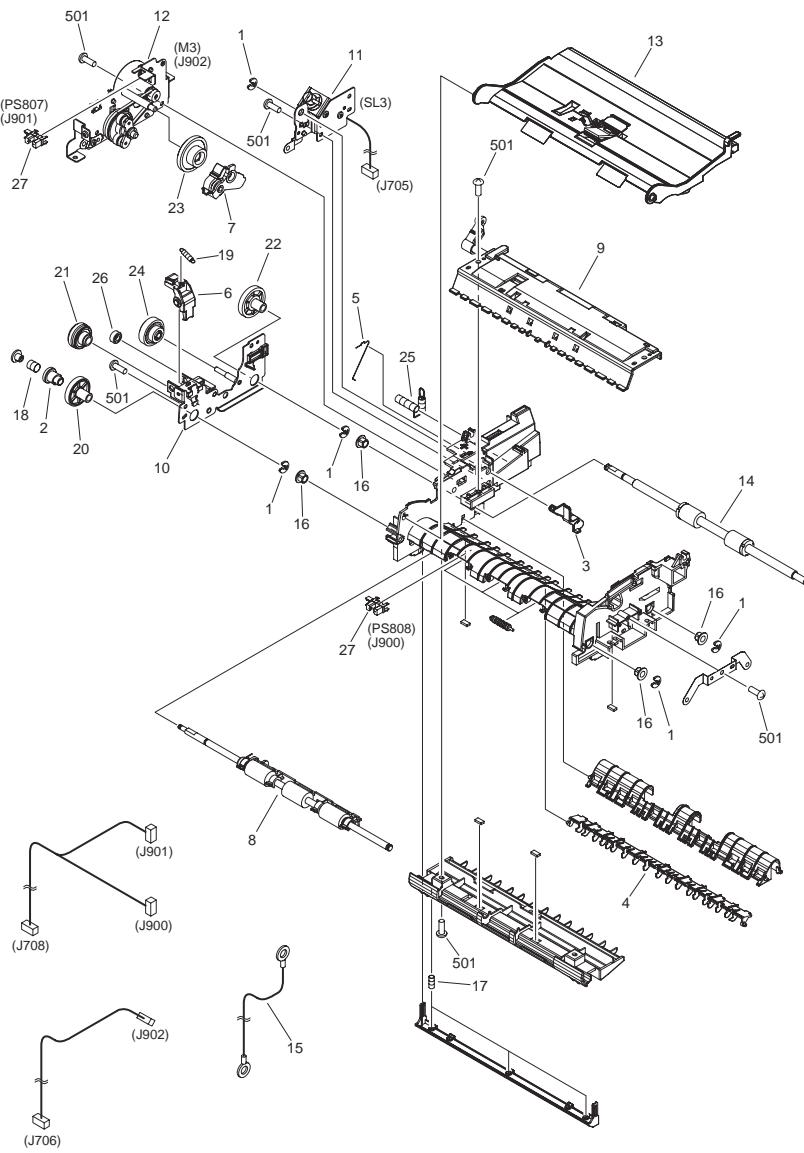


FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
Fig.162	FM3-8680-000		1	PAPER FEEDER ASSEMBLY	DADF model MF4300 Series	
Fig.162	FM3-9490-000		1	PAPER FEEDER ASSEMBLY	DADF model D400 Series	
1	FC6-5210-000		5	RETAINING RING (E-TYPE)		
2	FC7-6052-010		1	RATCHET, PAPER FEED ROLLER		
3	FC7-6182-000		1	LEVER, ROLLER RELEASE		
4	FC7-6278-000		1	FLAPPER_PAPER DELIVERY		
5	FC9-1325-000		1	SPRING,SEPARATION SWING ARM		
6	FC8-9214-000		1	LEVER, RELEASE		
7	FL3-1018-000		1	ARM, SEPARATION SWING		
8	FM3-8681-000		1	PAPER FEED ROLLER ASSEMBLY		
9	FM3-8682-000		1	PAPER DELIVERY ASS'Y		
10	FM3-8683-000		1	DRIVE PLATE ASS'Y		
11	FM3-8684-000		1	SOLENOID ASS'Y	SL3	
12	FM3-8685-000		1	MOTOR DRIVE ASS'Y	M3	
13	FM3-8686-000		1	GUIDE ASSEMBLY, UPPER	MF4300 Series	
13	FM3-9491-000		1	GUIDE ASSEMBLY, UPPER	D400 Series	
14	FM3-8690-000		1	PAPER DELIVERY ROLLER ASS'Y		
15	FM3-8733-000		1	CABLE, GROUNDING	MF4300 Series	
15	FM3-8742-000		1	CABLE, GROUNDING	D400 Series	
16	FU5-1552-000		4	BUSHING		
17	FU6-2249-000		3	SPRING, COMPRESSION		
18	FU6-2998-000		1	SPRING, COMPRESSION		
19	FU6-2999-000		1	SPRING, TENSION		
20	FU7-0668-000		1	GEAR, 54T		
21	FU7-0669-000		1	GEAR, 46T/23T		
22	FU7-0671-000		1	GEAR, 36T		
23	FU7-0676-000		1	GEAR, 21T/42T		
24	FU7-0678-000		1	GEAR, 51T/17T		
25	FU7-2021-000		1	SPRING, COMPRESSION		
26	FU7-0667-000		1	GEAR, 20T		
27	WG8-5696-000		2	PHOTO INTERRUPTER, TLP1243	PS808,PS807	

FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
501	XB4-7300-807		10	SCREW, TAPPING, BINDING HEAD		

FIGURE 310
PAPER PICK-UP ASS'Y

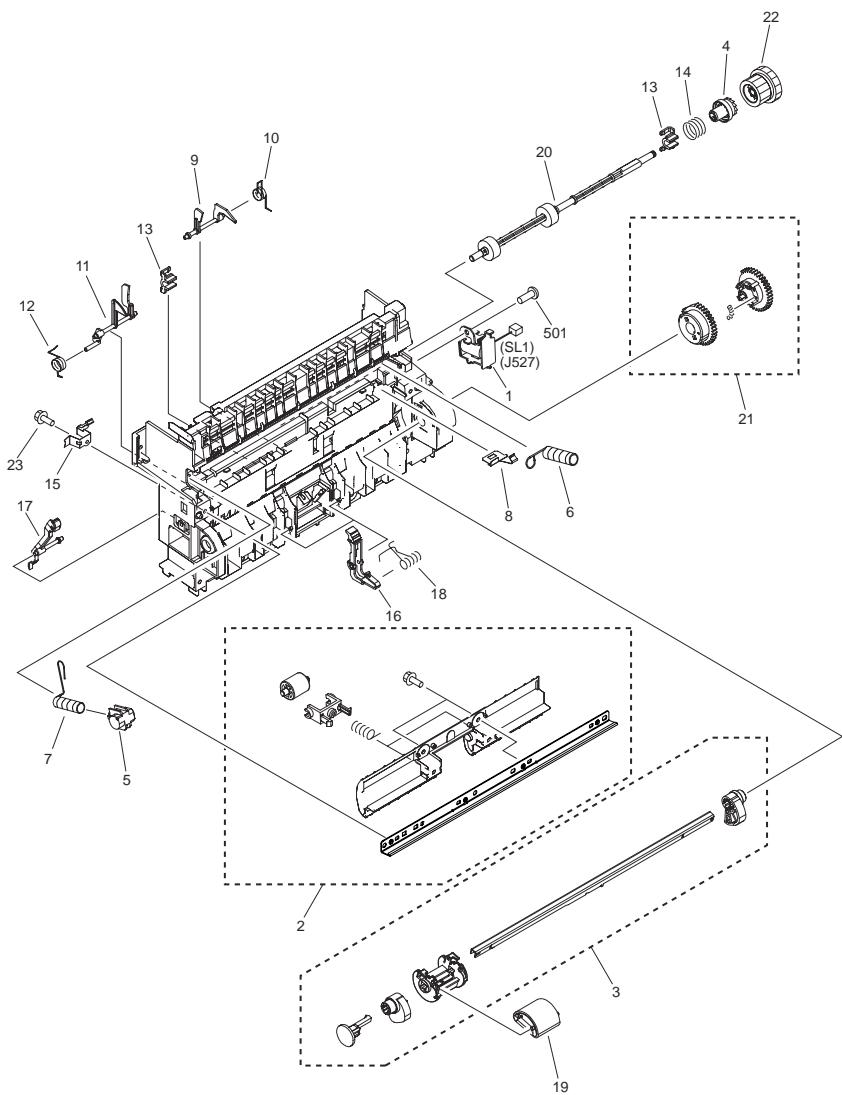


FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
Fig.310	FM2-8871-010		1	PAPER PICK-UP ASS'Y		
1	FK2-3508-000		1	SOLENOID	SL1	
2	FM2-8872-000		1	FEED CROSSMEMBER ASS'Y		
3	FM2-8911-000		1	PAPER PICK-UP SHAFT ASS'Y		
4	RC1-1960-000		1	RATCHET		
5	RC1-1990-000		1	BUSHING		
6	RC1-1993-000		1	SPRING, TORSION		
7	RC1-1994-000		1	SPRING, TORSION		
8	FC7-3823-000		1	SPRING, LEAF		
9	RC1-2040-000		1	FLAG, REGIST. SENSOR		
10	RC1-2041-000		1	SPRING, TORSION		
11	FC8-9172-000		1	FLAG, PAPER WIDTH SENSOR		
12	RC1-2043-000		1	SPRING, TORSION		
13	RC1-2044-000		2	BUSHING		
14	FU6-2255-000		1	SPRING, COMPRESSION1		
15	RC1-5550-000		1	PLATE,TRANSFER GROUNDING,FRONT		
16	RC1-5551-000		2	PAD, SUB		
17	RC1-5552-000		1	LEVER, CARTRIDGE DETECT		
18	RC1-5553-000		2	SPRING, TORSION		
19	RL1-0266-000		1	ROLLER, PICK-UP		
20	RL1-0268-000		1	ROLLER, FEED		
21	RM1-2046-000		1	PAPER PICK-UP GEAR ASS'Y		
22	RU5-0180-000		1	GEAR, 21T/29T		
23	XA9-1495-000		2	SCREW, RS, M3X6		
501	XB4-5401-009		1	SCREW, TAP, M4X10		

FIGURE 400
READER ASS'Y (ADF model)

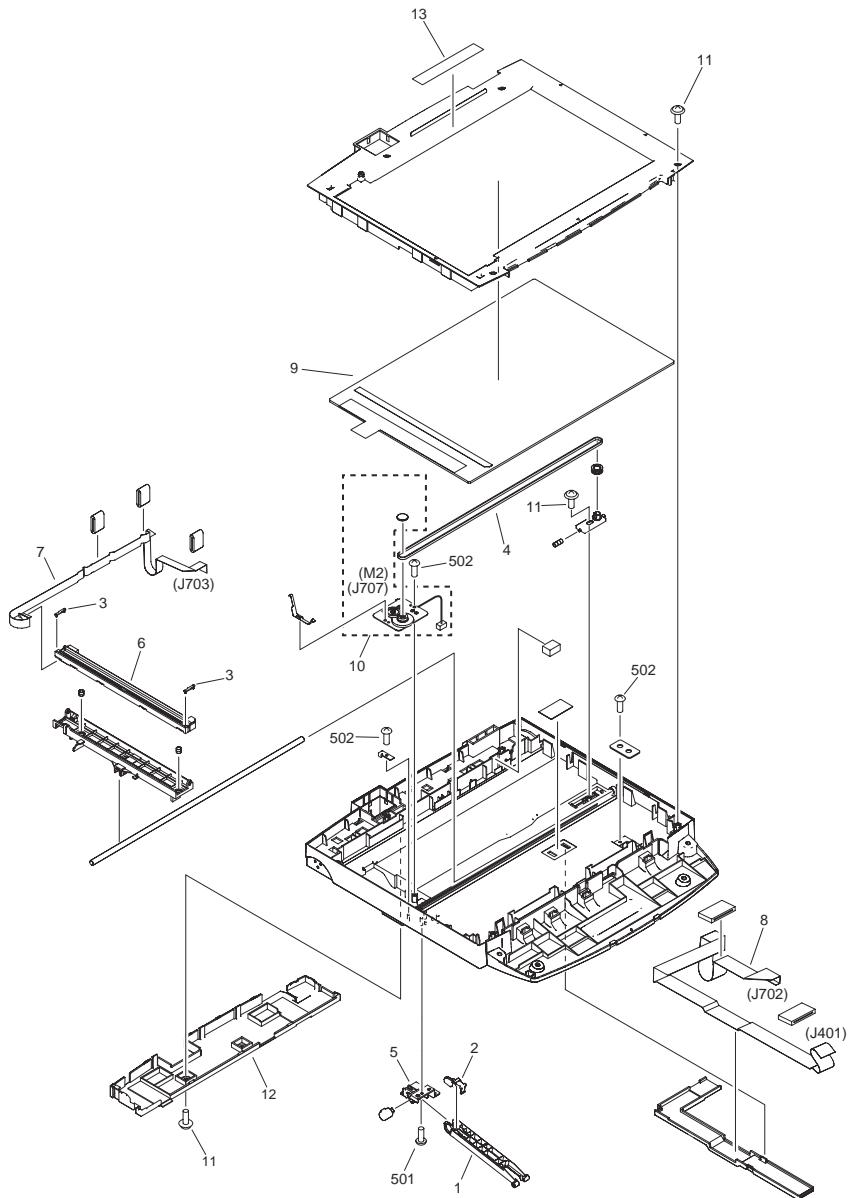


FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
Fig.400	FM3-4495-000		1	READER ASS'Y	ADF model MF4370dn,4370dnG	
Fig.400	FM3-8692-000		1	READER ASS'Y	ADF model EXCEPT MF4370dn,4370dnG	
1	FC7-3615-000		1	STAY, READER		
2	FC7-3616-000		1	RETAINER, DAMPER		
3	FC7-3623-000		2	SPACER, CIS		
4	FC7-3630-000		1	BELT, TIMING		
5	FC7-3713-000		1	HOLDER, DAMPER		
6	FK2-2869-000		1	CONTACT IMAGE SENSOR ASS'Y		
7	FK2-4642-000		1	CABLE, FLAT, SCNT-CIS		
8	FK2-3765-000		1	CABLE, FLAT, SCNT-OP		
9	FL2-8496-000		1	COPYBOARD GLASS ASS'Y		
10	FM2-8868-000		1	CIS DRIVE MOTOR ASS'Y	M2	
11	XA9-0476-000		6	SCREW,TP M3X8		
12	FC8-0657-000		1	GUIDE, CABLE	MF4370dn,4370dnG, MF4350dG,4330dG	
12	FC7-3553-000		1	GUIDE, CABLE	MF4352d,4350d, MF4330d, D440	
13	FC8-9307-000		1	LABEL, COPY PROHIBITION	EXCEPT ASIA,AU,CN,JP,KR,TW	
13	FC9-1324-000		1	LABEL, COPY PROHIBITION	ASIA,AU,CN,JP,KR,TW	
501	XB4-5401-009		4	SCREW, TAP, M4X10		
502	XB4-7300-807		3	SCREW, TAPPING, BINDING HEAD		

FIGURE 401
READER ASS'Y (COPYBOARD model)

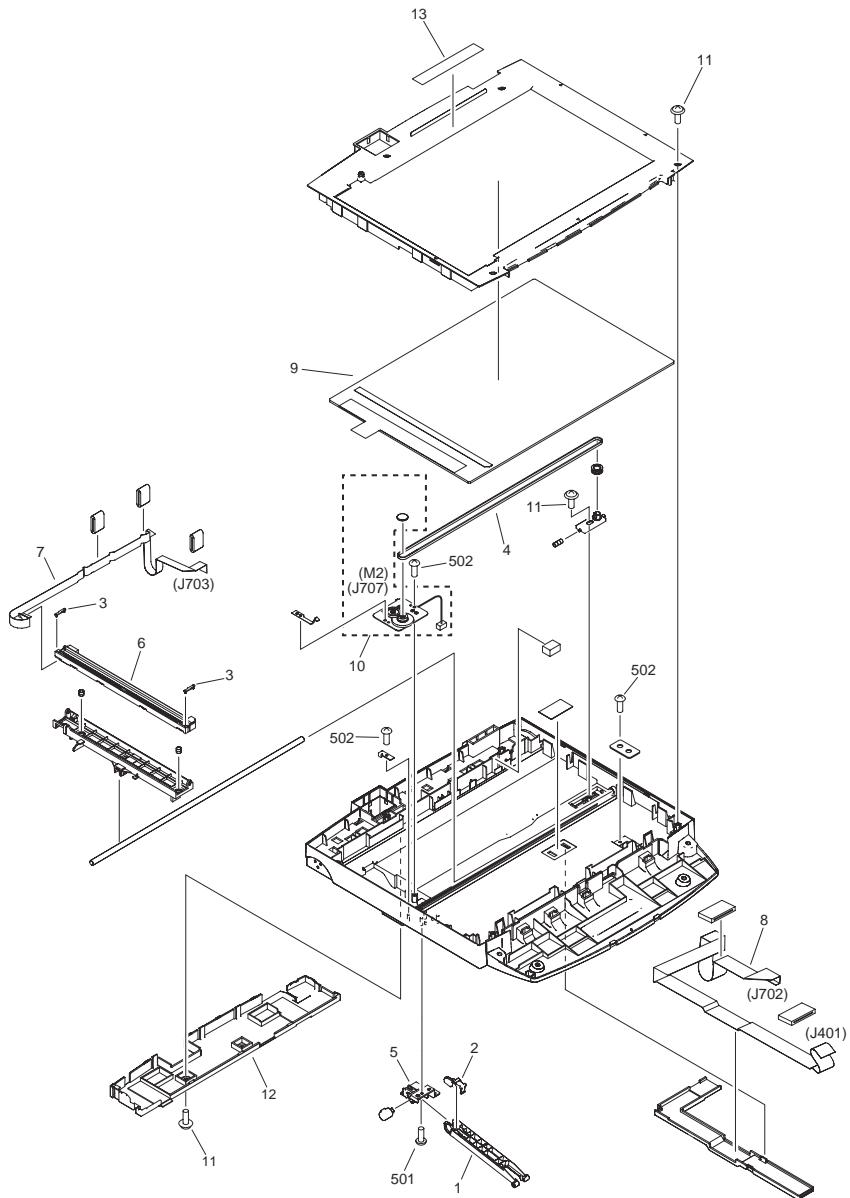


FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
Fig.401	FM3-4111-000		1	READER ASS'Y	COPYBOARD model EXCEPT MF4322dG	
Fig.401	FM3-4495-000		1	READER ASS'Y	COPYBOARD model MF4322dG	
1	FC7-3615-000		1	STAY, READER		
2	FC7-3616-000		1	RETAINER, DAMPER		
3	FC7-3623-000		2	SPACER, CIS		
4	FC7-3630-000		1	BELT, TIMING		
5	FC7-3713-000		1	HOLDER, DAMPER		
6	FK2-2869-000		1	CONTACT IMAGE SENSOR ASS'Y		
7	FK2-3764-000		1	CABLE, FLAT, SCNT-CIS		
8	FK2-3765-000		1	CABLE, FLAT, SCNT-OP		
9	FL2-5621-000		1	COPYBOARD GLASS ASS'Y		
10	FM2-8868-000		1	CIS DRIVE MOTOR ASS'Y	M2	
11	XA9-0476-000		6	SCREW,TP M3X8		
12	FC7-3553-000		1	GUIDE, CABLE	EXCEPT MF4322dG	
12	FC8-0657-000		1	GUIDE, CABLE	MF4322dG	
13	FC8-9307-000		1	LABEL, COPY PROHIBITION	EXCEPT ASIA,AU,CN,KR	
13	FC9-1324-000		1	LABEL, COPY PROHIBITION	ASIA,AU,CN,KR	
501	XB4-5401-009		4	SCREW, TAP, M4X10		
502	XB4-7300-807		3	SCREW, TAPPING, BINDING HEAD		

FIGURE 402
READER ASS'Y (DADF model)

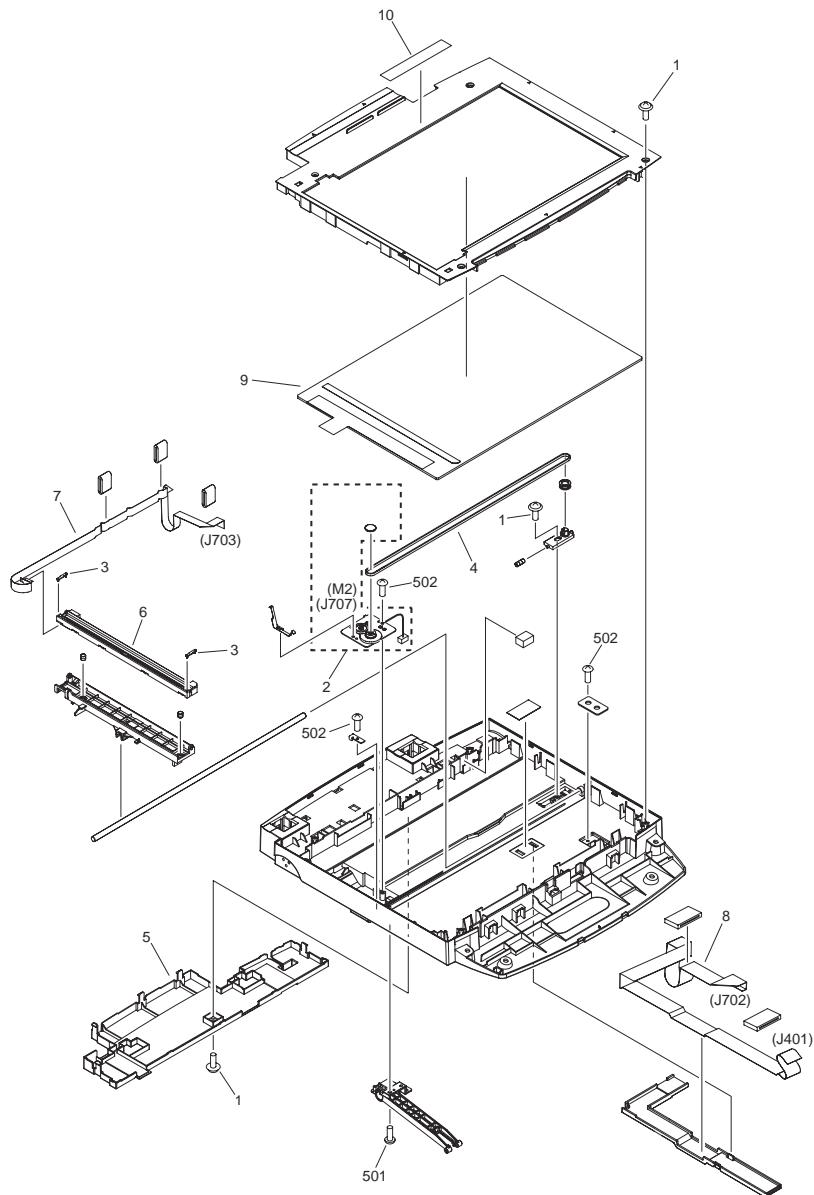


FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
Fig.402	FM3-8675-000		1	READER ASS'Y	DADF model MF4300 Series	
Fig.402	FM3-9488-000		1	READER ASS'Y	DADF model D400 Series	
1	XA9-0476-000		6	SCREW,TP M3X8		
2	FM3-8688-000		1	CIS DRIVE MOTOR ASS'Y	M2	
3	FC7-3623-000		2	SPACER, CIS		
4	FC7-3630-000		1	BELT, TIMING		
5	FC8-9239-000		1	GUIDE, CABLE	MF4300 Series	
5	FC9-1270-000		1	GUIDE, CABLE	D400 Series	
6	FK2-2869-000		1	CONTACT IMAGE SENSOR ASS'Y		
7	FK2-4642-000		1	CABLE, FLAT, SCNT-CIS		
8	FK2-3765-000		1	CABLE, FLAT, SCNT-OP		
9	FL2-8496-000		1	COPYBOARD GLASS ASS'Y		
10	FC8-9307-000		1	LABEL, COPY PROHIBITION	EXCEPT ASIA,AU,JP,KR	
10	FC9-1324-000		1	LABEL, COPY PROHIBITION	ASIA,AU,JP,KR	
501	XB4-5401-009		4	SCREW, TAP, M4X10		
502	XB4-7300-807		3	SCREW, TAPPING, BINDING HEAD		

FIGURE 810
FIXING ASS'Y

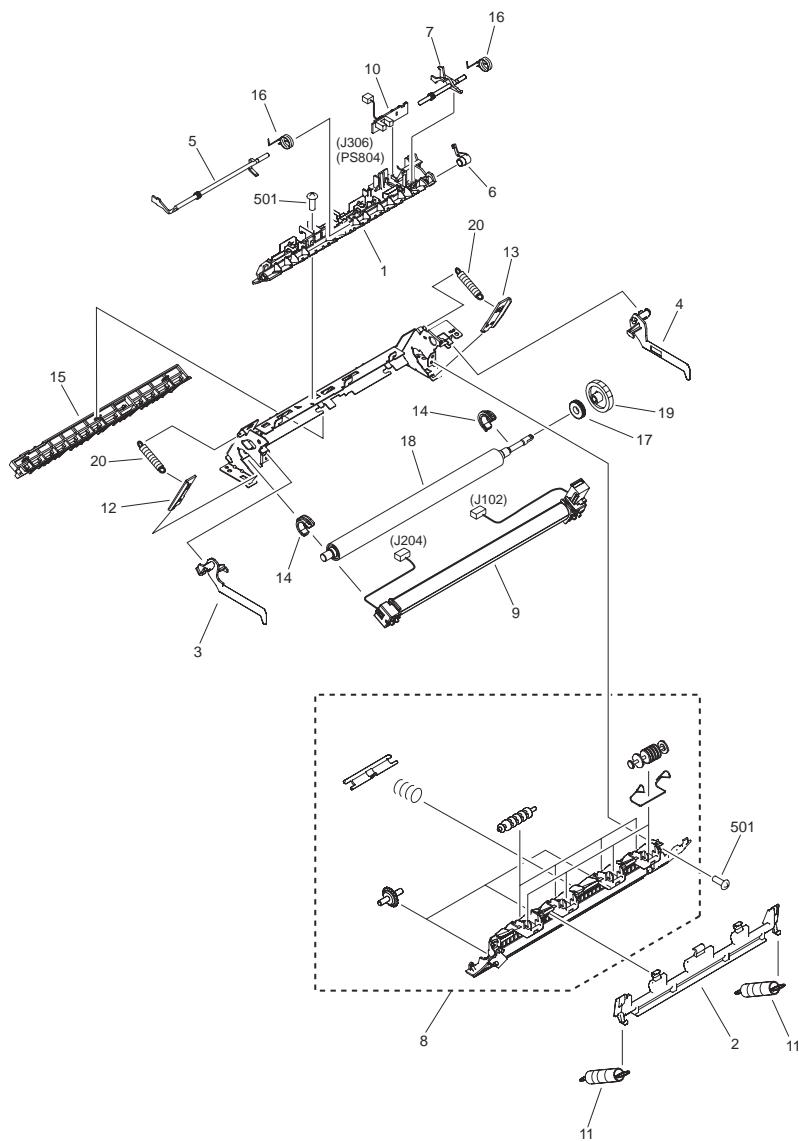


FIGURE & KEY NO.	PARTS NUMBER	R A N K	Q'TY	DESCRIPTION	SERIAL NUMBER/ REMARKS	S V C
Fig.810	FM2-8890-000		1	FIXING ASS'Y	100V MF4300 Series	
Fig.810	FM2-8891-000		1	FIXING ASS'Y	120V MF4300 Series	
Fig.810	FM2-8892-000		1	FIXING ASS'Y	230V MF4300 Series	
Fig.810	FM4-1998-000		1	FIXING ASS'Y	100V D400 Series	
Fig.810	FM3-9496-000		1	FIXING ASS'Y	120V D400 Series	
Fig.810	FM3-9497-000		1	FIXING ASS'Y	230V D400 Series	
1	FC7-3557-000		1	GUIDE, SEPARATION		
2	FC7-3641-010		1	GUIDE, ENTRANCE	MF4300 Series	
2	FC9-1293-000		1	GUIDE, ENTRANCE	D400 Series	
3	FC7-3642-000		1	LEVER, PRESSURE RELEASE, LEFT		
4	FC7-3643-000		1	LEVER, PRESSURE RELEASE, RIGHT		
5	FC7-3644-000		1	FLAG, PAPER DELIVERY SENSOR		
6	FC7-3645-000		1	BUSHING		
7	FC7-3652-000		1	FLAG, PAPER WIDTH SENSOR		
8	FM2-8885-000		1	FIXING COVER UNIT		
9	FM2-8917-000		1	FIXING FILM ASS'Y	100V	
9	FM2-8915-000		1	FIXING FILM ASS'Y	120V	
9	FM2-8916-000		1	FIXING FILM ASS'Y	230V	
10	FM3-0255-000		1	SENSOR PCB ASS'Y	PS804	
11	FU6-2875-000		2	SPRING, TENSION		
12	FC7-3826-000		1	PLATE, PRESSURE, LEFT		
13	FC7-3825-000		1	PLATE, PRESSURE, RIGHT		
14	RC1-2079-000		2	BUSHING		
15	RC1-2097-000		1	GUIDE, ENTRANCE		
16	RC1-2098-000		2	SPRING, TORSION		
17	RC1-2139-000		1	BUSHING		
19	RU5-0523-000		1	GEAR, 37T		
20	RU5-2178-000		2	SPRING, TENSION		
501	XB2-8300-609		3	SCREW, RS, M3X6		

Canon