





**Account settings**

Account name:

Caller ID:

**Credentials**

Enter your SIP account credentials

Extension:

ID:

Password:

**My location**

Specify the IP of your PBX/SIP server

I am in the office - local IP  of PBX

I am out of the office - external IP  of PBX

Use 3CX Tunnel

Eliminates firewall configuration. Requires 3CX Phone System for Windows

Local IP of remote PBX:

Tunnel password:  Port:



Use Outbound Proxy server

Required by some VoIP Providers. Specify IP or name.

Perform provisioning from following URL:


Advanced settings    OK    Cancel

**INSTALACION DEL ZOIPER:**

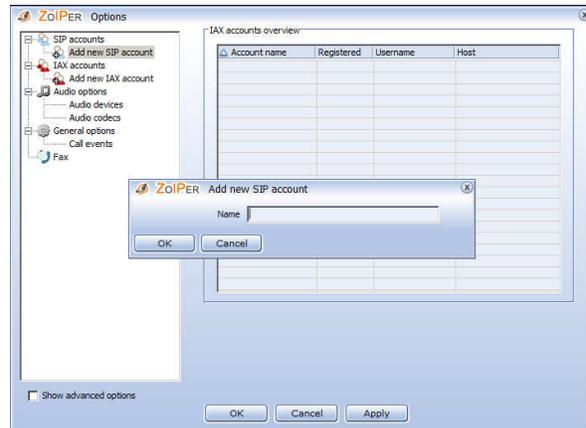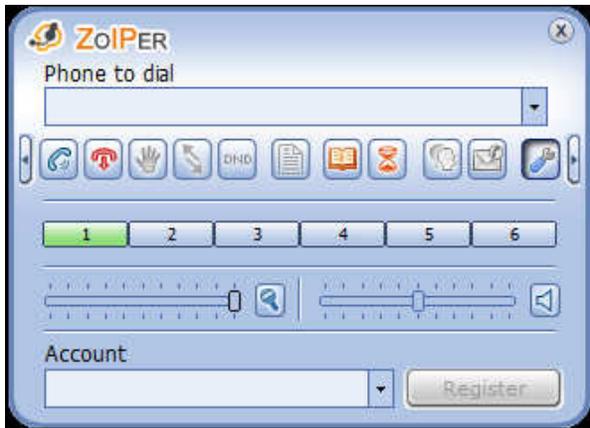



**TEMA NO. 6 PRÁCTICA No. 2**

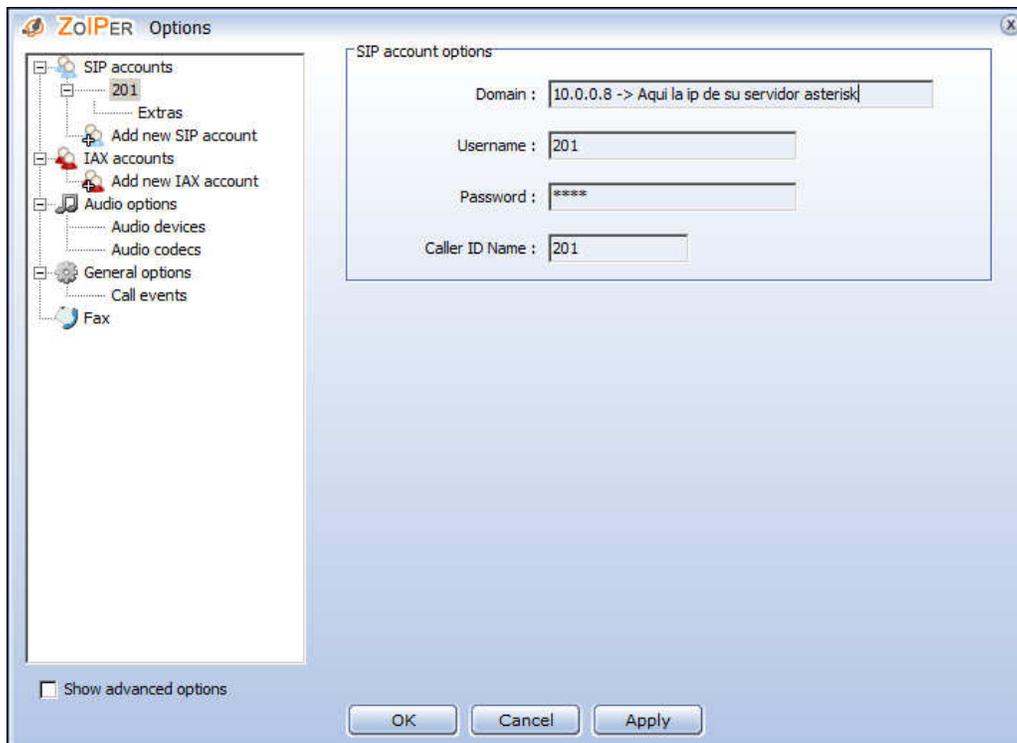



## **TEMA NO. 6 PRÁCTICA No. 2**

### **COMPROBACION DE LA PRÁCTICA:**

- **ENTRAR A LA CONSOLA DE ASTERISK EJECUTANDO: *ASTERISK -R* DESDE EL PROMPT DE LINUX. UNA VES EN LA CONSOLA VEREMOS QUE EL PROMPT CAMBIA A: localhost\*CLI>.**
- **VERIFICAMOS QUE LOS TELEFONOS VIRTUALES SE HAYAN REGISTRADO EN LA PBX CORRECTAMENTE EJECUTANDO LA INSTRUCCIÓN: localhost\*CLI> *SIP SHOW PEERS*. LA SALIDA DE ESTE COMANDO DEBE INDICAR QUE TIENE 2 TELEFONOS SIP REGISTRADOS "ONLINE"**
- **SALIMOS DE LA CONSOLA DE ASTERISK EJECUTANDO EL COMANDO "EXIT": localhost\*CLI>*EXIT*.**
- **NOTA: MIENTRAS NO SE COMPLETE EL DIAL PLAN, ARCHIVO EXTENSION.CONF, NO PODRA HACER LLAMADAS ENTRE LAS EXTENSIONES.**